


Amstrad

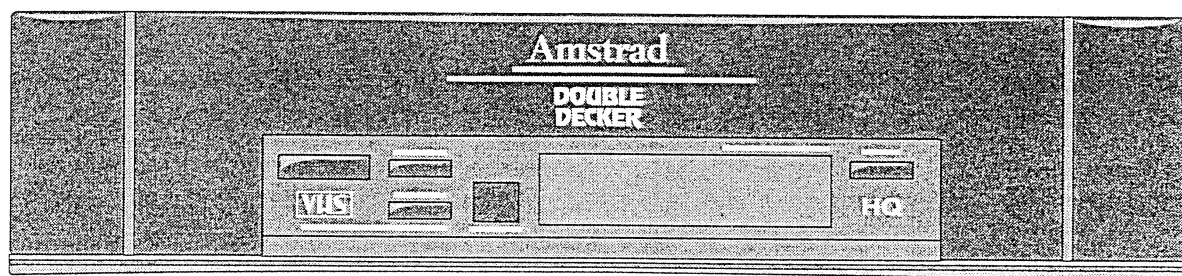

DD9901

PROGRAMMABLE DOUBLE VIDEO CASSETTE RECORDER

SERVICE MANUAL

SPECIFICATIONS

Test Item	Mode	Condition	Unit	Nominal
1. VIDEO				
1-1 Output	SP	R/P	Vp-p	1.0
1-2 S/N Luminance	SP	R/P	dB	44
1-3 S/N Chroma AM (PAL)	SP	R/P	dB	38
1-4 S/N Chroma PM (PAL)	SP	R/P	dB	36
1-5 S/N Chroma (SECAM)	SP	R/P	dB	38
1-6 Resolution	SP	PB	Line	220
2. SERVO				
2-1 Wow & Flutter RMS	SP	R/P	%	0.25
2-2 Jitter Low	SP	PB	μsec	0.05
3. AUDIO				
3-1 Output	SP	R/P	dBv	-6
3-2 S/N	SP	R/P	dB	40
3-3 Distortion	SP	R/P	%	1.5
3-4 Freq. resp. 200Hz 6kHz (-20dB ref. 400Hz)	SP	R/P	dB	0
	SP	R/P	dB	0
4. TUNER				
4-1 Channel range				
VHF Low SECAM L	E-E		ch	FB~FC
PAL B/G	E-E		ch	E2~S1
VHF High SECAM L	E-E		ch	F1~Q
PAL B/G	E-E		ch	E5~S20
UHF SECAM L/PAL B/G	E-E		ch	E21~E69
4-2 Video Output	E-E		Vp-p	1.0
4-3 Video S/N	E-E		dB	43
4-4 Audio Output	E-E		dBv	-6
4-5 Audio S/N	E-E		dB	40

*SECAM FA ch.....Not guarantee at performance.

Note: Test Conditions

Temperature 20~25°C

Humidity 40~60%

Note:

- 1] Nominal specifications represent the design specifications. All units should be able to approximate these-some will exceed and some may drop slightly below these specifications. Limit specifications represent the absolute worst condition that still might be considered acceptable; in no case should a unit fail to meet limit specifications.

IMPORTANT SAFETY PRECAUTIONS

Prior to shipment from the factory, our products are strictly inspected for recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

Product Safety Notice

Some electrical and mechanical parts have special safety-related characteristics which are often not evident from visual inspection, nor can the protection they give necessarily be obtained by replacing them with components rated for higher voltage, wattage, etc. Parts that have special safety characteristics are identified by a (\triangle) on schematics and in parts lists. Use of a substitute replacement that does not have the same safety characteristics as the recommended replacement part might create shock, fire, and/or

other hazards. The Product's Safety is under review continuously and new instructions are issued whenever appropriate. Prior to shipment from the factory, our products are strictly inspected to confirm with the recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

Precautions during Servicing

- A. Parts identified by the (\triangle) symbol are critical for safety.
Replace only with part number specified.
- B. In addition to safety, other parts and assemblies are specified for conformance with regulations applying to spurious radiation. These must also be replaced only with specified replacements.
Examples: RF converters, RF cables, noise blocking capacitors, and noise blocking filters, etc.
- C. Use specified internal wiring. Note especially:
 - 1) Wires covered with PVC tubing
 - 2) Double insulated wires
 - 3) High voltage leads
- D. Use specified insulating materials for hazardous live parts. Note especially:
 - 1) Insulation tape
 - 2) PVC tubing
 - 3) Spacers
 - 4) Insulators for transistors.
- E. When replacing AC primary side components (transformers, power cord, etc.), wrap ends of wires securely about the terminals before soldering.
- F. Observe that the wires do not contact heat producing parts (heatsinks, oxide metal film resistors, fusible resistors, etc.).
- G. Check that replaced wires do not contact sharp edges or pointed parts.
- H. When a power cord has been replaced, check that 10-15 kg of force in any direction will not loosen it.
- I. Also check areas surrounding repaired locations.
- J. Use care that foreign objects (screws, solder droplets, etc.) do not remain inside the set.
- K. Crimp type wire connector
The power transformer uses crimp type connectors which connect the power cord and the primary side of the transformer. When replacing the transformer, follow these steps carefully and precisely to prevent shock hazards.
Replacement procedure
 - 1) Remove the old connector by cutting the wires at a point close to the connector.**Important:** Do not re-use a connector. (Discard it.)
 - 2) Strip about 15 mm of the insulation from the ends of the wires. If the wires are stranded, twist the strands to avoid frayed conductors.
 - 3) Align the lengths of the wires to be connected. Insert the wires fully into the connector.
 - 4) Use the crimping tool to crimp the metal sleeve at its center. Be sure to crimp fully to the complete closure of the tool.
- L. When connecting or disconnecting the internal connectors, first, disconnect the AC plug from the AC outlet.

Safety Check after Servicing

Examine the area surrounding the repaired location for damage or deterioration. Observe that screws, parts, and wires have been returned to their original positions. Afterwards, do the following tests and confirm the specified values to verify compliance with safety standards.

1. Clearance Distance

When replacing primary circuit components, confirm specified clearance distance (d) and (d') between soldered terminals, and between terminals and surrounding metallic parts. (See Fig. 1)

Table 1 : Ratings for selected area

AC Line Voltage	Region	Clearance Distance (d) (d')
200 to 240 V	Europe	$\geq 4\text{mm}$ (d)
	Australia	$\geq 6\text{mm}$ (d')

Note: This table is unofficial and for reference only. Be sure to confirm the precise values.

2. Leakage Current Test

Confirm specified (or lower) leakage current between B (earth ground, power cord plug prongs) and externally exposed accessible parts (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.).

Measuring Method (Power ON) :

Insert load Z between B (earth ground, power cord plug prongs) and exposed accessible parts. Use an AC voltmeter to measure across the terminals of load Z . See Fig. 2 and the following table.

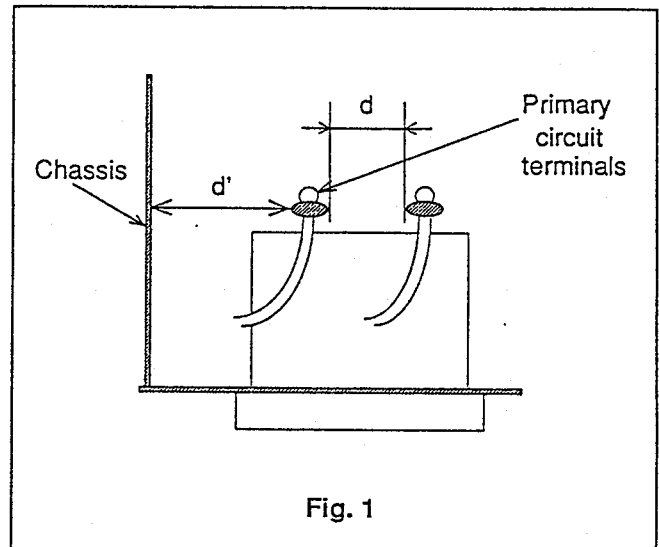


Fig. 1

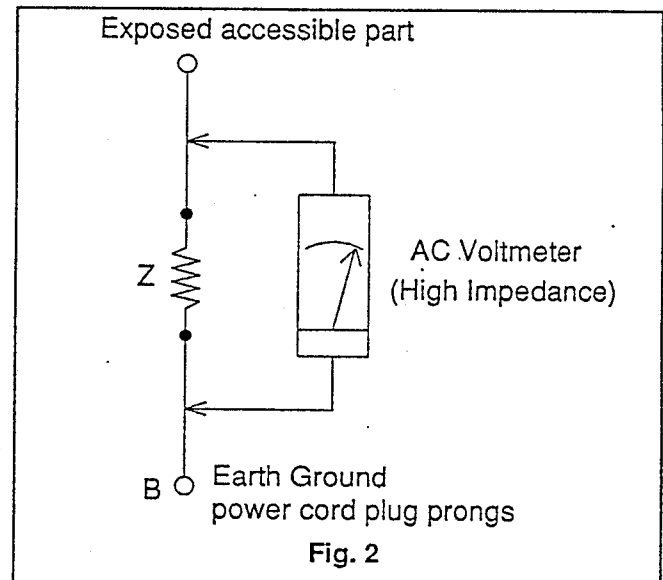


Fig. 2

Table 2 : Leakage current ratings for selected areas


AC Line Voltage	Region	Load Z	Leakage Current (i)	Earth Ground (B) to:
200 to 240 V	Europe Australia	2k Ω RES. in connected	1 \leq 0.7mA Peak 1 \leq 2mA dc	Antenna terminals
		50k Ω RES. in connected	1 \leq 0.7mA Peak 1 \leq 2mA dc	Other terminals

Note: This table is unofficial and for reference only. Be sure to confirm the precise values.

STANDARD NOTES FOR SERVICING


Circuit Board Indications

- The output pin of the 3 pin Regulator ICs is indicated as shown:
- For other ICs, pin 1 and every fifth pin are indicated as shown:
- The 1st pin of every pin connector is indicated as shown:

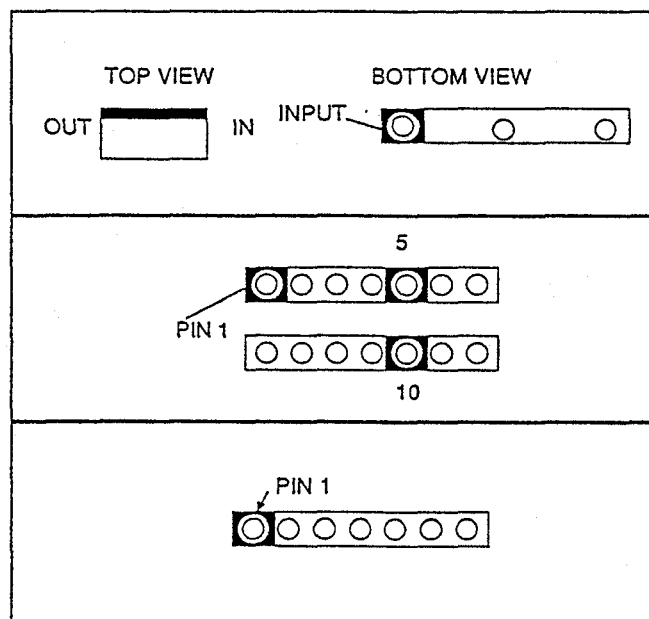

Instructions for Connectors


- When you connect or disconnect FFC cable (connector), be sure to disconnect the AC cord.
- FFC cable (connector) should be inserted parallel into the connector, not at an angle.

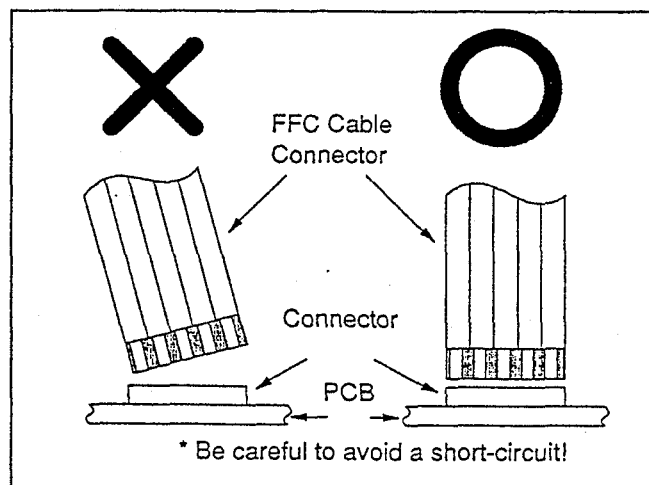

How to Read the Values of the Rectangular Type Chip Components

EXAMPLE:

 (a) Resistor

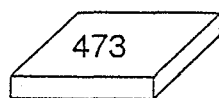

= 473 = 47 [kΩ]

(Top View)

(b) Capacitor



= Not Shown

(Top View)

CAUTION:

Once chip parts (Resistors, Capacitors, Transistors, etc.) are removed, they must not be reused. Always use a new part.

Replacement Procedures for Leadless (Chip) Components

The following procedures are recommended for the replacement of the leadless components used in this unit.

1. Preparation for replacement

a. Soldering iron

Use a pencil-type soldering iron (less than 30 watts).

b. Solder

Eutectic solder (Tin 63%, Lead 37%) is recommended.

c. Soldering time

Do not apply heat for more than 4 seconds.

d. Preheating

Leadless capacitors must be preheated before installation.

(266°F-302°F, 130°C-150°C, for about two minutes.)

Note:

- Leadless components must not be reused after removal.
- Excessive mechanical stress and rubbing of the component electrode must be avoided.

2. Removing the leadless component

Grasp the leadless component body with tweezers and alternately apply heat to both electrodes. When the solder on both electrodes has melted, remove the leadless component with a twisting motion.



Note:

- Do not attempt to lift the component off the board until the component is completely disconnected from the board by the twisting action.
- Be careful not to break the copper foil on the printed circuit board.

3. Installing the leadless component

- Presolder the contact points of the circuit board.
- Press the part downward with tweezers and solder both electrodes as shown below.

Note: Do not glue the replacement leadless component to the circuit board.

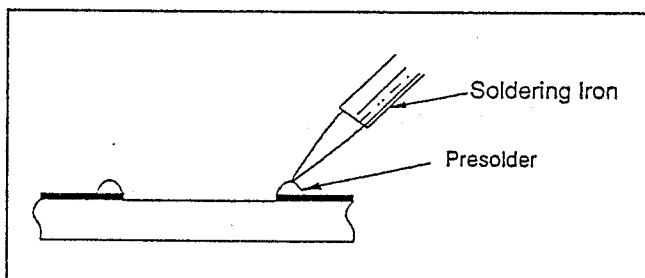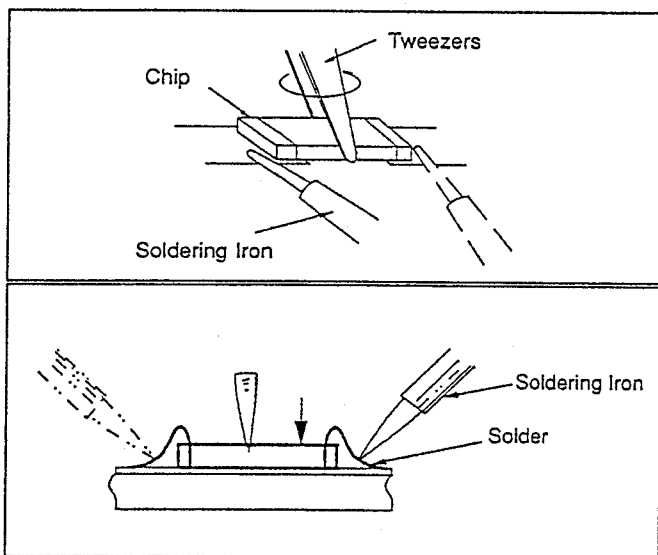

How to Remove/Install Flat Pack IC

1. Removal

With Hot-Air Flat Pack-IC Desoldering Machine:

- Prepare the hot-air flat pack-IC desoldering machine, then apply hot air to the flat pack-IC (about 5 to 6 seconds). (Fig. S-1-1)
- Remove the flat pack-IC with tweezers while applying the hot air.

Caution:

- Do not supply the hot air to the chip parts around the flat pack-IC for over 6 seconds because dam-

age to the chip parts may occur. Put masking tape around the flat pack-IC to protect other parts from damage. (Fig. S-1-2).

- The flat pack-IC on the PCB is affixed with glue, so be careful not to break and don't let damage the foil of each pin and don't let solder land under the IC when removing it.

With Soldering Iron:

- (1) Using desoldering braid, remove the solder from all pins of the flat pack-IC. When you use solder flux which is applied to all pins of the flat pack-IC, you can remove it easily. (Fig. S-1-3)
- (2) Lift each lead of the flat pack-IC upward one by one, using a sharp pin or wire to which solder will not adhere (iron wire). When heating the pins, use a fine tip soldering iron or a hot air desoldering machine. (Fig. S-1-4)

With Iron Wire:






- (1) Using desoldering braid, remove the solder from all pins of the flat pack-IC. When you use solder flux which is applied to all pins of the flat pack-IC, you can remove it easily. (Fig. S-1-3)
- (2) Affix the wire to a workbench or solid mounting point, as shown in Fig. S-1-5.
- (3) While heating the pins using a fine tip soldering iron or hot air blower, pull up on the wire as the solder melts so as to lift the IC leads from the PCB contact pads.

Note:

When using a soldering iron, care must be taken to ensure that the flat pack-IC is not being held by glue or, when it is removed from the PCB, it may be damaged if excessive force is applied.

2. Installation



- (1) Using desoldering braid, remove the solder from the foil of each pin of the flat pack-IC on the PCB, so you can install a replacement flat pack-IC more easily.

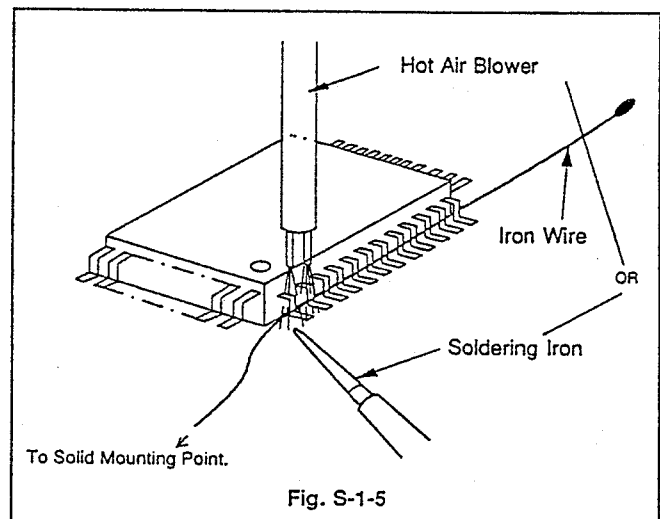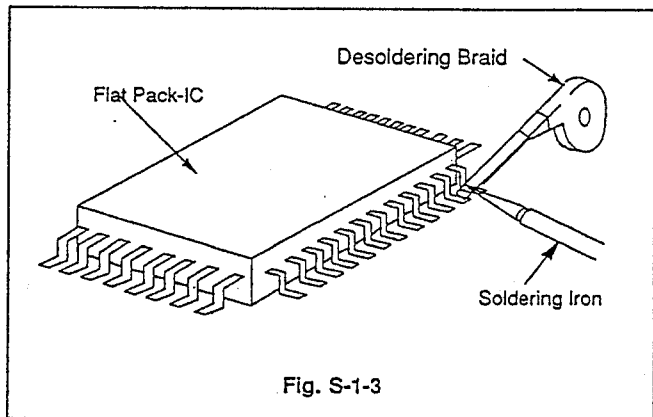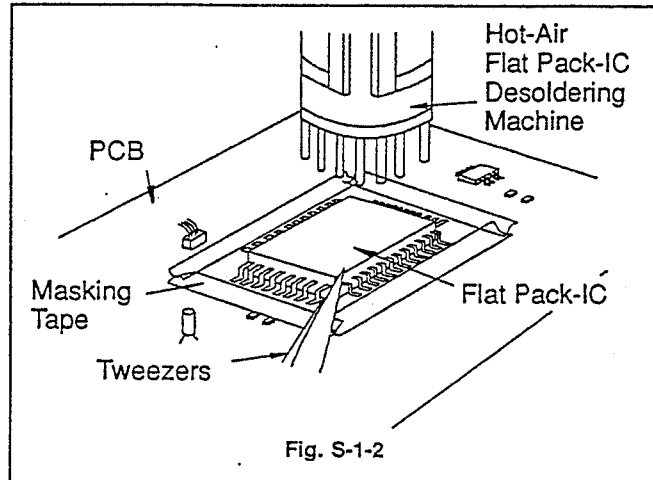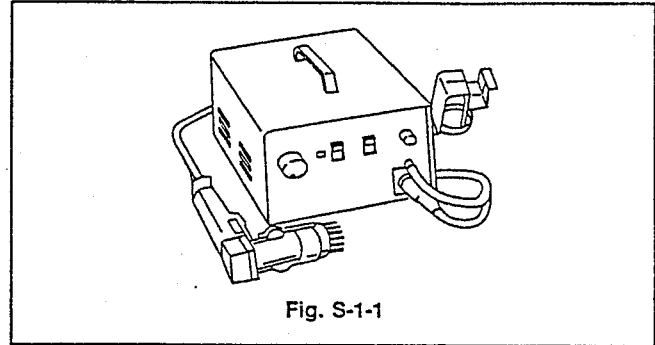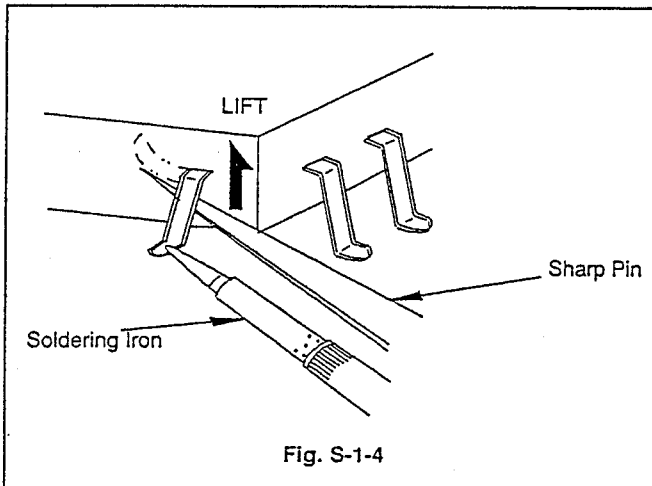

(2) The "●" mark on the flat pack-IC indicates pin 1. (See Fig. S-1-6) Be sure this mark matches the 1 on the PCB when positioning for installation. Then pre-

solder the four corners of the flat pack-IC (See Fig. S-1-7).

(3) Solder all pins of the flat pack-IC. Make sure that none of the pins have solder bridges.

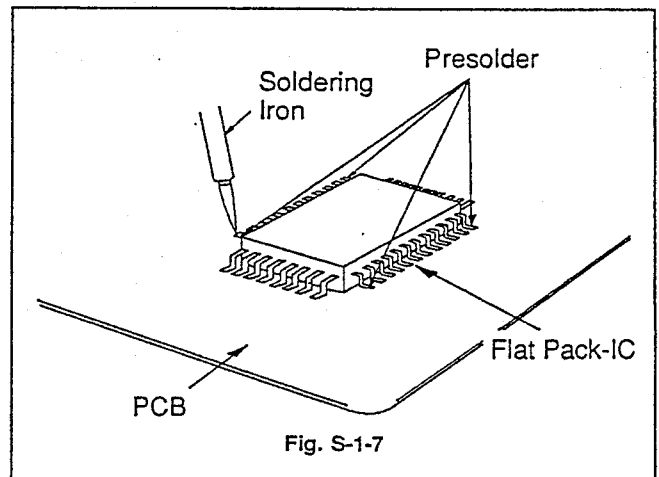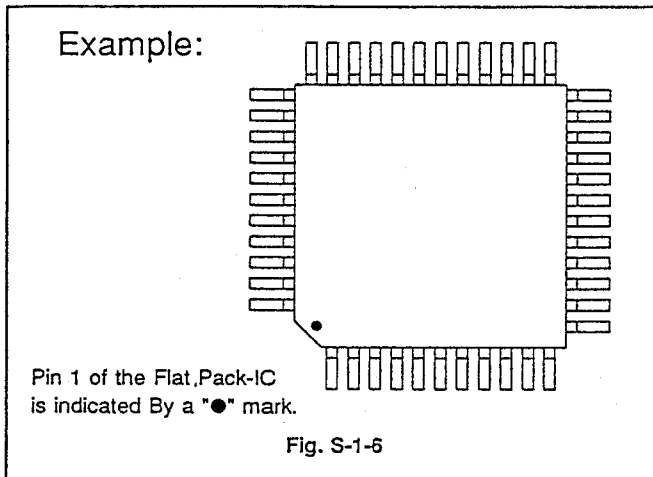

Instructions for Handling Semiconductors

Electrostatic breakdown of the semiconductors may occur due to a potential difference caused by electrostatic charge during unpacking or repair work.


Ground for Human Body

Be sure to wear a grounding band (1M ohm) that is properly grounded to remove any static electricity that may be charged on the body.


Ground for Workbench

Be sure to place a conductive sheet or copper plate with proper grounding (1M ohm) on the workbench or other surface, where the semiconductors are to be placed. Because the static electricity charge on clothing will not escape through the body grounding band, be careful to avoid contacting semiconductors to your clothing.

INCORRECT

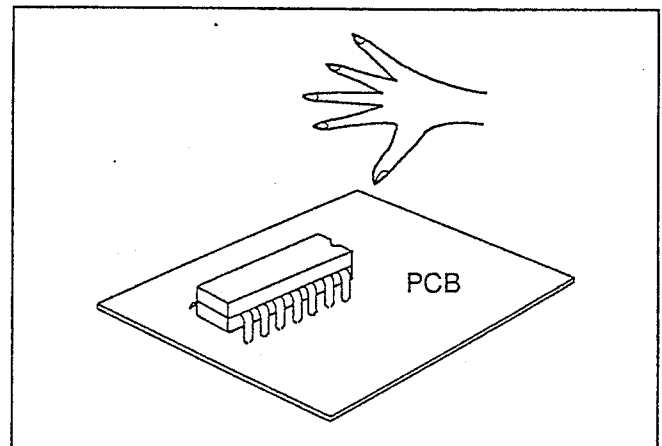

CORRECT

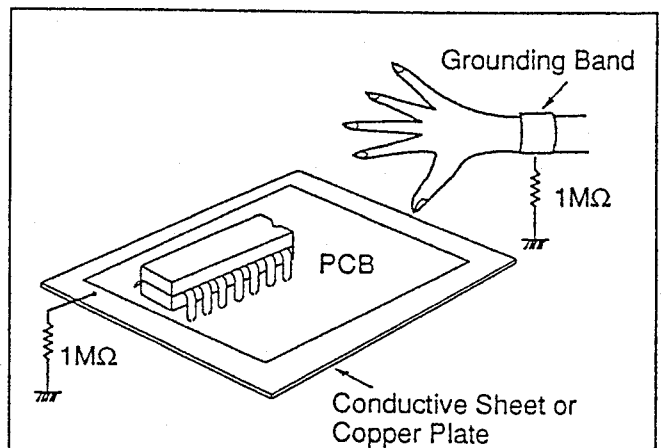

PREPARATION FOR SERVICING

NOTE:

This chassis have optical tape sensor system.

When the cabinet is removed, unit may move unexpectedly.

To avoid this, follow the steps below.

PREPARATION:

1] When not insert the tape, to press Tracking Up and Down buttons together 10 seconds.

After this operation, Tape Start and End Sensor become inactive.


And cassette indicator on the display blinks.

CAUTION:

In this mode, Tape Start and End Sensor are inactive, so do not run the Start and End of Tape.


2] To exit from this mode, disconnect the AC plug.

— FRONT VIEW —

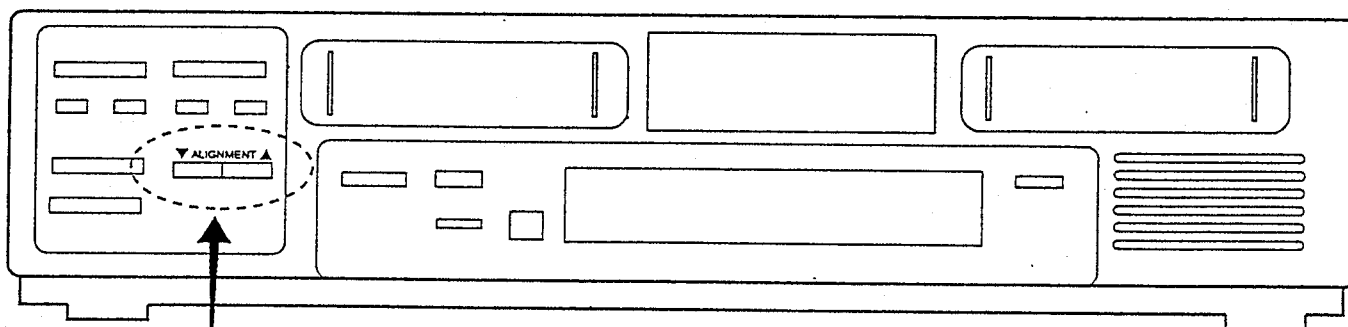

Tracking Up and Down buttons


— DIGITAL DISPLAY —

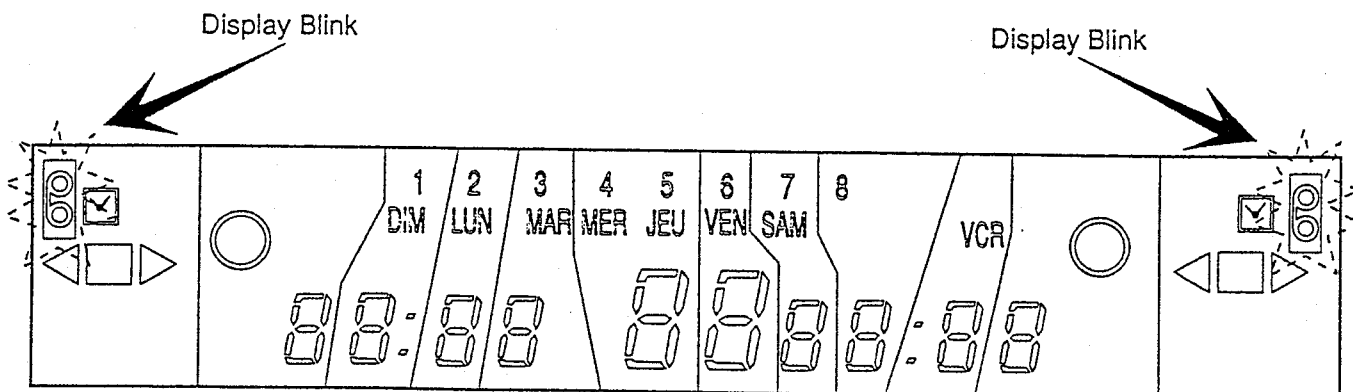

DISASSEMBLY INSTRUCTIONS (CABINET)

1. Disassembly Flow Chart

This flow chart indicates the disassembly steps of the cabinet parts, VCR Unit and the P.C. Boards in order to gain access to item(s) to be serviced. When reassembling, perform the steps(s) in the reverse order. Bend, route and dress the cables as they were originally.

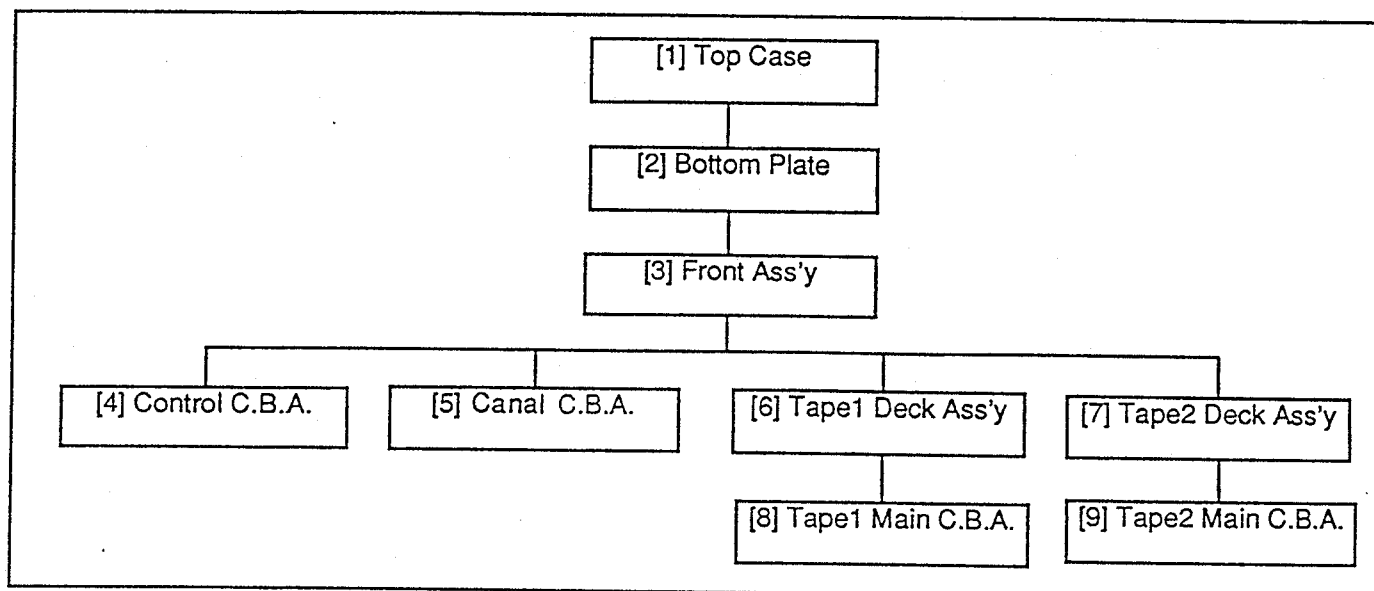

2. Disassembly Method

STEP/ LOC. No.	PART	REMOVAL		
		Fig.No.	REMOVE/*UNLOCK/RELEASE/UNPLUG/UNCLAMP/ DESOLDER	Note
[1]	Top Case	Fig. 1	5(S-1)	1
[2]	Bottom Plate	Fig. 2	7(S-2), 2(L-1)	2
[3]	Front Ass'y	Fig. 3	2(S-3), 9(L-2)	3
[4]	Control C.B.A.	Fig. 4	5(L-3), *(CN5001, CN5002, CN5003, CN5004)	4
[5]	Canal C.B.A.	Fig. 5	2(S-4), *(CN1, CN2, CN3, CN4)	5
[6]	Tape1 Deck Ass'y	Fig. 5	3(S-5), 2(S-6), 3(S-7), Support Angle, *(CN3201, CN4001)	6
[7]	Tape2 Deck Ass'y	Fig. 5	(S-8), 3(S-9), *(CN3301, CN4101)	7
[8]	Tape1 Main C.B.A.	Fig. 6	(S-10), *4(L-4)	8
[9]	Tape2 Main C.B.A.	Fig. 6	(S-11), *3(L-5)	9

①: Order of steps in Procedure

When reassembling, perform the step(s) in the reverse order.

These numbers are also used as the identification(location) No. of parts in Figures.

②: Part to be removed or installed.

③: Fig. No. showing Procedure of Part Location.

④: Identification of part to be removed, unlocked, released.

S=Screw L=Locking Tab CN=Connector *=Unlock

⑤: Installing Information.

Reference <Note> in Table

1. Top Case Removal. (Fig. 1)
 - 1) Remove 5 Screws (S-1).
2. Bottom Plate Removal. (Fig. 2)
 - 1) Remove 7 Screws (S-2).
 - 2) Slide the Bottom Plate in the direction of the arrow mark while pushing 2 Locking Tabs (L-1).
3. Front Ass'y Removal. (Fig. 3)
 - 1) Remove 2 Screws (S-3)
 - 2) Release 9 Locking Tabs (L-2).
4. Control C.B.A. Removal. (Fig. 4)
 - 1) Release 5 Locking Tabs (L-3).
 - 2) Disconnect the Connectors (CN5001, CN5002, CN5003, CN5004).
5. Canal C.B.A. (Fig. 5)
 - 1) Disconnect the Connectors (CN1, CN2, CN3, CN4).
 - 2) Remove 2 Screws (S-4).
6. Tape1 Deck Ass'y Removal. (Fig. 5)
 - 1) Remove 3 Screws (S-5), remove the Support Angle.
 - 2) Remove 2 Screws (S-6) and 3 Screws (S-7).
 - 3) Disconnect the Connectors (CN3201, CN4001), then lift up the Tape1 Deck Ass'y.
7. Tape2 Deck Ass'y Removal. (Fig. 5)
 - 1) If not already removed, remove the Support Angle.
 - 2) Remove Screw (S-8) and 3 Screws (S-9).
 - 3) Disconnect the Connectors (CN3301, CN4101), then lift up the Tape2 Deck Ass'y.
8. Tape1 Main C.B.A. Removal. (Fig. 6)
 - 1) Remove Screw (S-10).
 - 2) Then clear the 4 Locking Tabs (L-4) by lifting it up from the chassis frame.
9. Tape2 Main C.B.A. Removal. (Fig. 6)
 - 1) Remove Screw (S-11).
 - 2) Then clear the 3 Locking Tabs (L-5) by lifting it up from the chassis frame.

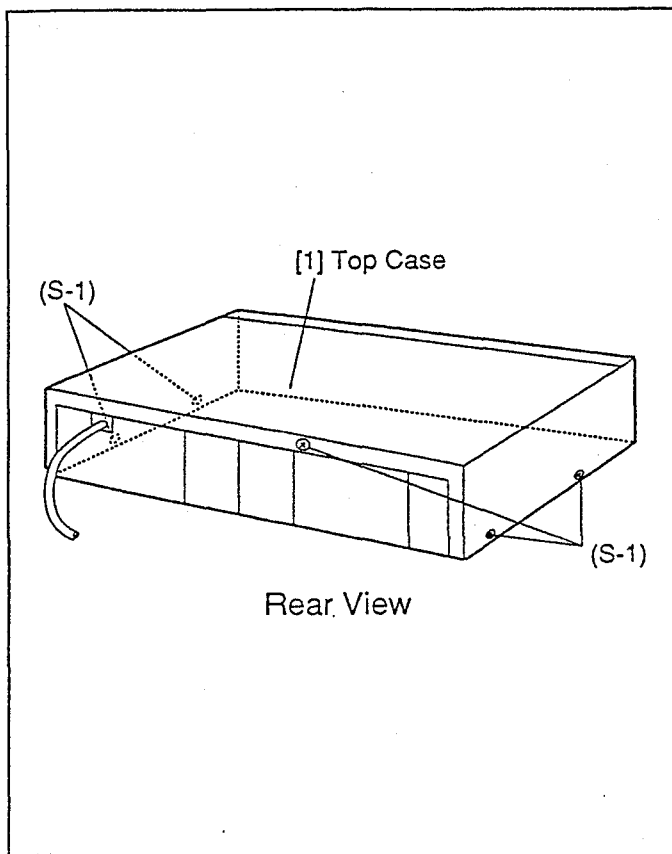


Fig. 1

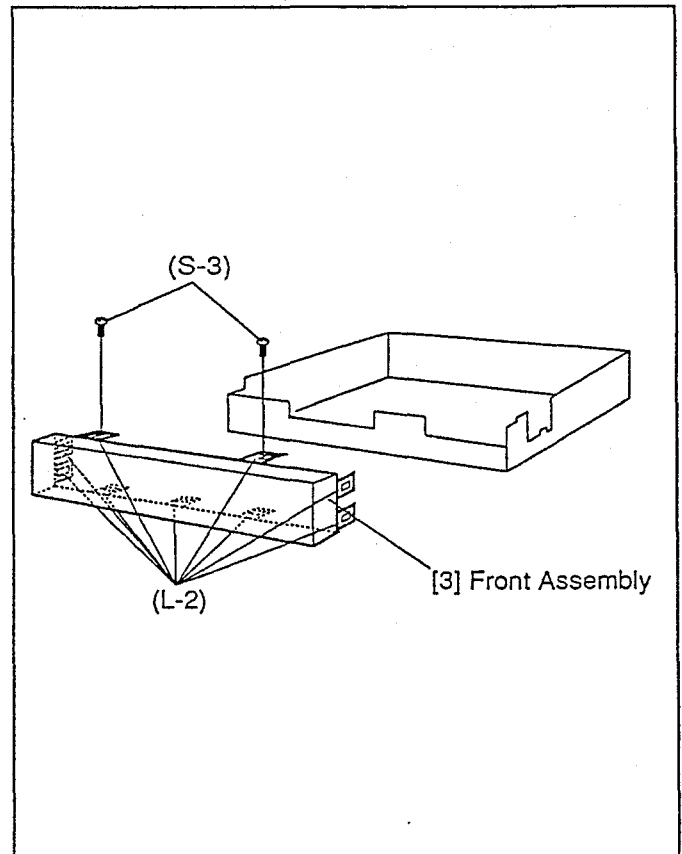


Fig. 3

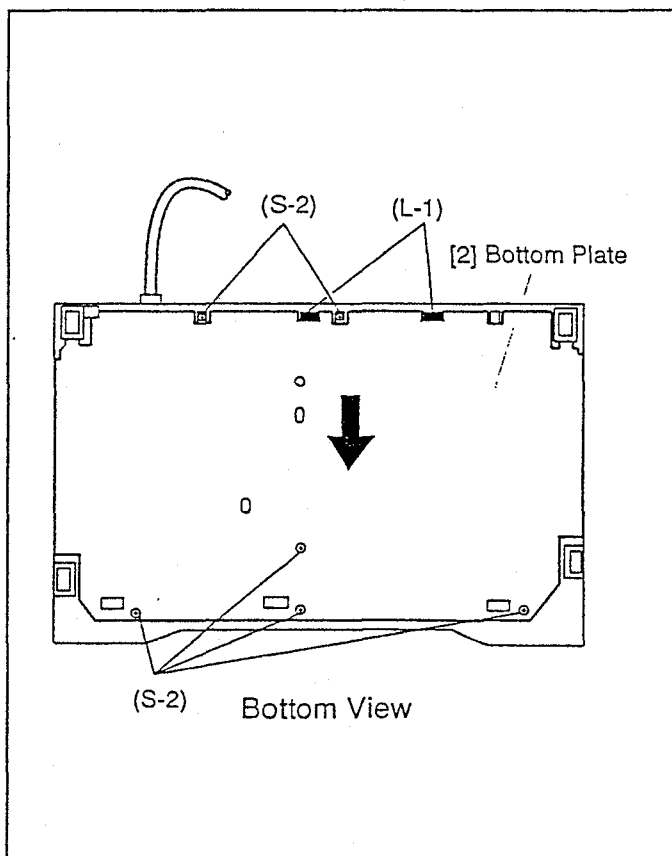


Fig. 2

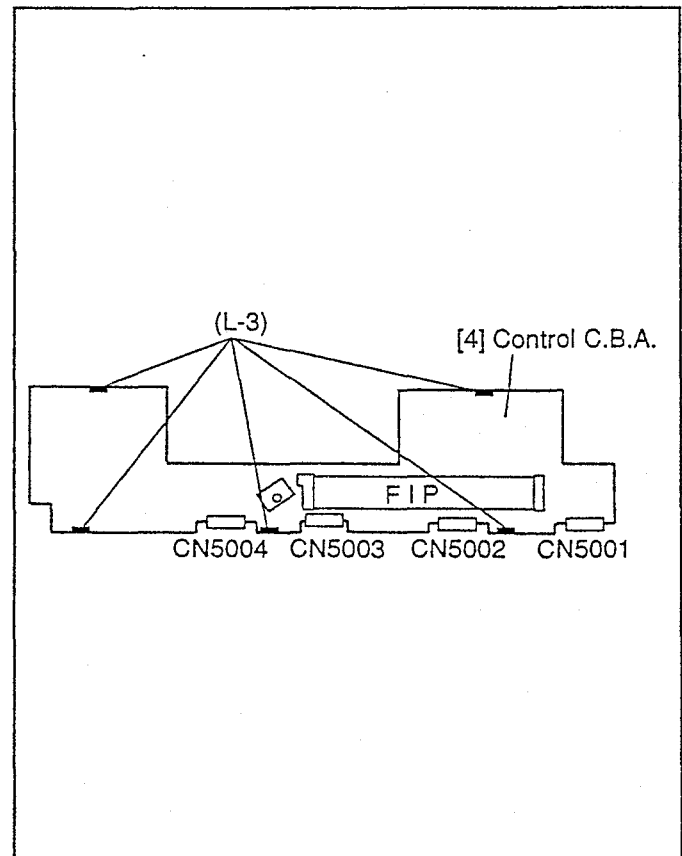


Fig. 4

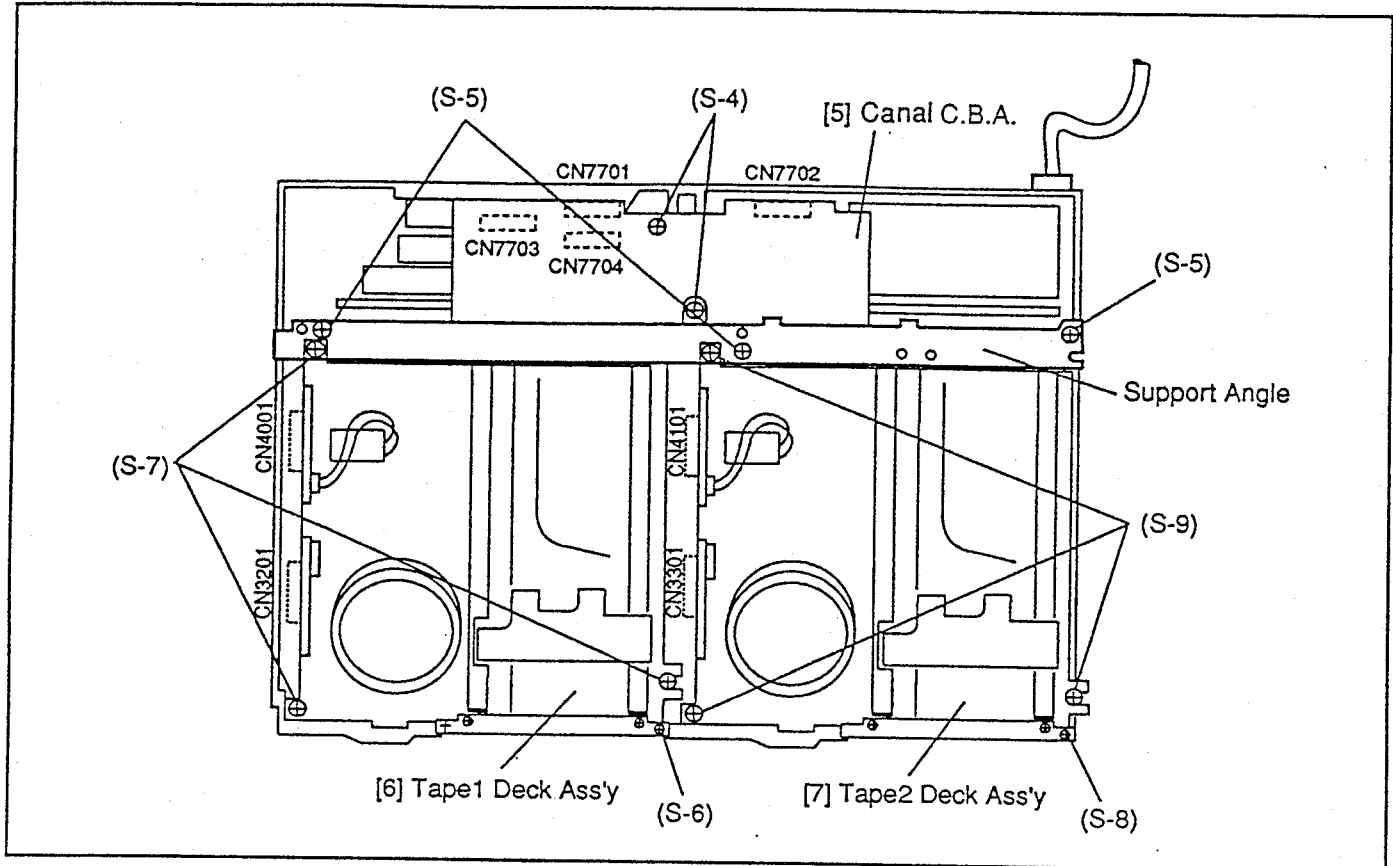


Fig. 5


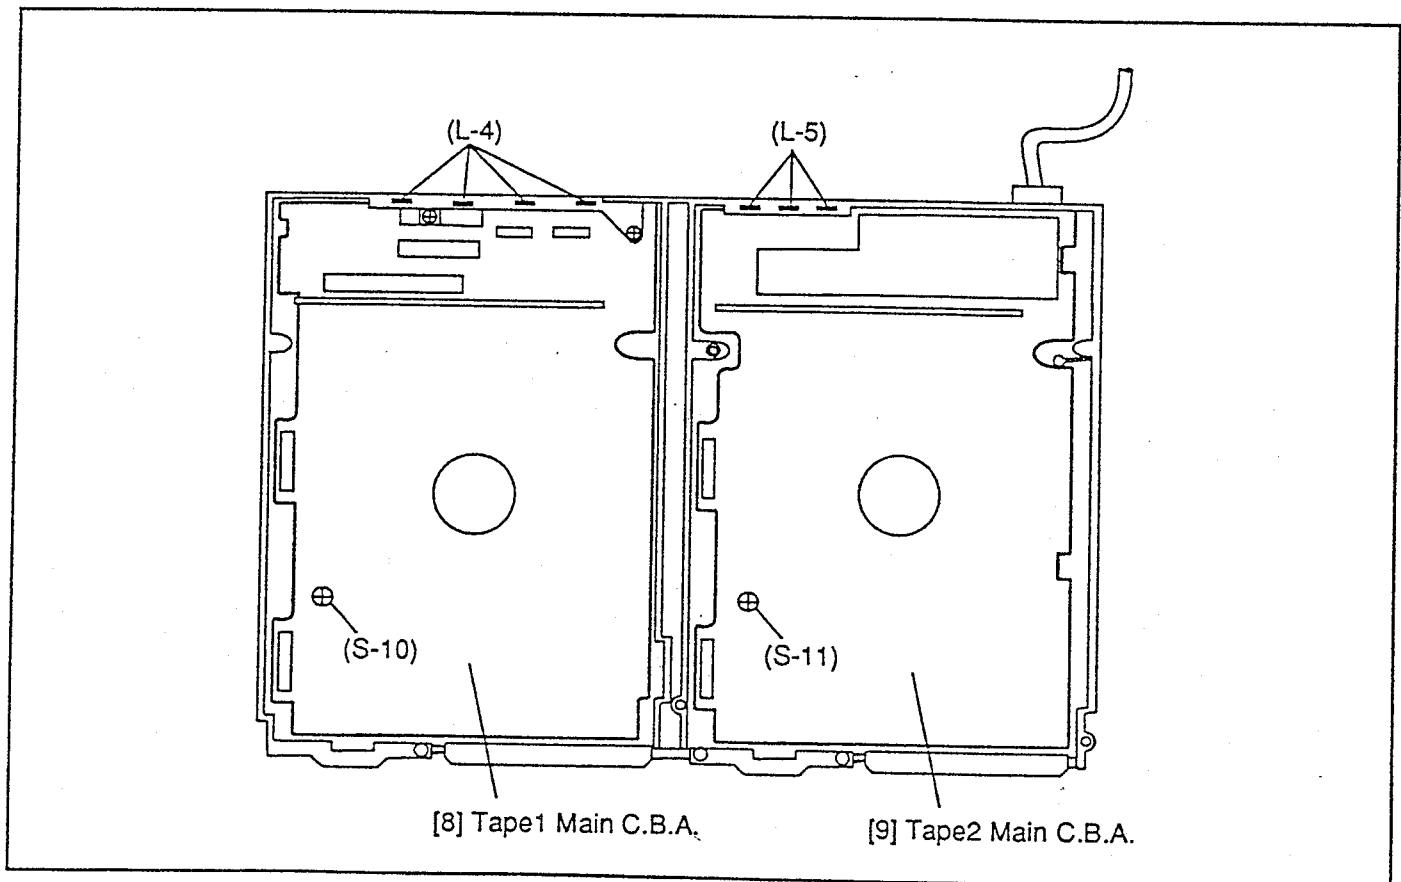


Fig. 6

A-IN/OUT SELECTOR BLOCK DIAGRAM

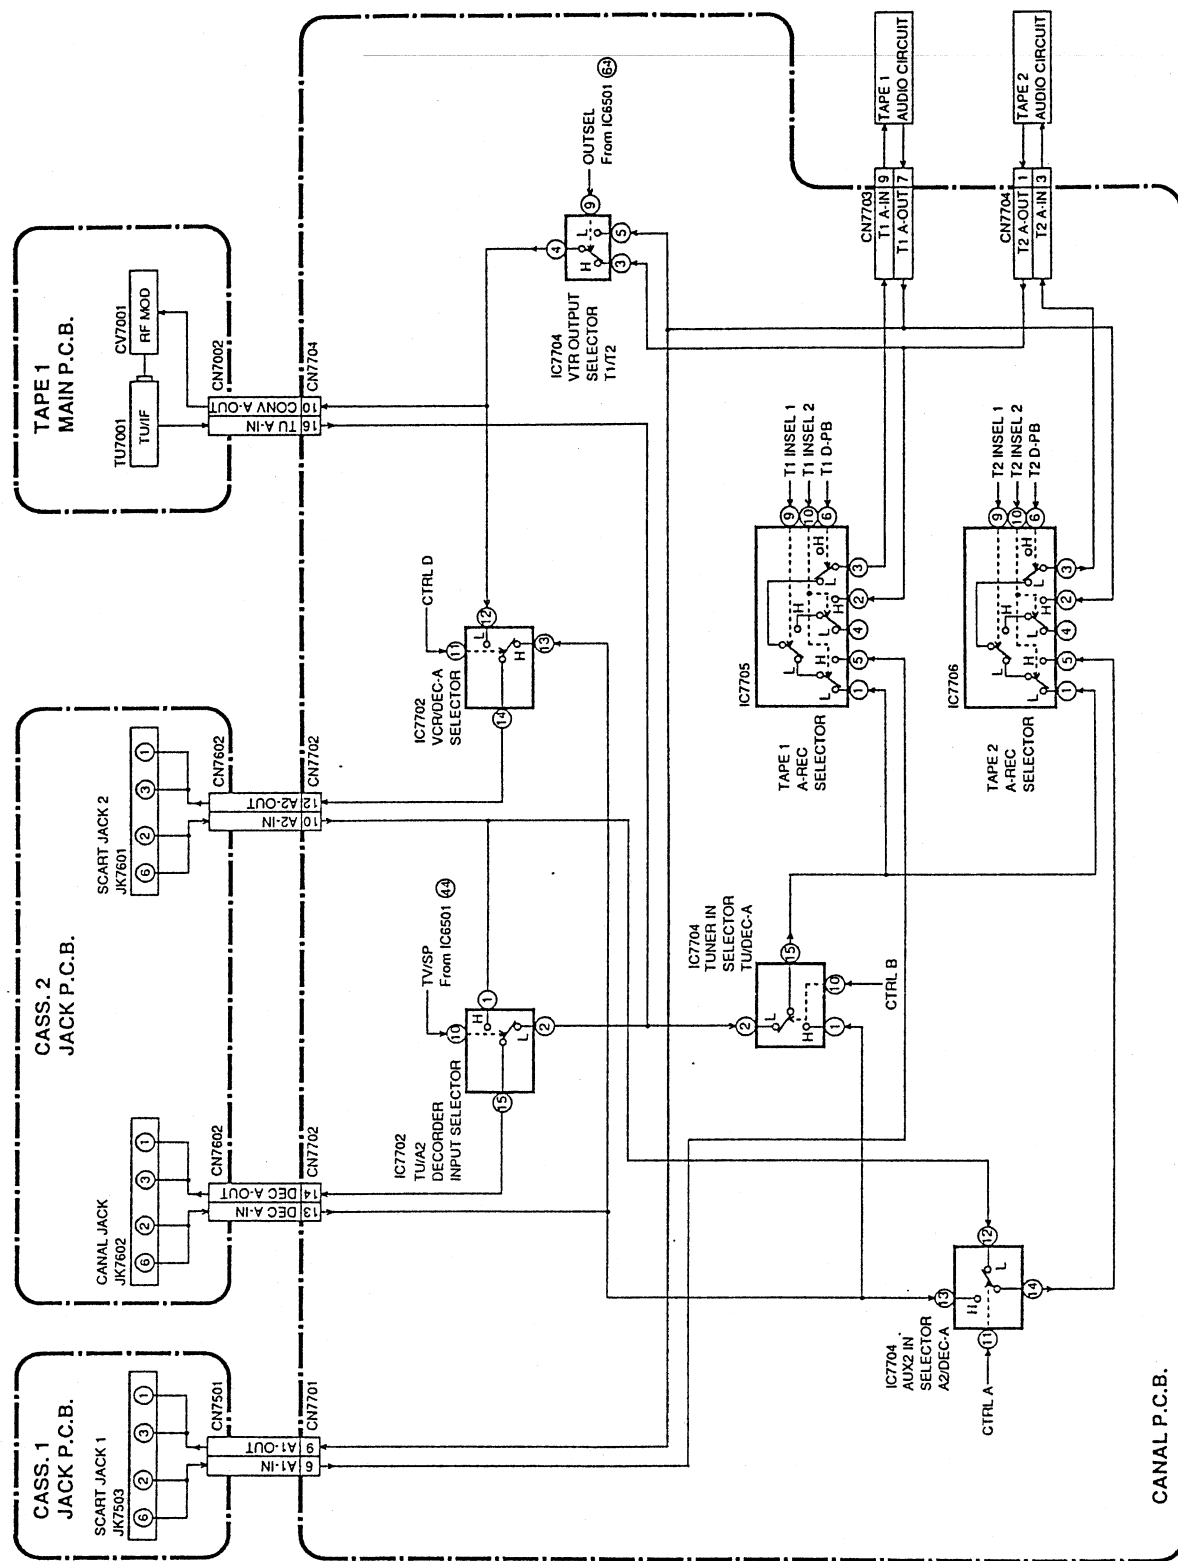

CTRL A	CH* H	TV/SP
H	H	H
L	L	L


CTRL B	CH* H	TV/SP
H	H	H
L	L	L

CTRL D	CH* H	T1 D-PB	T2 D-PB	TV/SP
H	H	H	H	H
L	L	L	L	L

AUX CTRL	T2 D-PB	T1 D-PB	TV/SP	CH* H
L	L	L	L	L
H	H	H	H	H


TV/SP → TV: H; VCR: L

VIDEO/AUDIO/HEAD AMP (TAPE 1) BLOCK DIAGRAM (1)

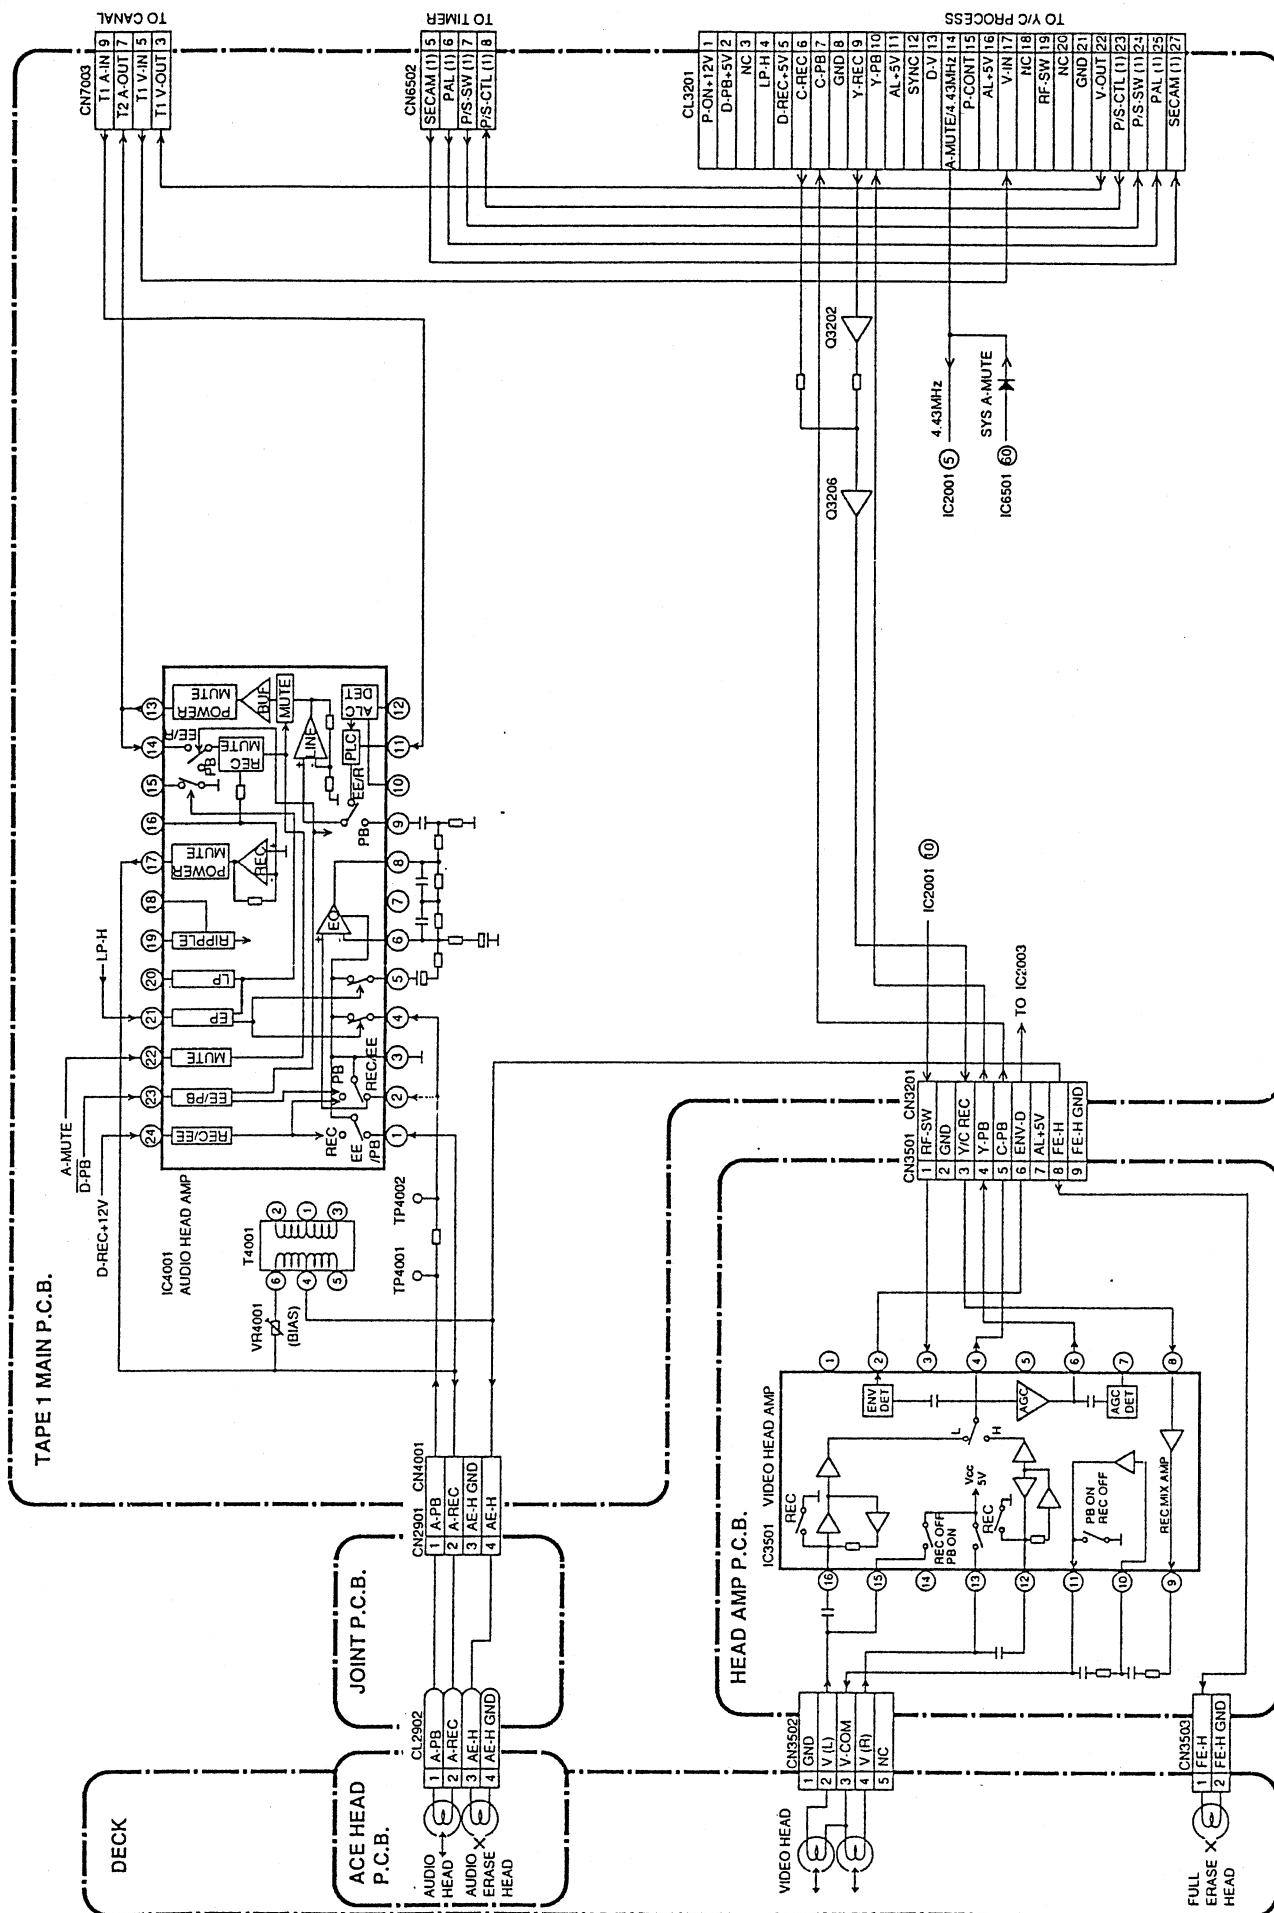


OVER ALL BLOCK DIAGRAM

BLOCK DIAGRAMS

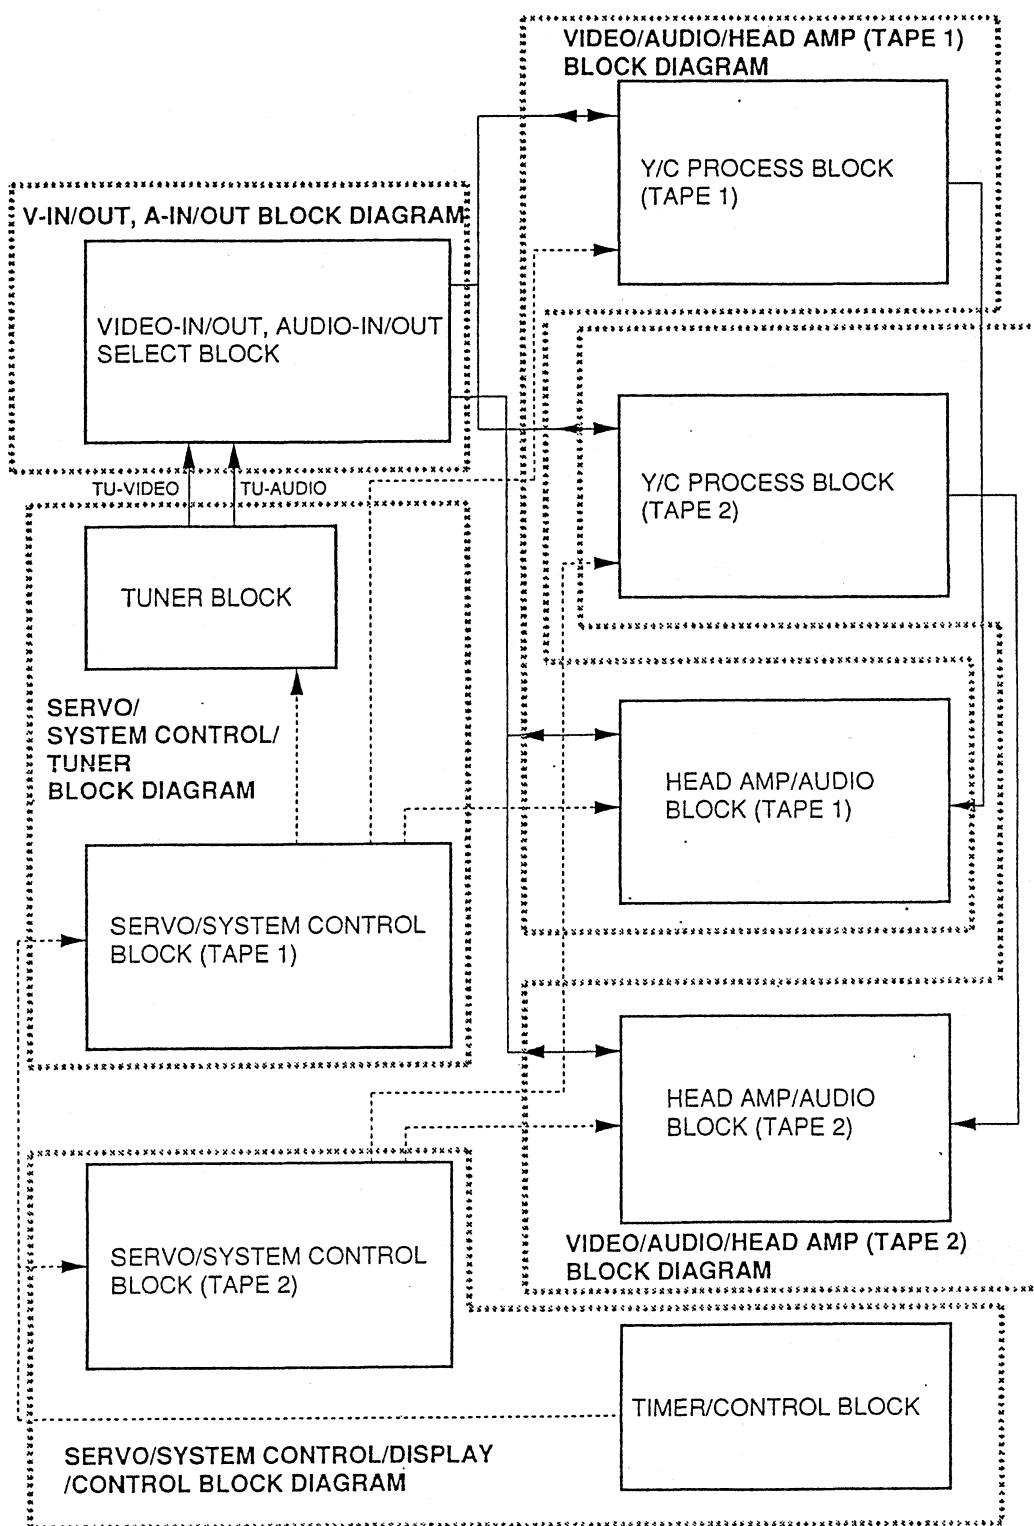

V-IN/OUT SELECTOR BLOCK DIAGRAM

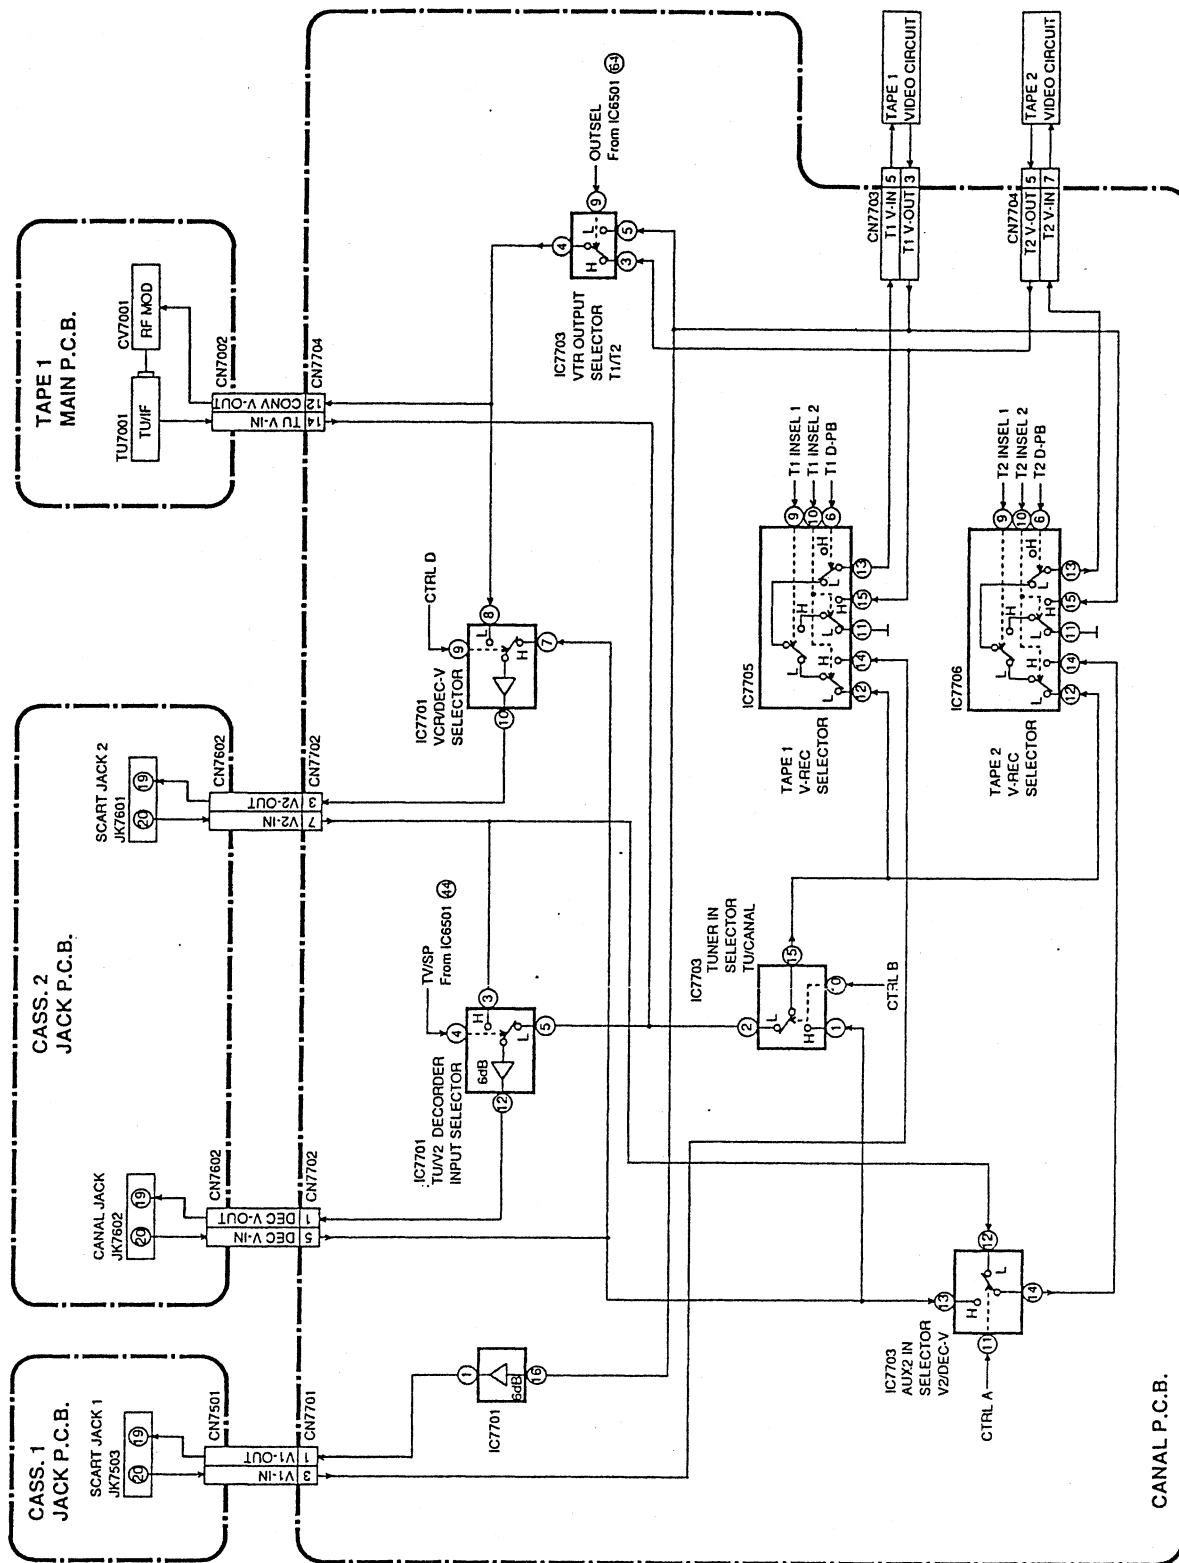

CTRL A	CH* H	TV/SP
H	H	H
L	L	L

CTRL B	CH* H	TV/SP
H	H	H
L	L	L


CTRL D	CH* H	T1 D-PB	T2 D-PB	TV/SP
H	H	L	L	H
L	L	L	L	L

AUX-CTRL	T2 D-PB	T1 D-PB	TV/SP	CH* H
L	L	L	L	L
L	L	L	L	H
L	L	L	L	L
H	L	L	L	H

TV/SP → TV: H; VCR: L

[illegible]

SERVO/SYSTEM CONTROL/TUNER (TAPE 1) BLOCK DIAGRAM

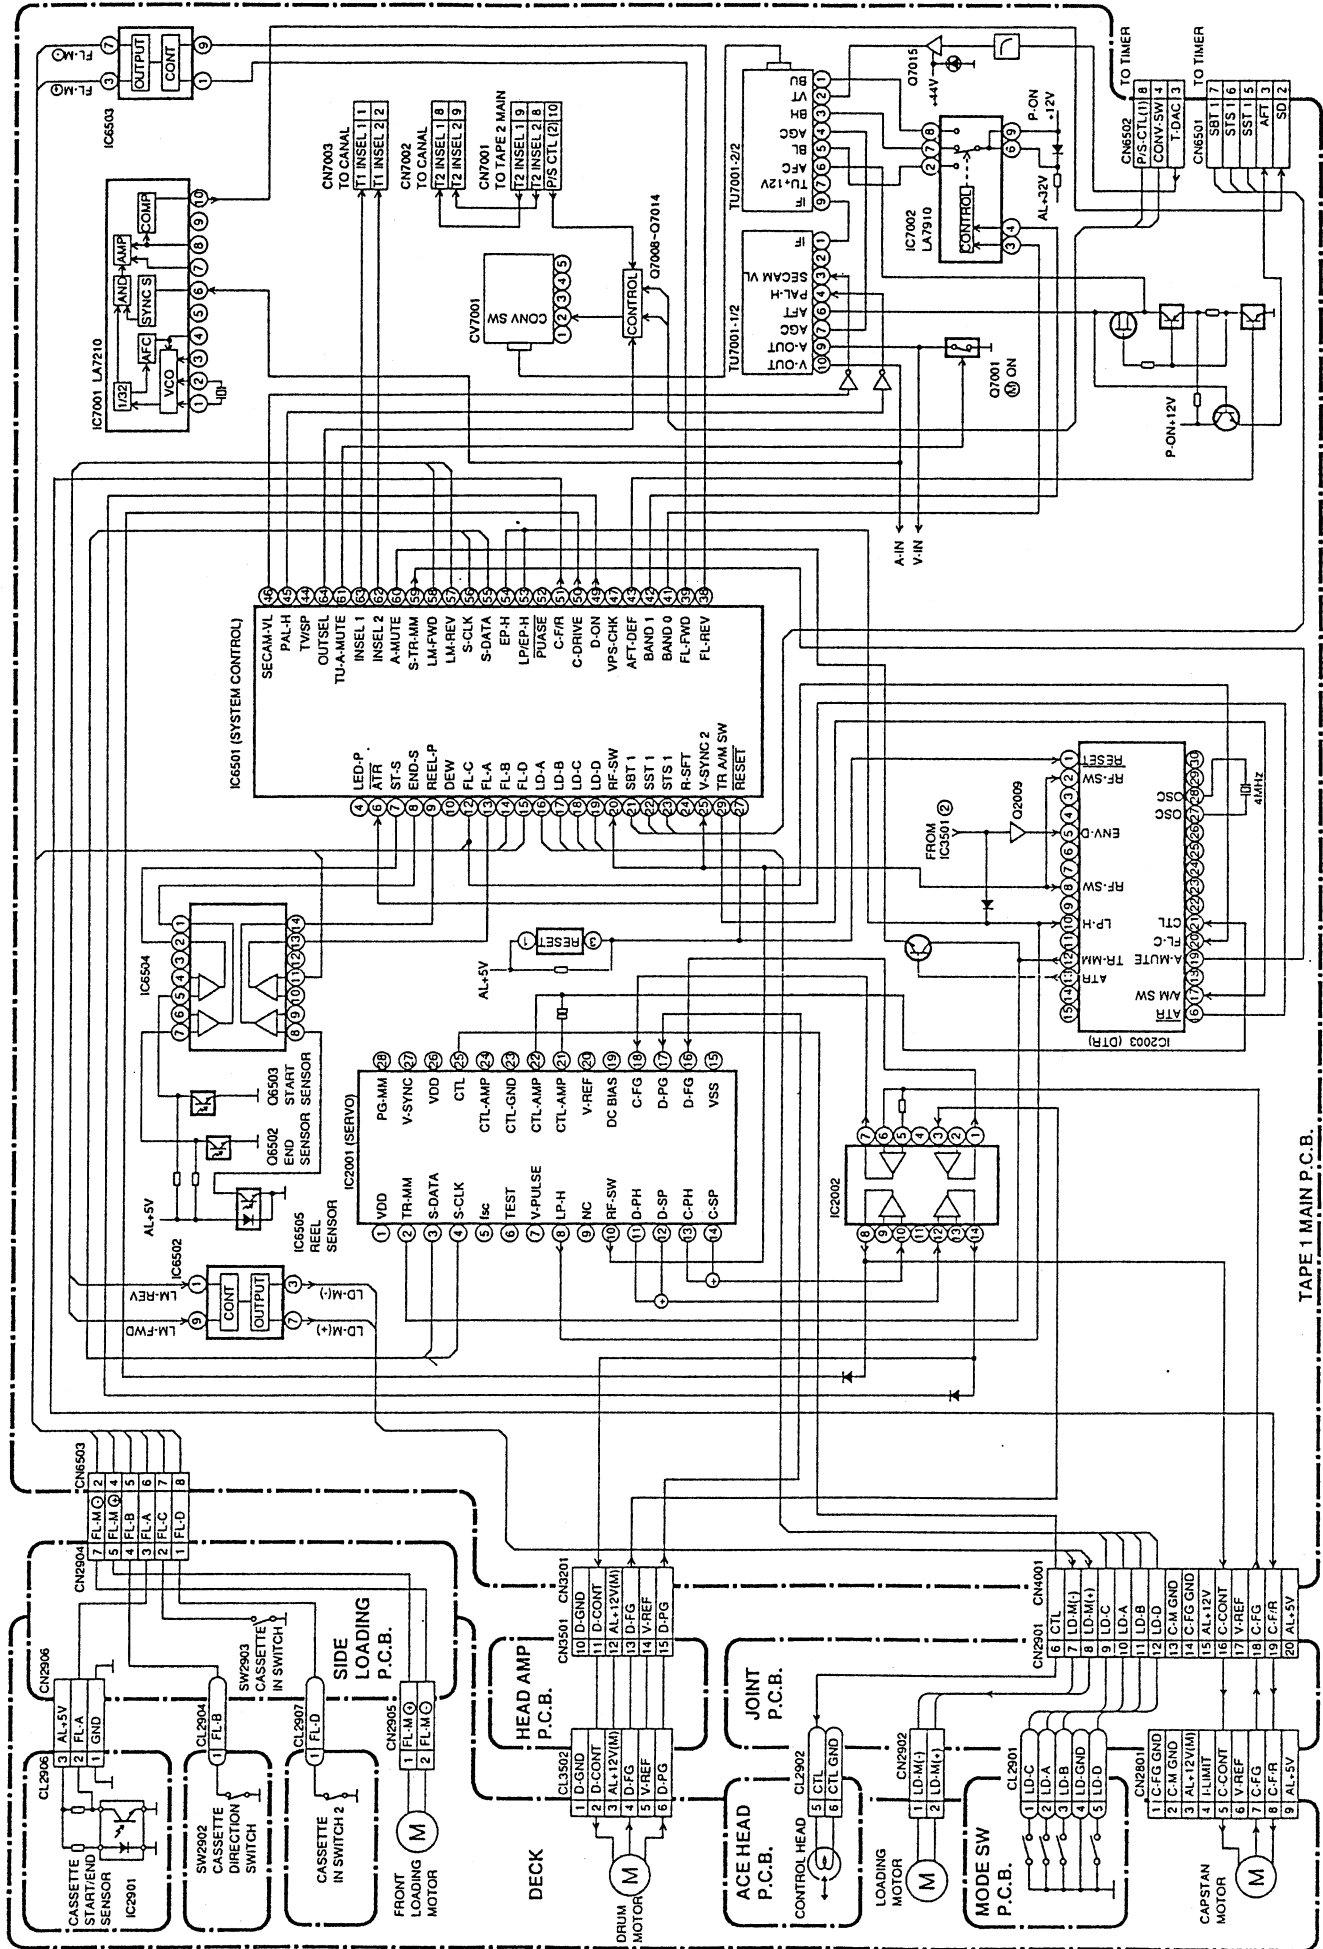

TAPE 1 MAIN P.C.B.

TO MAIN

Y/C PROCESS P.C.B.

DL3001 COMB FILTER

Q3017

Q3001

IC3006

Q3018

Q3002

4.16MHz B.P.F

Q3008

IC3005

Q3003

Q3004

Q3006

Q3007

Q3009

Q3010

Q3011

Q3012

Q3013

Q3014

Q3015

Q3016

Q3017

Q3018

Q3019

Q3020

Q3021

Q3022

Q3023

Q3024

Q3025

Q3026

Q3027

Q3028

Q3029

Q3030

Q3031

Q3032

Q3033

Q3034

Q3035

Q3036

Q3037

Q3038

Q3039

Q3040

Q3041

Q3042

Q3043

Q3044

Q3045

Q3046

Q3047

Q3048

Q3049

Q3050

Q3051

Q3052

Q3053

Q3054

Q3055

Q3056

Q3057

Q3058

Q3059

Q3060

Q3061

Q3062

Q3063

Q3064

Q3065

Q3066

Q3067

Q3068

Q3069

Q3070

Q3071

Q3072

Q3073

Q3074

Q3075

Q3076

Q3077

Q3078

Q3079

Q3080

Q3081

Q3082

Q3083

Q3084

Q3085

Q3086

Q3087

Q3088

Q3089

Q3090

Q3091

Q3092

Q3093

Q3094

Q3095

Q3096

Q3097

Q3098

Q3099

Q3100

Q3101

Q3102

Q3103

Q3104

Q3105

Q3106

Q3107

Q3108

Q3109

Q3110

Q3111

Q3112

Q3113

Q3114

Q3115

Q3116

Q3117

Q3118

Q3119

Q3120

Q3121

Q3122

Q3123

Q3124

Q3125

Q3126

Q3127

Q3128

Q3129

Q3130

Q3131

Q3132

Q3133

Q3134

Q3135

Q3136

Q3137

Q3138

Q3139

Q3140

Q3141

Q3142

Q3143

Q3144

Q3145

Q3146

Q3147

Q3148

Q3149

Q3150

Q3151

Q3152

Q3153

Q3154

Q3155

Q3156

Q3157

Q3158

Q3159

Q3160

Q3161

Q3162

Q3163

Q3164

Q3165

Q3166

Q3167

Q3168

Q3169

Q3170

Q3171

Q3172

Q3173

Q3174

Q3175

Q3176

Q3177

Q3178

Q3179

Q3180

Q3181

Q3182

Q3183

Q3184

Q3185

Q3186

Q3187

Q3188

Q3189

Q3190

Q3191

Q3192

Q3193

Q3194

Q3195

Q3196

Q3197

Q3198

Q3199

Q3200

Q3201

Q3202

Q3203

Q3204

Q3205

Q3206

Q3207

Q3208

Q3209

Q3210

Q3211

Q3212

Q3213

Q3214

Q3215

Q3216

Q3217

Q3218

Q3219

Q3220

Q3221

Q3222

Q3223

Q3224

Q3225

Q3226

Q3227

Q3228

Q3229

Q3230

Q3231

Q3232

Q3233

Q3234

Q3235

Q3236

Q3237

Q3238

Q3239

Q3240

Q3241

Q3242

Q3243

Q3244

Q3245

Q3246

Q3247

Q3248

Q3249

Q3250

Q3251

Q3252

Q3253

Q3254

Q3255

Q3256

Q3257

Q3258

Q3259

Q3260

Q3261

Q3262

Q3263

Q3264

Q3265

Q3266

Q3267

Q3268

Q3269

Q3270

Q3271

Q3272

Q3273

Q3274

Q3275

Q3276

Q3277

Q3278

Q3279

Q3280

Q3281

Q3282

Q3283

Q3284

Q3285

Q3286

Q3287

Q3288

Q3289

Q3290

Q3291

Q3292

Q3293

Q3294

Q3295

Q3296

Q3297

Q3298

Q3299

Q3300

Q3301

Q3302

Q3303

Q3304

Q3305

Q3306

Q3307

Q3308

Q3309

Q3310

Q3311

Q3312

Q3313

Q3314

Q3315

Q3316

Q3317

Q3318

Q3319

Q3320

Q3321

Q3322

Q3323

Q3324

Q3325

Q3326

Q3327

Q3328

Q3329

Q3330

Q3331

Q3332

Q3333

Q3334

Q3335

Q3336

Q3337

Q3338

Q3339

Q3340

Q3341

Q3342

Q3343

Q3344

Q3345

Q3346

Q3347

Q3348

Q3349

Q3350

Q3351

Q3352

Q3353

Q3354

Q3355

Q3356

Q3357

Q3358

Q3359

Q3360

Q3361

Q3362

Q3363

Q3364

Q3365

Q3366

Q3367

Q3368

Q3369

Q3370

Q3371

Q3372

Q3373

Q3374

Q3375

Q3376

Q3377

Q3378

Q3379

Q3380

Q3381

Q3382

Q3383

Q3384

Q3385

Q3386

Q3387

Q3388

Q3389

Q3390

Q3391

Q3392

Q3393

Q3394

Q3395

Q3396

Q3397

Q3398


Q3399

Q3400


Q3401

Q3402


VIDEO/AUDIO/HEAD AMP (TAPE 2) BLOCK DIAGRAM (1)

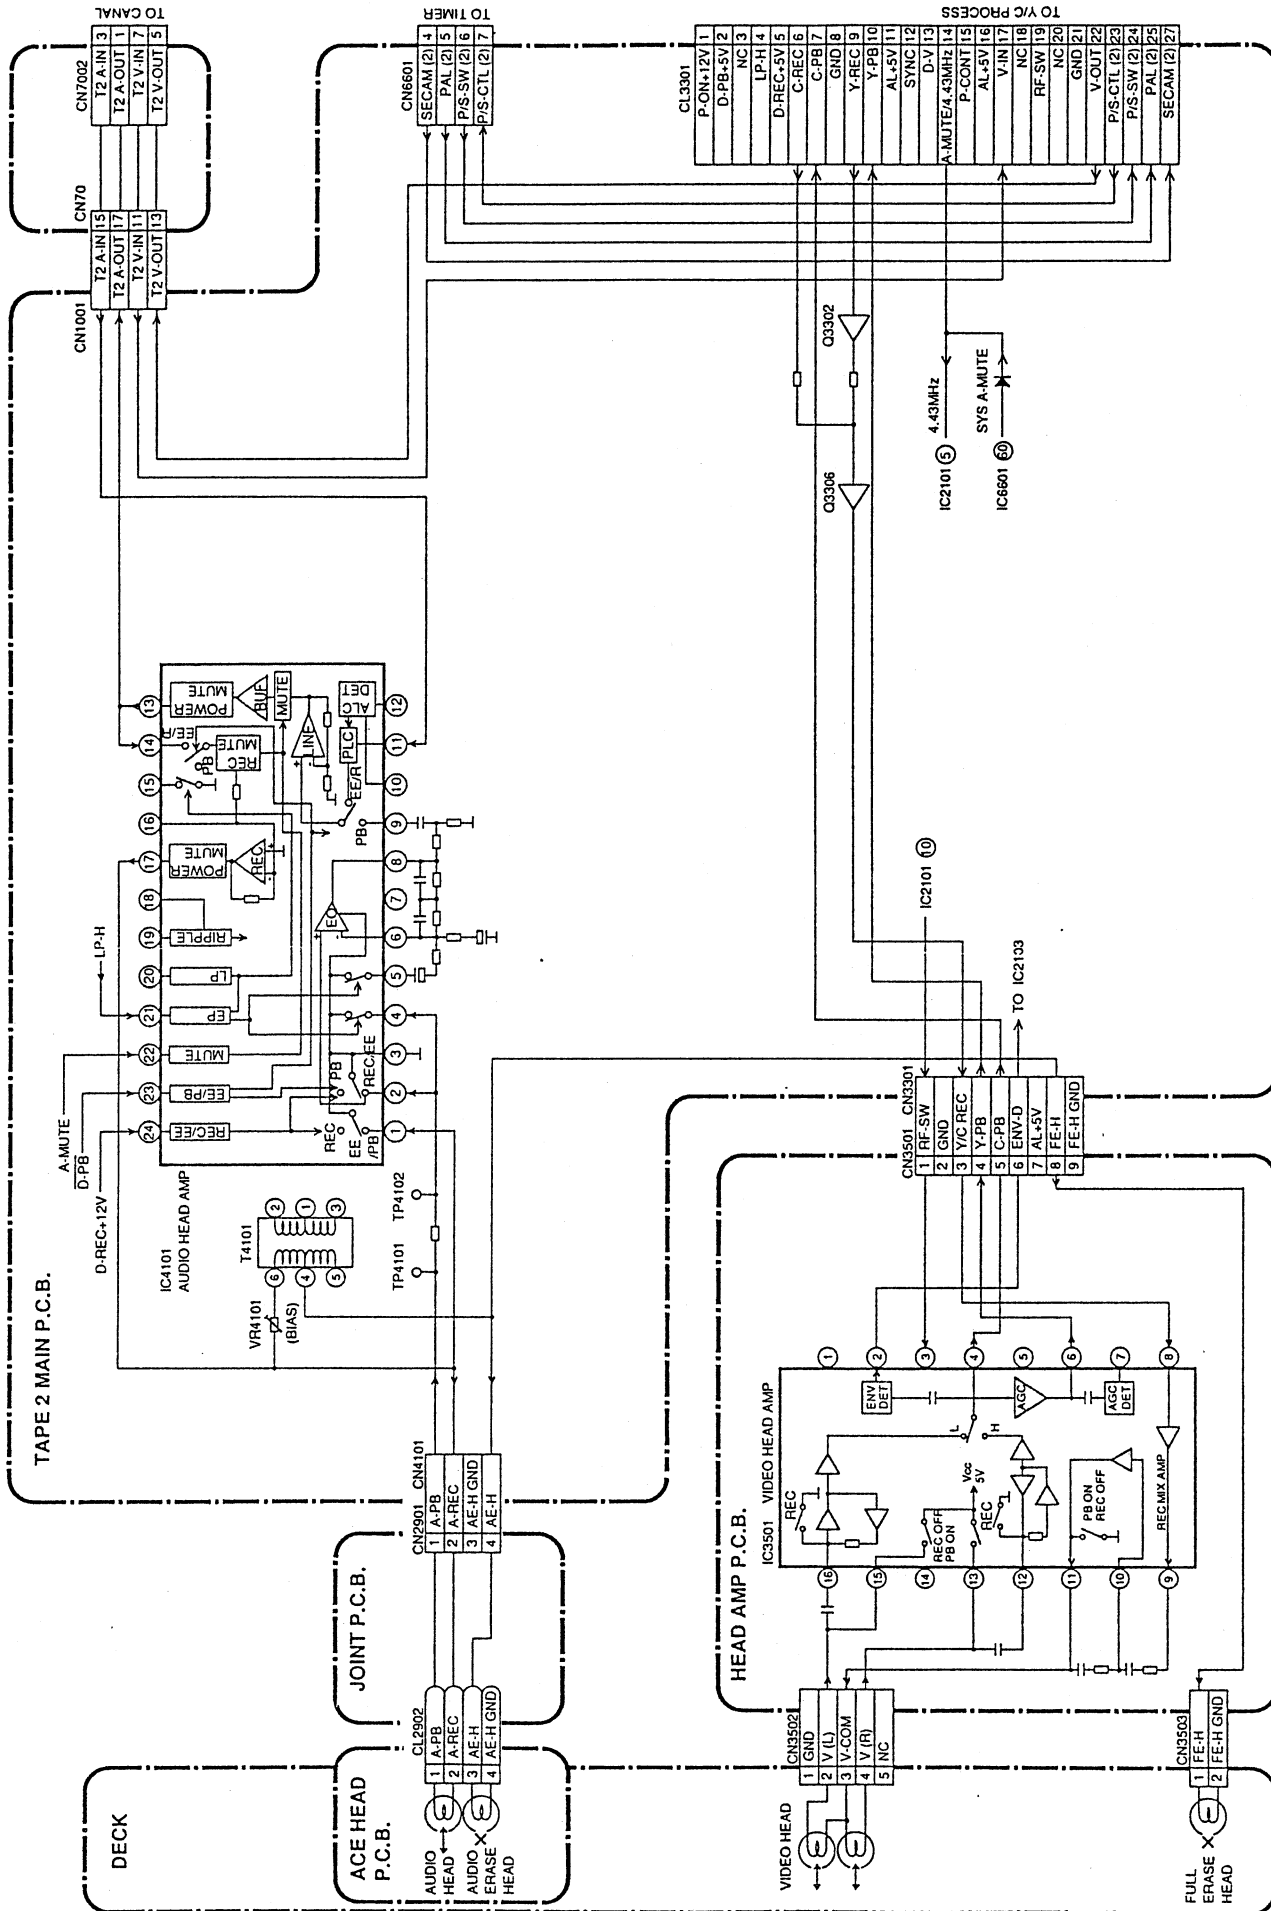

SERVO/SYSTEM CONTROL/DISPLAY/CONTROL (TAPE 2) BLOCK DIAGRAM

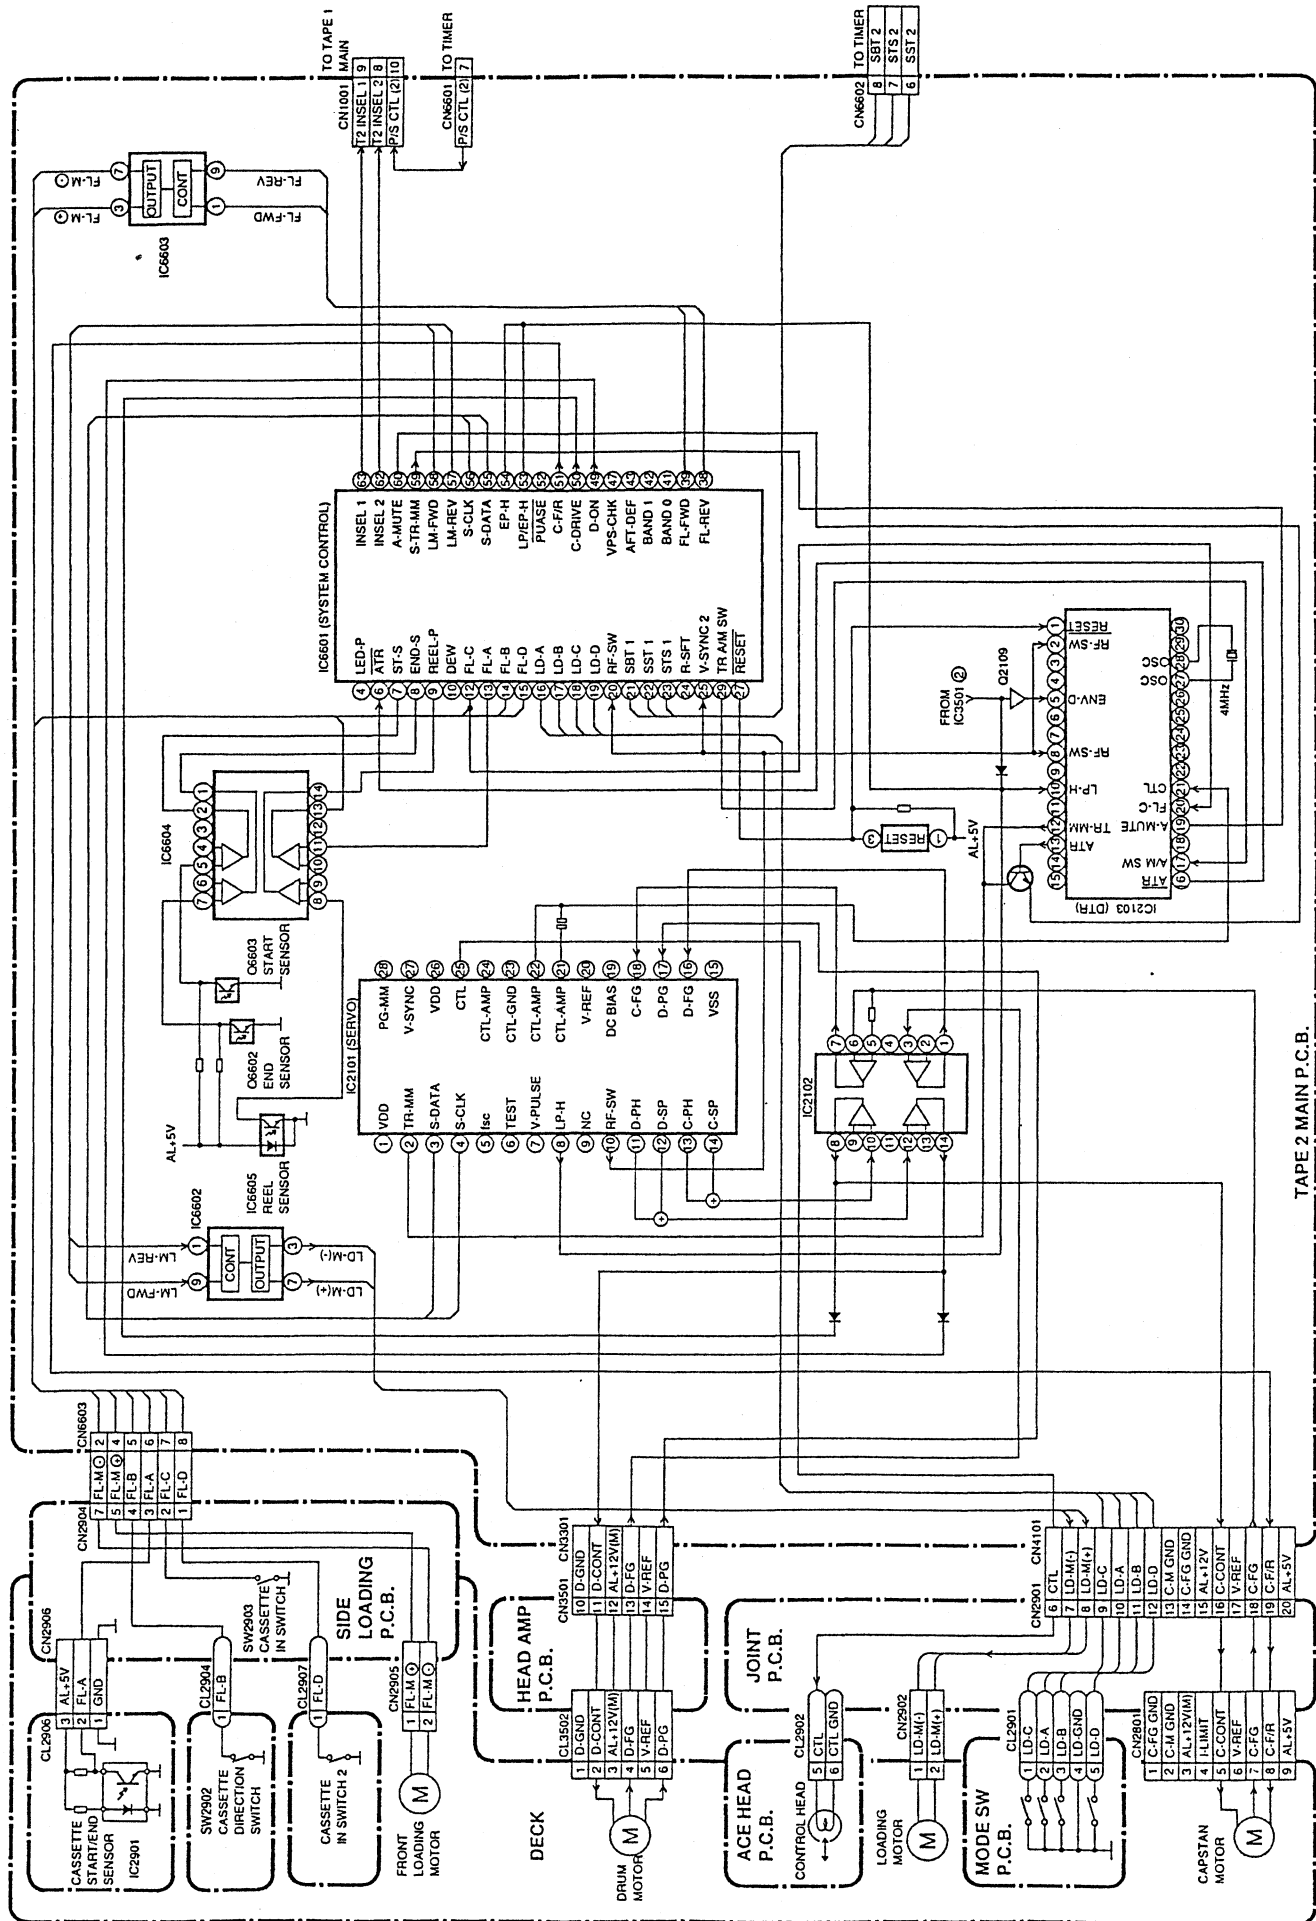

TIMER BLOCK DIAGRAM

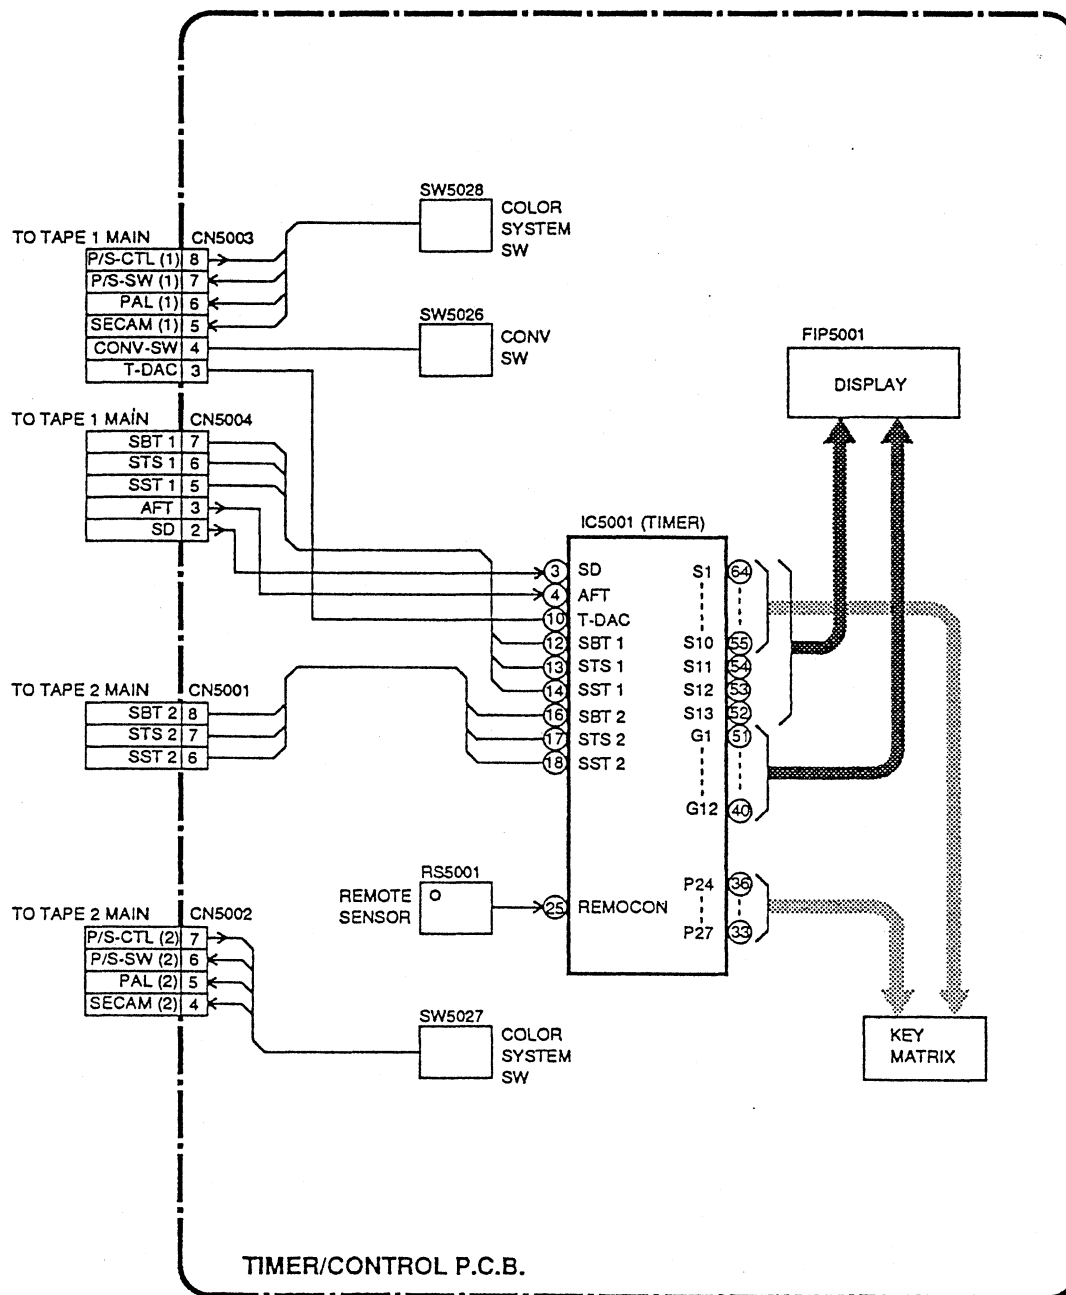

ELECTRICAL ADJUSTMENT INSTRUCTIONS [TAPE 1]

NOTE:

Electrical adjustment are required after replacing circuit components and certain mechanical parts. It is important to perform these adjustments only after all repairs and replacements have been completed. Also, do not attempt these adjustments unless the proper equipment is available.


TEST EQUIPMENT REQUIRED

1. Oscilloscope: Dual-trace with 10:1 probe.
2. TV Monitor
3. Pattern Generator (Color bar with 100% white)
4. AC Voltmeter (RMS)
5. Test Tape F6-A, F7-A, F7-BELL
6. Spectrum Analyzer, Frequency Counter
7. SECAM Video Analyzer


HEAD SWITCHING POSITION ADJUSTMENT

Test Point	Adj. Point	Mode	Input
J35 (V-OUT) J89 (RF-SW) GND	VR2001 (Switching Point) (TAPE 1 MAIN PCB)	PLAY	---
Tape	M. EQ.	Spec.	
F6-A	Oscilloscope	6.5H(416 μ s)	

Connections of M. EQ.

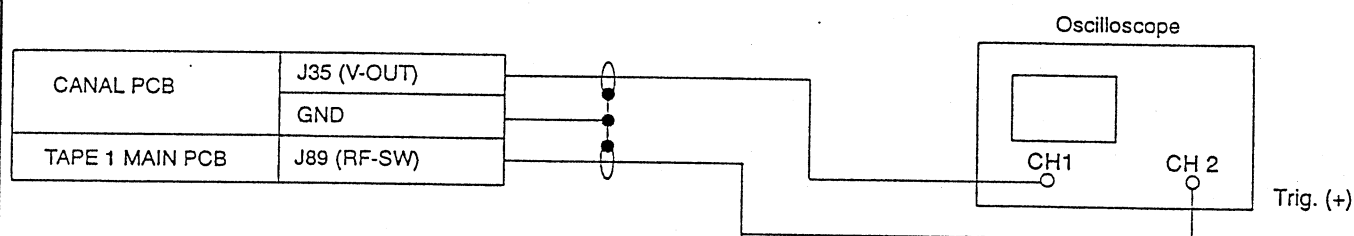

Figure

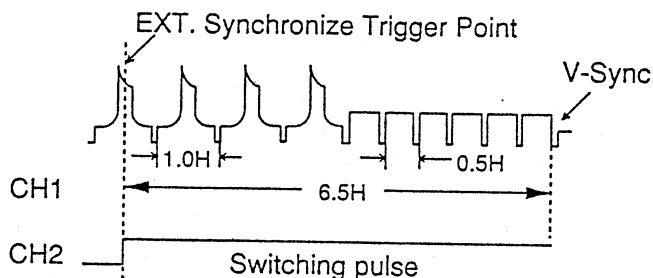


Reference Notes:

1. Connect equipments as shown in the above table.
2. Set the input trigger mode to CH2 and set trigger slope to (+).
3. Adjust the Tracking control to its center position. Press + and - of Tracking control Button at same time.
4. Playback the test tape and adjust VR2001 so that the V-sync front edge of CH1 video output waveform is delayed 6.5H(416 μ s) from the rising of CH2 Head Switching pulse waveform.


E-E LEVEL ADJUSTMENT

Test Point	Adj. Point	Mode	Input
J35 (V-OUT) GND	VR3003 (E-E) (TAPE 1 Y/C PROCESS PCB)	E-E	Color Bar signal with 100% White
Tape	M. EQ.	Spec.	
----	Pattern Generator TV Monitor Oscilloscope	1.0Vp-p \pm 0.05V	

Connections of M. EQ.

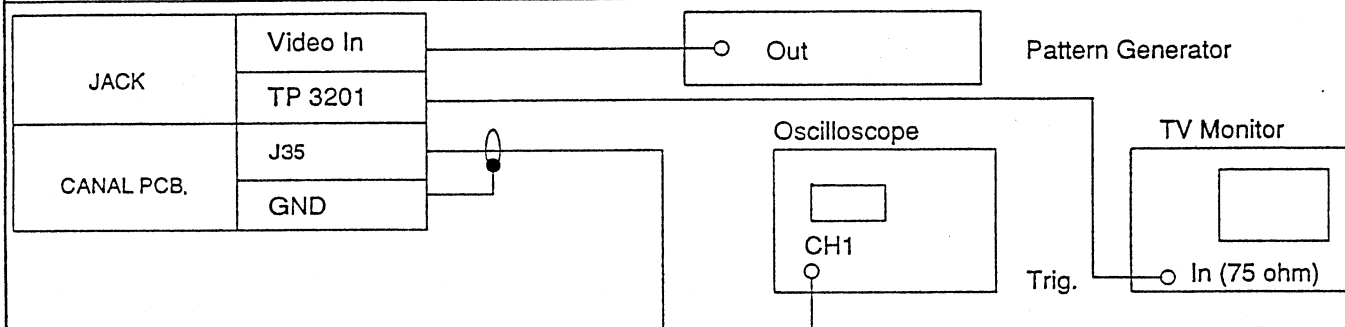

Figure

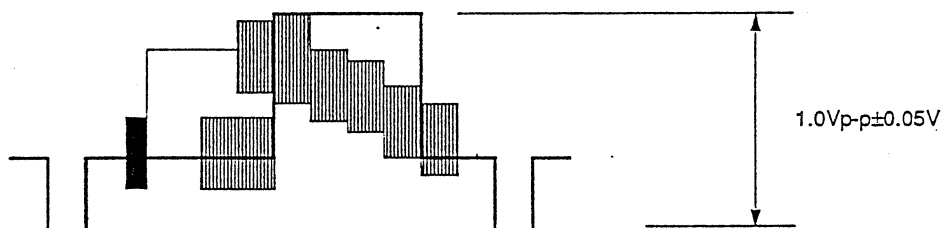


Reference Notes:

1. Connect equipments as shown in the above table.
2. TAPE 1 Color system switch= Auto Mode.
3. Input Color Bar signal with 100% White to Video Input.
4. Adjust VR3003 so that the video level becomes 1.0Vp-p \pm 0.05V.


FM CARRIER DEVIATION ADJUSTMENT

Test Point	Adj. Point	Mode	Input
J105 (Y-REC)	VR3004 (CRR) VR3005 (DEV) (TAPE 1 Y/C PROCESS PCB)	REC (SP)	Blank Tape Color Bar signal with 100% White
Tape	M. EQ.	Spec.	
Blank Tape	Pattern Generator Spectrum Analyzer Oscilloscope	Sync-tip to $3.8\text{MHz} \pm 0.05\text{MHz}$ White-peak to $4.8\text{MHz} \pm 0.05\text{MHz}$	

Connections of M. EQ.

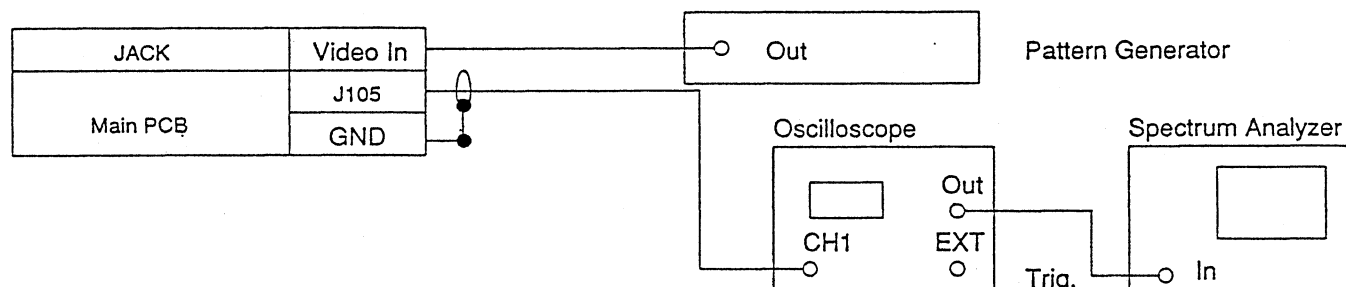

Figure

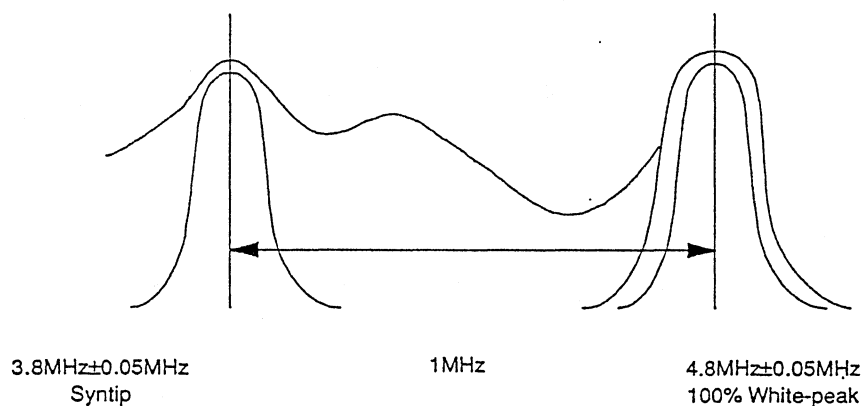


Reference Notes:

1. Connect equipments as shown in the above table.
2. TAPE 1 Color system switch= Auto Mode.
3. Input Color Bar signal with 100% White to Video Input.
4. Adjust Sync-tip to $3.8\text{MHz} \pm 0.05\text{MHz}$ by VR3004, White-peak to $4.8\text{MHz} \pm 0.05\text{MHz}$ by VR3005.


PAL/SECAM F-V DETECTOR

Test Point	Adj. Point	Mode	Input
IC3006 (8)Pin or (12)Pin (SECAM-L and PAL F-V DETECTOR)	VR3008 (PAL/SECAM REC SELECTOR) (TAPE 1 Y/C PROCESS PCB)	E-E	PAL Color Bar signal with 100% White
Tape	M. EQ.	Spec.	
---	Pattern Generator Oscilloscope	DC 2.45~2.5V	

Connections of M. EQ.

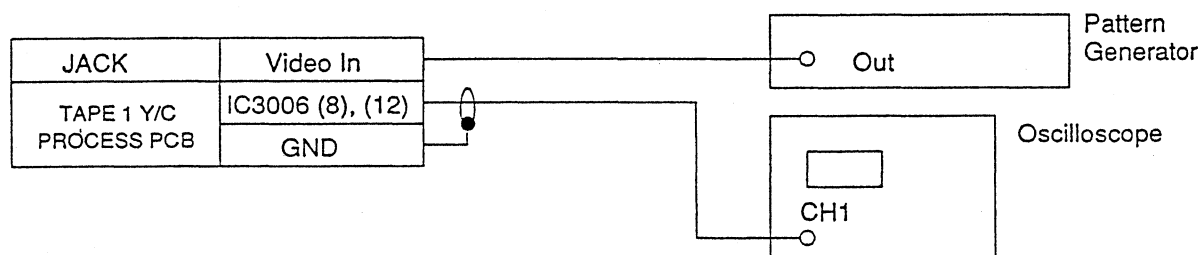

Figure

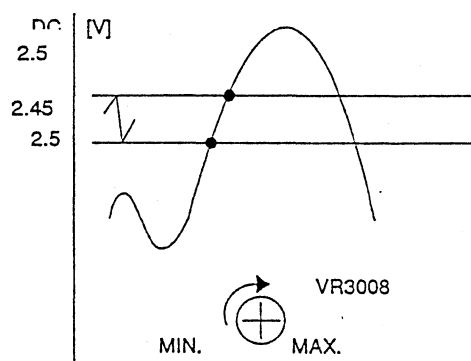


Reference Notes:

1. Connect equipments as shown in the above table.
2. TAPE 1 Color system switch= Auto Mode.
3. Adjust VR3008 so that the DC Voltage level becomes DC 2.45~2.5V.


REC. CURRENT ADJUSTMENT (PAL CHROMINANCE)

Test Point	Adj. Point	Mode	Input
J104 (C-REC) J89 (RF-SW)	VR3002 (PCR) (TAPE 1 Y/C PROCESS PCB)	REC	Blank Tape PAL Blue-green signal
Tape	M. EQ.	Spec.	
Blank Tape	Pattern Generator Oscilloscope	50mVp-p±5%	

Connections of M. EQ.

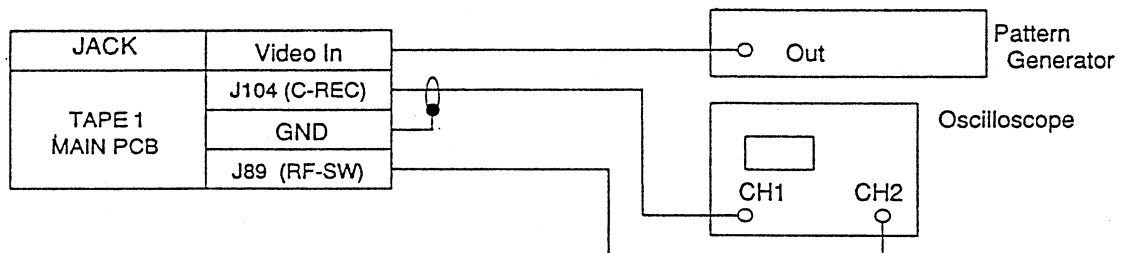

Figure

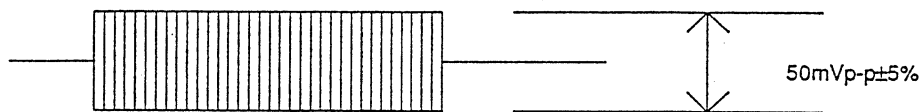 


Reference Notes:

1. Connect equipments as shown in the above table.
2. TAPE 1 Color system switch= Auto Mode.
3. Input PAL Blue-green signal only to Video Input.
4. Adjust VR3002 so that chroma level becomes 50mVp-p±5%.


REC. CURRENT ADJUSTMENT (SECAM CHROMINANCE)

Test Point	Adj. Point	Mode	Input
J104 (C-REC) J89 (RF-SW)	VR3006 (SCR) (TAPE 1 Y/C PROCESS PCB)	REC	Blank Tape SECAM Blue-green signal
Tape	M. EQ.	Spec.	
Blank Tape	Pattern Generator Oscilloscope	50mVp-p \pm 10%	

Connections of M. EQ.

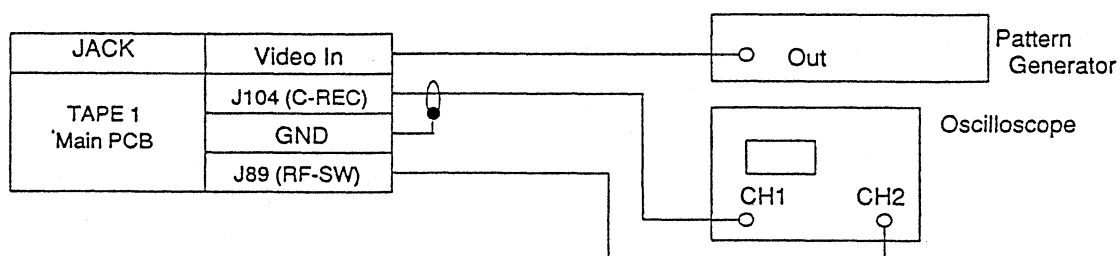

Figure

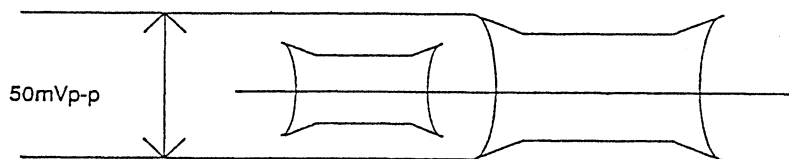


Reference Notes:

1. Connect equipments as shown in the above table.
2. TAPE 1 Color system switch= Auto Mode.
3. Input SECAM Blue-green signal only to Video Input.
4. Adjust VR3006 so that chroma level becomes 50mVp-p \pm 10%.


REC EQ ADJUSTMENT

Test Point	Adj. Point	Mode	Input
J104 (C-REC)	T3001 (REC EQ) (TAPE 1 Y/C PROCESS PCB)	REC	Blank Tape SECAM BELL signal
Tape	M. EQ.	Spec.	
Blank Tape	SECAM Video Analyzer Oscilloscope	See below	

Connections of M. EQ.

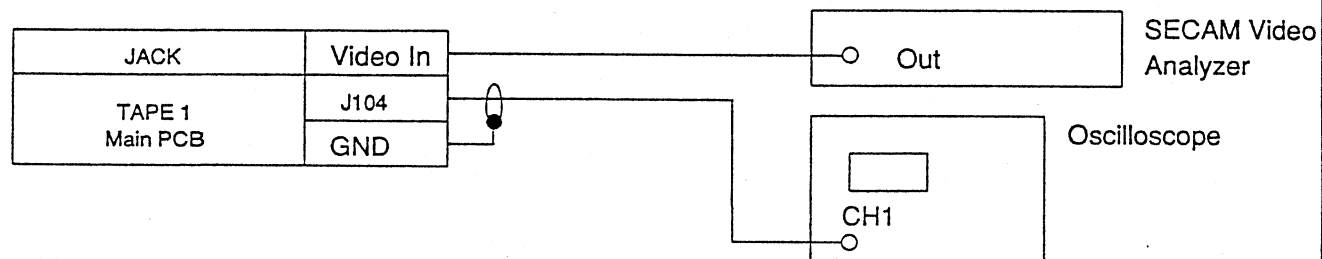

Figure

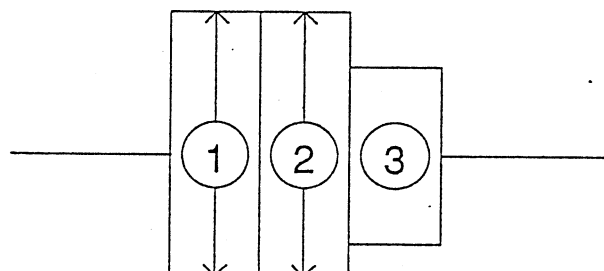


Reference Notes:

1. Connect equipments as shown in the above table.
2. TAPE 1 Color system switch= Auto Mode.
3. Input SECAM BELL signal to Video Input.
4. Adjust T3001 to make the same voltage at ① and ②.


REC BELL ADJUSTMENT

Test Point	Adj. Point	Mode	Input
TP3002 (REC BELL)	T3002 (REC BELL) (TAPE 1 Y/C PROCESS PCB)	REC	Blank Tape SECAM BELL signal
Tape	M. EQ.	Spec.	
Blank Tape	SECAM Video Analyzer Oscilloscope	See below	

Connections of M. EQ.

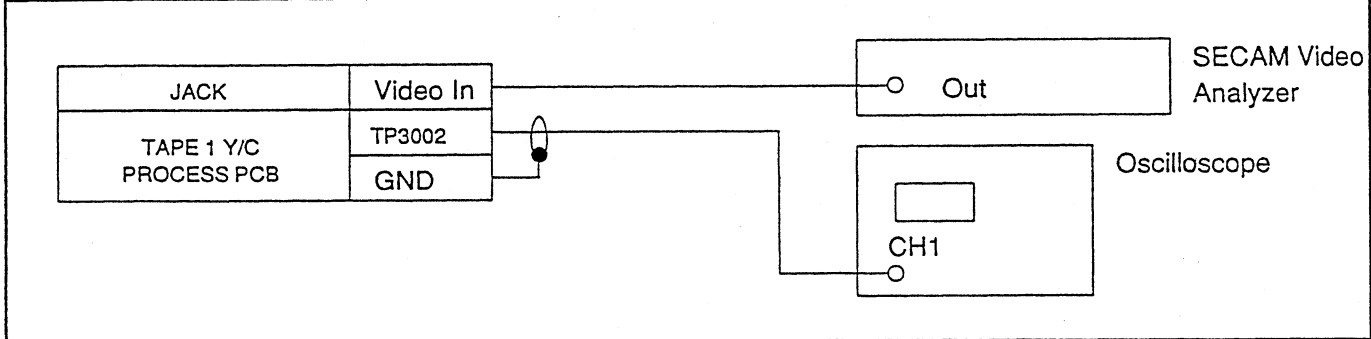

Figure

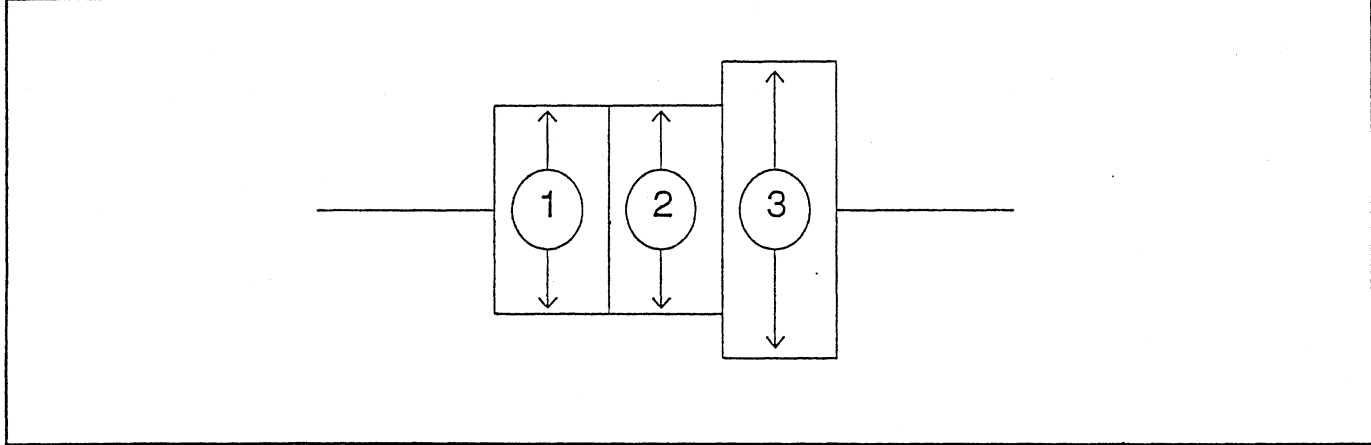


Reference Notes:

- 1. Connect equipments as shown in the above table.
- 2. TAPE 1 Color system switch= Auto Mode.
- 3. Input SECAM BELL signal to Video Input.
- 4. Adjust T3002 to make the same voltage at ① and ②.


P.B. OUTPUT LEVEL ADJUSTMENT

Test Point	Adj. Point	Mode	Input
J35 (V-OUT) GND	VR3009 (P.B.) (TAPE 1 Y/C PROCESS PCB)	PLAY	---
Tape	M. EQ.	Spec.	
F6-A	TV Monitor Oscilloscope	1.0Vp-p±0.05V	

Connections of M. EQ.

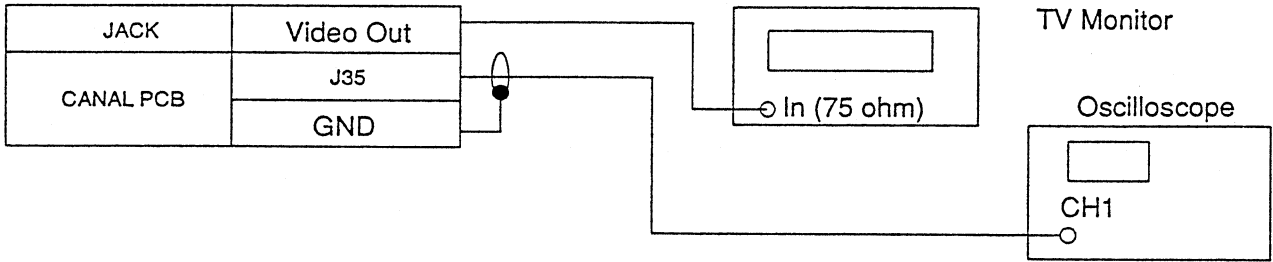

Figure

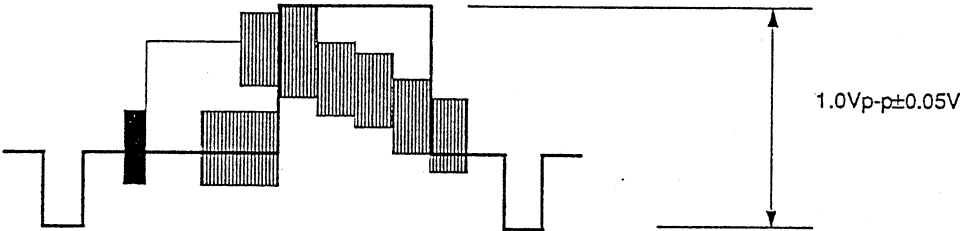


Reference Notes:

1. Connect equipments as shown in the above table.
2. TAPE 1 Color system switch= Auto Mode.
3. Adjust VR3009 so that the video level becomes 1.0Vp-p±0.05V.


PB EQ ADJUSTMENT

Test Point	Adj. Point	Mode	Input
T3004 (5)Pin (PB EQ)	T3003 (PB EQ) (TAPE 1 Y/C PROCESS PCB)	P. B	---
Tape	M. EQ.	Spec.	
F7-BELL	Oscilloscope	See below	

Connections of M. EQ.

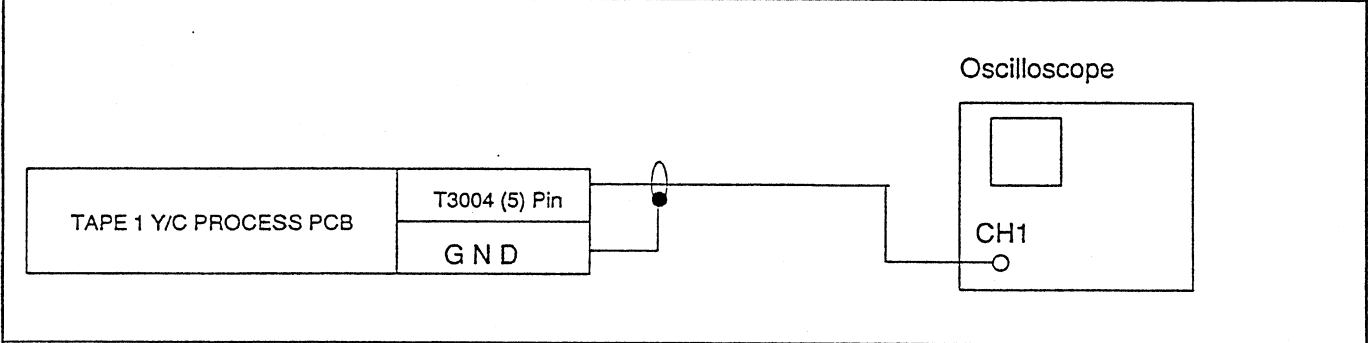

Figure

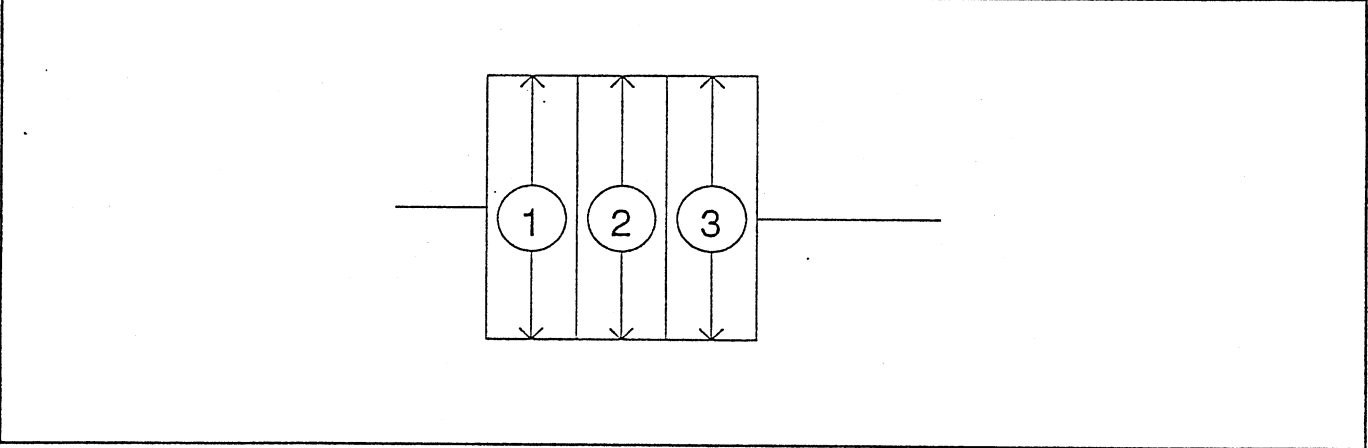


- Reference Notes:
- 1. Connect equipments as shown in the above table.
 - 2. TAPE 1 Color system switch= Auto Mode.
 - 3. Playback test tape adjust T3003 to make the same voltage at ①, ② and ③.


SECAM-L PB F-V DETECTOR

Test Point	Adj. Point	Mode	Input
IC3005 (8) Pin or (12) Pin (SECAM-L PB F-V DETECTOR)GND	VR3094 (SECAM-L PB F-V DETECTOR) (TAPE 1 Y/C PROCESS PCB)	PLAY	---
Tape	M. EQ.	Spec.	
F7-BELL	Oscilloscope TV Monitor	See below	

Connections of M. EQ.

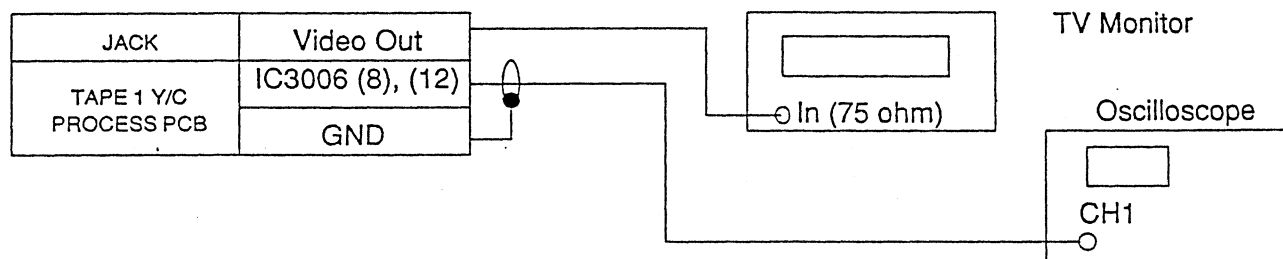

Figure

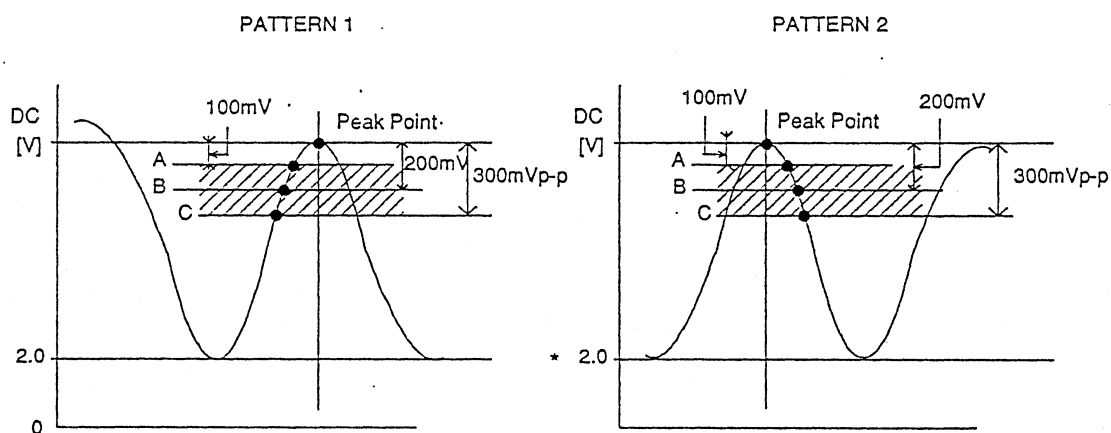

Note :

- From Peak Point to A Point ----- : No colored Area
- From A Point to C Point ----- : Colored Area
- B Point ----- : Peak of Colored Area
- Below of C Point ----- : No colored Area


Reference Notes:*

1. Connect equipments as shown in the above table.
2. TAPE 1 Color system switch = Auto Mode.
3. Turn the VR3094 slowly to be obtained the Peak Point to Maximum.
Then hold about 2 seconds, and turn the VR3094 again to be obtained the specification as shown in the above table.


H. BLANKING ADJUSTMENT

Test Point	Adj. Point	Mode	Input
J35 (V-OUT)	VR3007 (BPP) (TAPE 1 Y/C PROCESS PCB)	P.B	---
Tape	M. EQ.	Spec.	
F7-A	Oscilloscope	$1.2\mu\text{sec} \pm 0.2\mu\text{sec}$	

Connections of M. EQ.

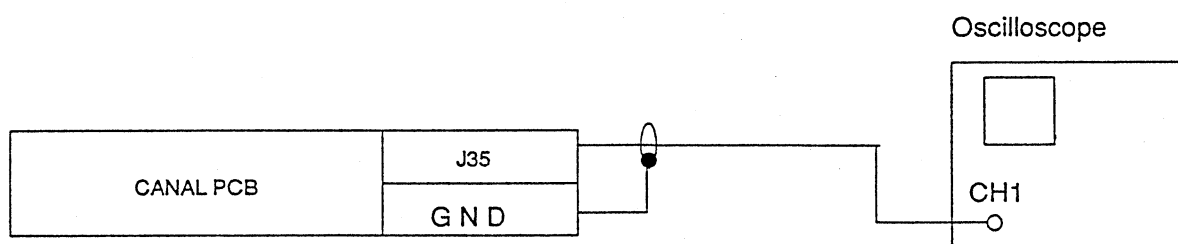

Figure

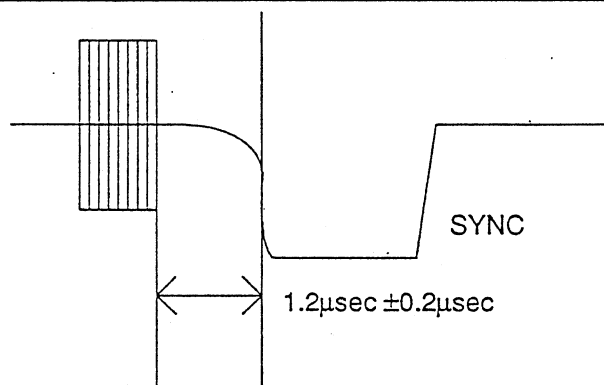


Reference Notes:

1. Connect equipments as shown in the above table.
2. TAPE 1 Color system switch = Auto Mode.
3. Playback test tape and adjust VR3007 so that the H.BLANKING becomes $1.2\mu\text{sec} \pm 0.2\mu\text{sec}$.

AUDIO OUTPUT LEVEL ADJUSTMENT

Test Point	Adj. Point	Mode	Input
J65 (A-OUT) J80 GND A	VR4002 (A-OUT) (TAPE 1 MAIN PCB)	PLAY	---
Tape	M. EQ.	Spec.	
F6-A	AC Voltmeter (RMS)	See Below	

Connections of M. EQ.

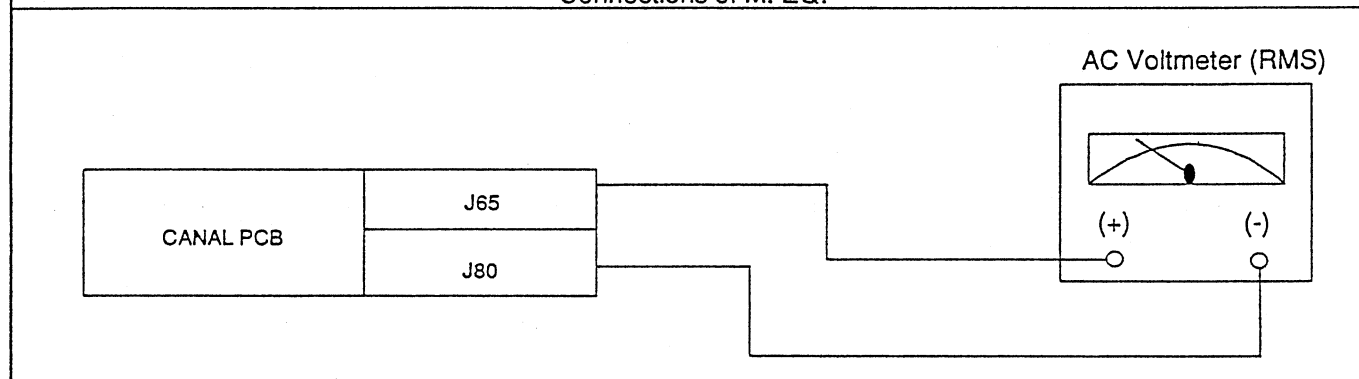

Reference Notes:

1. Connect equipment as shown in the above table.
2. Playback the test tape by Cass. 2, while measuring the audio output level.
Then playback the same test tape by Cass. 1, while measuring the same test tape level.
3. Adjust VR4002 so that both audio output level is equal.

ELECTRICAL ADJUSTMENT INSTRUCTIONS [TAPE 2]

NOTE:

Electrical adjustment are required after replacing circuit components and certain mechanical parts. It is important to perform these adjustments only after all repairs and replacements have been completed. Also, do not attempt these adjustments unless the proper equipment is available.


TEST EQUIPMENT REQUIRED

1. Oscilloscope: Dual-trace with 10:1 probe.
2. TV Monitor
3. Pattern Generator (Color bar with 100% white)
4. AC Voltmeter (RMS)
5. Test Tape F6-A, F7-A, F7-BELL
6. Spectrum Analyzer, Frequency Counter
7. SECAM Video Analyzer


HEAD SWITCHING POSITION ADJUSTMENT

Test Point	Adj. Point	Mode	Input
J71 (V-OUT) J49 (RF-SW) GND	VR2101 (Switching Point) (TAPE 2 MAIN PCB)	PLAY	---
Tape	M. EQ.	Spec.	
F6-A	Oscilloscope	6.5H(416 μ s)	

Connections of M. EQ.

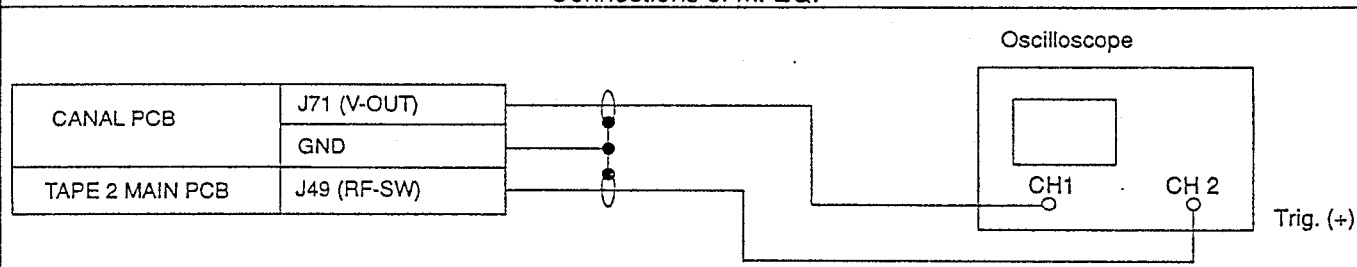

Figure

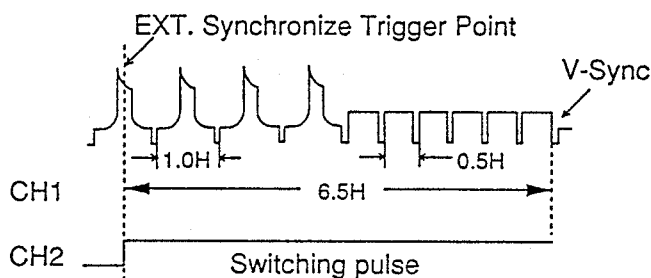


Reference Notes:

1. Connect equipments as shown in the above table.
2. Set the input trigger mode to CH2 and set trigger slope to (+).
3. Adjust the Tracking control to its center position. Press + and - of Tracking control Button at same time.
4. Playback the test tape and adjust VR2101 so that the V-sync front edge of CH1 video output waveform is delayed 6.5H(416 μ s) from the rising of CH2 Head Switching pulse waveform.


E-E LEVEL ADJUSTMENT

Test Point	Adj. Point	Mode	Input
J71 (V-OUT) GND	VR3003 (E-E) (TAPE 2 Y/C PROCESS PCB)	E-E	Color Bar signal with 100% White
Tape	M. EQ.	Spec.	
----	Pattern Generator TV Monitor Oscilloscope	1.0Vp-p \pm 0.05V	

Connections of M. EQ.

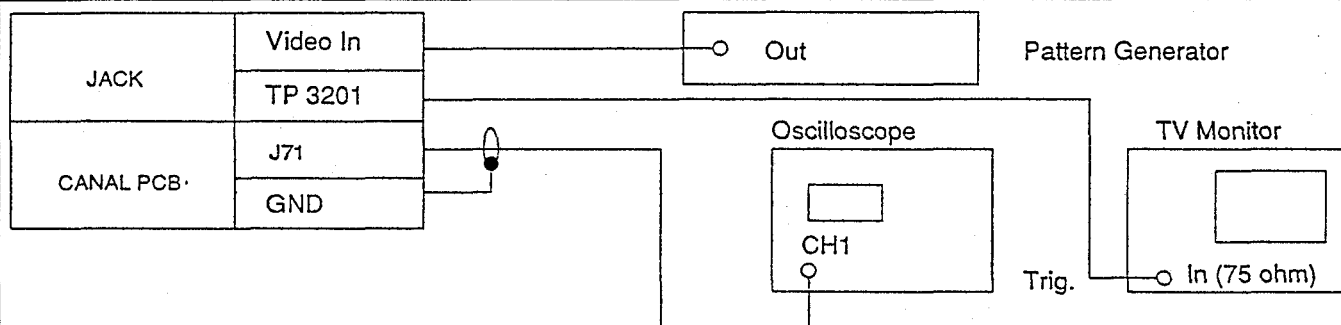

Figure

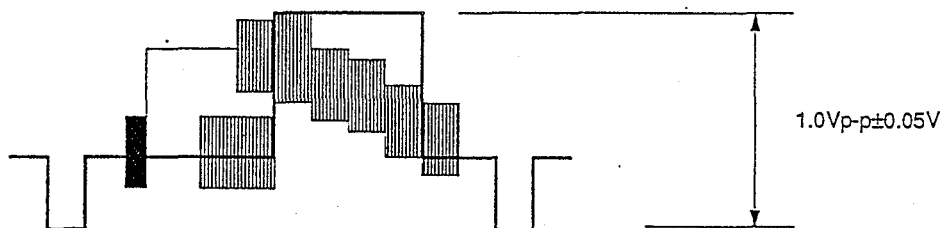


Reference Notes:

1. Connect equipments as shown in the above table.
2. TAPE 2 Color system switch= Auto Mode.
3. Input Color Bar signal with 100% White to Video Input.
4. Adjust VR3003 so that the video level becomes 1.0Vp-p \pm 0.05V.


FM CARRIER DEVIATION ADJUSTMENT

Test Point	Adj. Point	Mode	Input
J41 (Y-REC)	VR3004 (CRR) VR3005 (DEV) (TAPE 2 Y/C PROCESS PCB)	REC (SP)	Blank Tape Color Bar signal with 100% White
Tape	M. EQ.	Spec.	
Blank Tape	Pattern Generator Spectrum Analyzer Oscilloscope	Sync-tip to $3.8\text{MHz} \pm 0.05\text{MHz}$ White-peak to $4.8\text{MHz} \pm 0.05\text{MHz}$	

Connections of M. EQ.

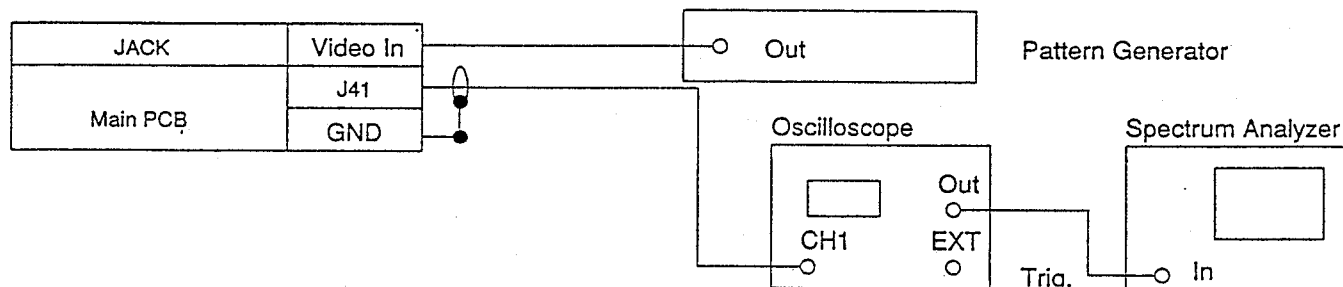

Figure

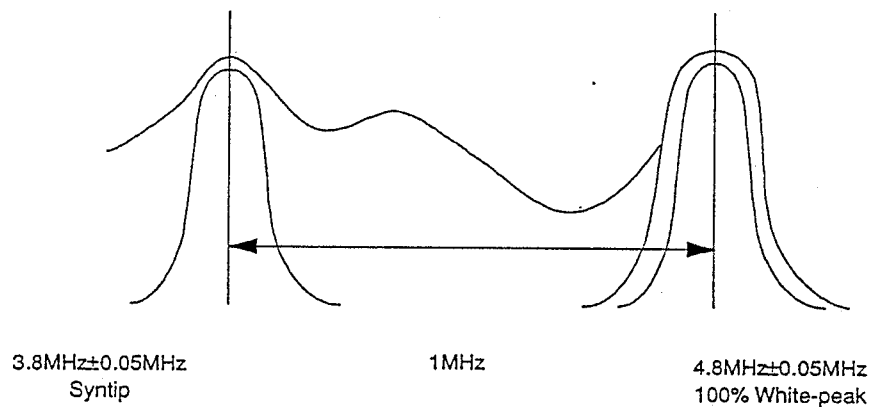


Reference Notes:

1. Connect equipments as shown in the above table.
2. TAPE 2 Color system switch= Auto Mode.
3. Input Color Bar signal with 100% White to Video Input.
4. Adjust Sync-tip to $3.8\text{MHz} \pm 0.05\text{MHz}$ by VR3004, White-peak to $4.8\text{MHz} \pm 0.05\text{MHz}$ by VR3005.


PAL/SECAM F-V DETECTOR

Test Point	Adj. Point	Mode	Input
IC3006 (8)Pin or (12)Pin	VR3008 (PAL/SECAM REC SELECTOR) (TAPE 2 Y/C PROCESS PCB)	E-E	PAL Color Bar signal with 100% White
Tape	M. EQ.	Spec.	
---	Pattern Generator Oscilloscope	DC 2.45~2.5V	

Connections of M. EQ.

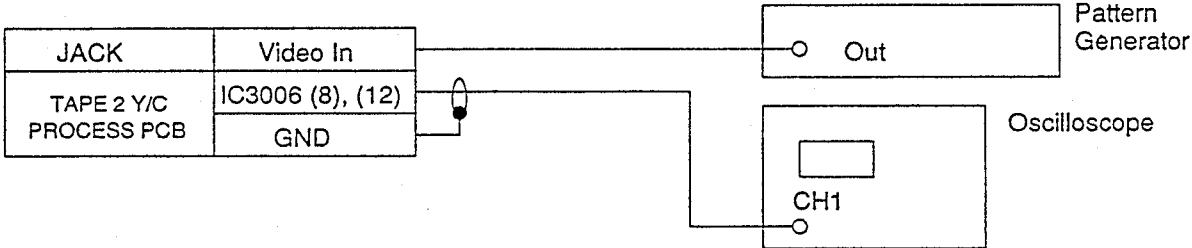

Figure

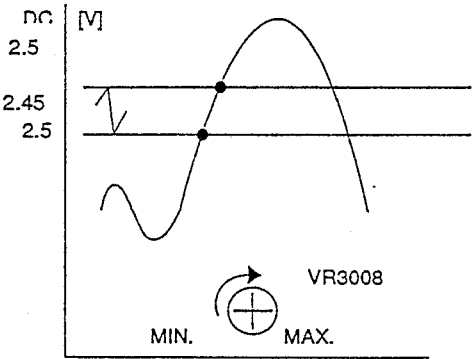


Reference Notes:

1. Connect equipments as shown in the above table.
2. TAPE 2 Color system switch= Auto Mode.
3. Adjust VR3008 so that the DC Voltage level becomes DC 2.45~2.5V.

REC. CURRENT ADJUSTMENT (PAL CHROMINANCE)

Test Point	Adj. Point	Mode	Input
J40 (C-REC) J49 (RF-SW)	VR3002 (PCR) (TAPE 2 Y/C PROCESS PCB)	REC	Blank Tape PAL Blue-green signal
Tape	M. EQ.	Spec.	
Blank Tape	Pattern Generator Oscilloscope	50mVp-p \pm 5%	

Connections of M. EQ.

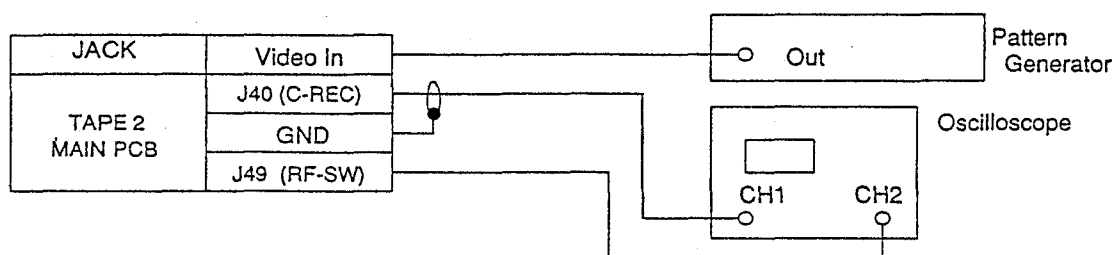

Figure




Reference Notes:

1. Connect equipments as shown in the above table.
2. TAPE 2 Color system switch= Auto Mode.
3. Input PAL Blue-green signal only to Video Input.
4. Adjust VR3002 so that chroma level becomes 50mVp-p \pm 5%.


REC. CURRENT ADJUSTMENT (SECAM CHROMINANCE)

Test Point	Adj. Point	Mode	Input
J40 (C-REC) J49 (RF-SW)	VR3006 (SCR) (TAPE 2 Y/C PROCESS PCB)	REC	Blank Tape SECAM Blue-green signal
Tape	M. EQ.	Spec.	
Blank Tape	Pattern Generator Oscilloscope	50mVp-p \pm 10%	

Connections of M. EQ.

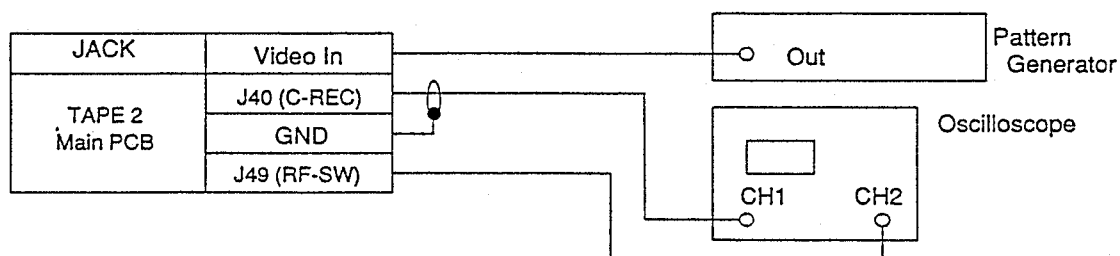

Figure

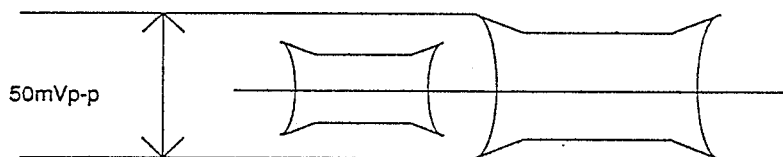


Reference Notes:

1. Connect equipments as shown in the above table.
2. TAPE 2 Color system switch= Auto Mode.
3. Input SECAM Blue-green signal only to Video Input.
4. Adjust VR3006 so that chroma level becomes 50mVp-p \pm 10%.


REC EQ ADJUSTMENT

Test Point	Adj. Point	Mode	Input
J40 (C-REC)	T3001 (REC EQ) (TAPE 2 Y/C PROCESS PCB)	REC	Blank Tape SECAM BELL signal
Tape	M. EQ.	Spec.	
Blank Tape	SECAM Video Analyzer Oscilloscope	See below	

Connections of M. EQ.

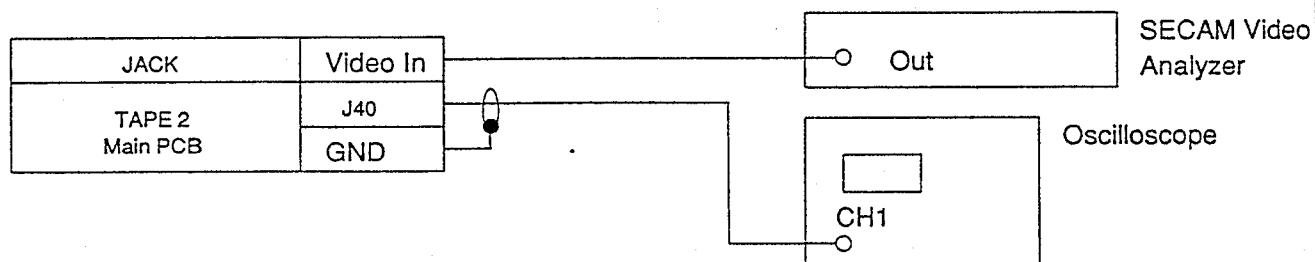

Figure

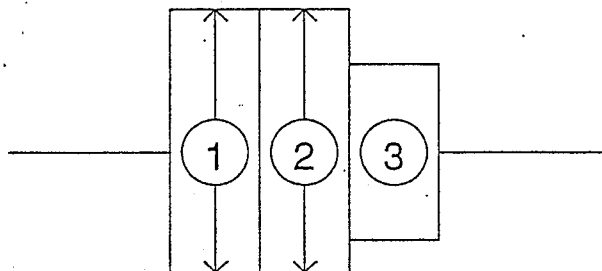


Reference Notes:

1. Connect equipments as shown in the above table.
2. TAPE 2 Color system switch= Auto Mode.
3. Input SECAM BELL signal to Video Input.
4. Adjust T3001 to make the same voltage at ① and ②.


REC BELL ADJUSTMENT

Test Point	Adj. Point	Mode	Input
TP3002 (REC BELL)	T3002 (REC BELL) (TAPE 2 Y/C PROCESS PCB)	REC	Blank Tape SECAM BELL signal
Tape	M. EQ.	Spec.	
Blank Tape	SECAM Video Analyzer Oscilloscope	See below	

Connections of M. EQ.

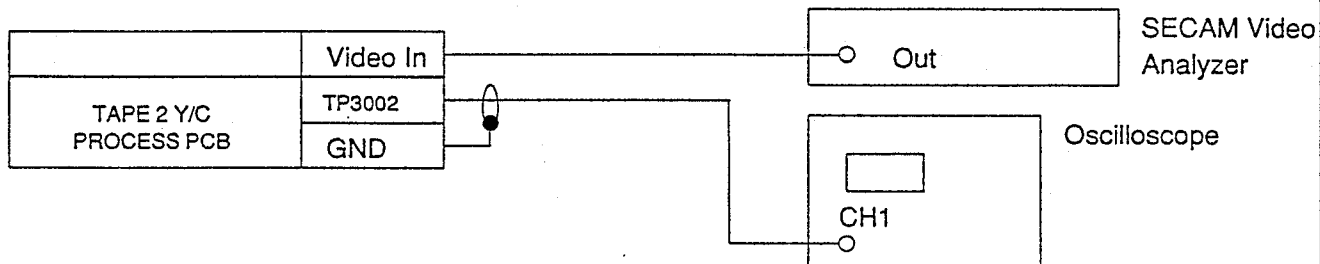

Figure

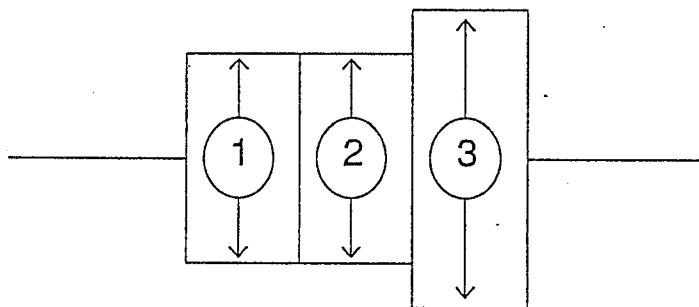


Reference Notes:

1. Connect equipments as shown in the above table.
2. TAPE 2 Color system switch= Auto Mode.
3. Input SECAM BELL signal to Video Input.
4. Adjust T3002 to make the same voltage at ① and ②.


P.B. OUTPUT LEVEL ADJUSTMENT

Test Point	Adj. Point	Mode	Input
J71 (V-OUT) GND	VR3009 (P.B.) (TAPE 2 Y/C PROCESS PCB)	PLAY	---
Tape	M. EQ.	Spec.	
F6-A	TV Monitor Oscilloscope	1.0Vp-p \pm 0.05V	

Connections of M. EQ.

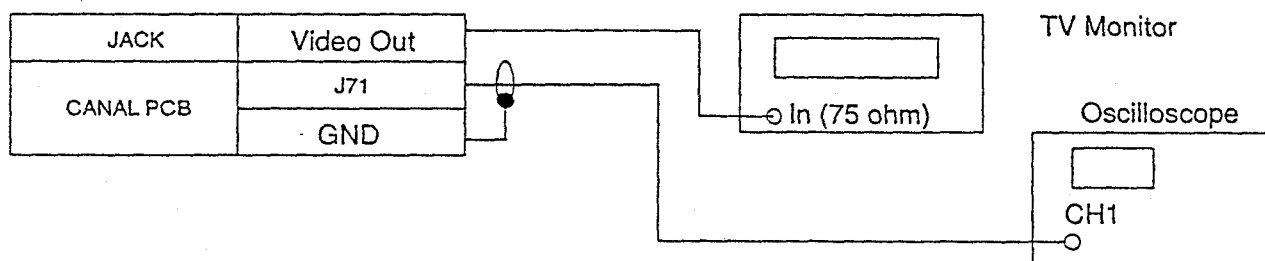

Figure

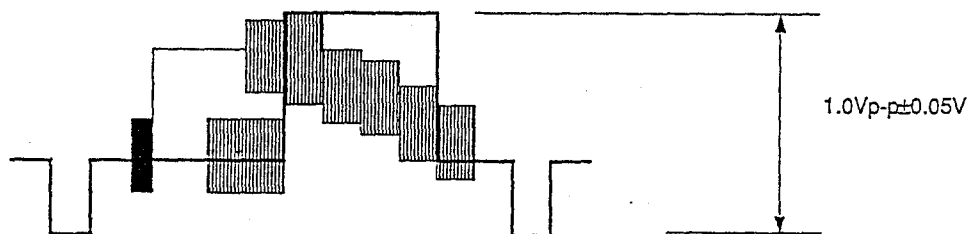


Reference Notes:

1. Connect equipments as shown in the above table.
2. TAPE 2 Color system switch= Auto Mode.
3. Adjust VR3009 so that the video level becomes 1.0Vp-p \pm 0.05V.


PB EQ ADJUSTMENT

Test Point	Adj. Point	Mode	Input
T3004 (5)Pin (PB EQ)	T3003 (PB EQ) (TAPE 2 Y/C PROCESS PCB)	P. B	---
Tape	M. EQ.	Spec.	
F7-BELL	Oscilloscope	See below	

Connections of M. EQ.

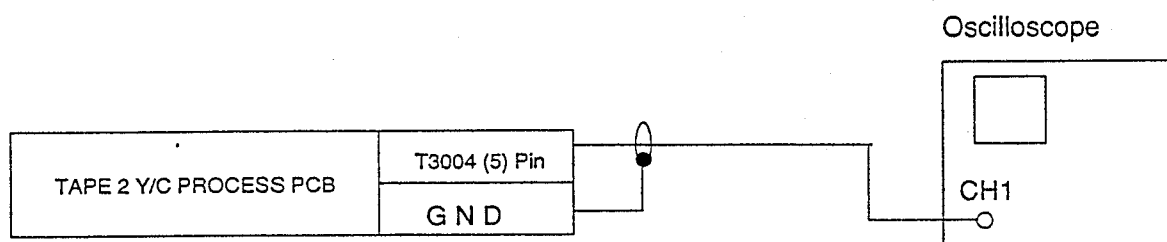

Figure

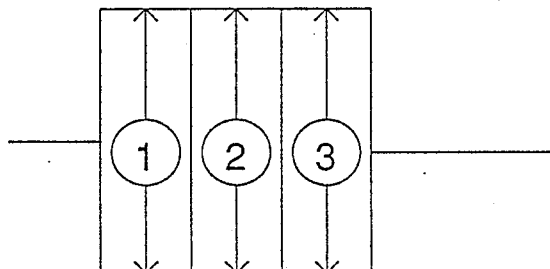


Reference Notes:

1. Connect equipments as shown in the above table.
2. TAPE 2 Color system switch= Auto Mode.
3. Playback test tape adjust T3003 to make the same voltage at ①, ② and ③.


SECAM-L PB F-V DETECTOR

Test Point	Adj. Point	Mode	Input
IC3005 (8) Pin or (12) Pin (SECAM-L PB F-V DETECTOR)GND	VR3094 (SECAM-L PB F-V DETECTOR) (TAPE 2 Y/C PROCESS PCB)	PLAY	---
Tape	M. EQ.	Spec.	
F7-BELL	Oscilloscope TV Monitor	See below	

Connections of M. EQ.

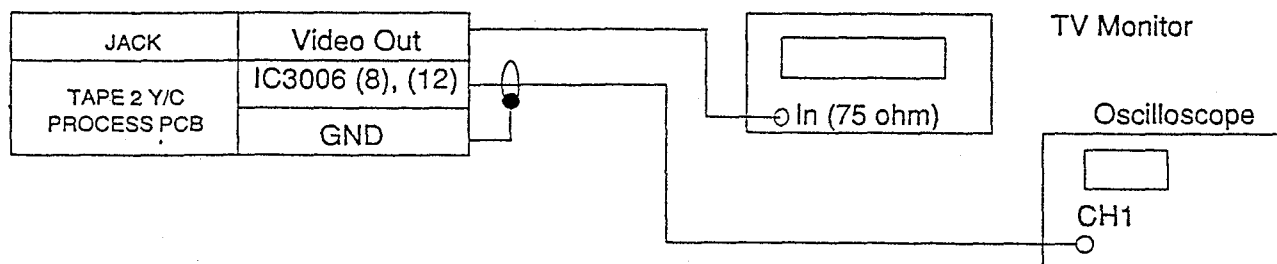

Figure

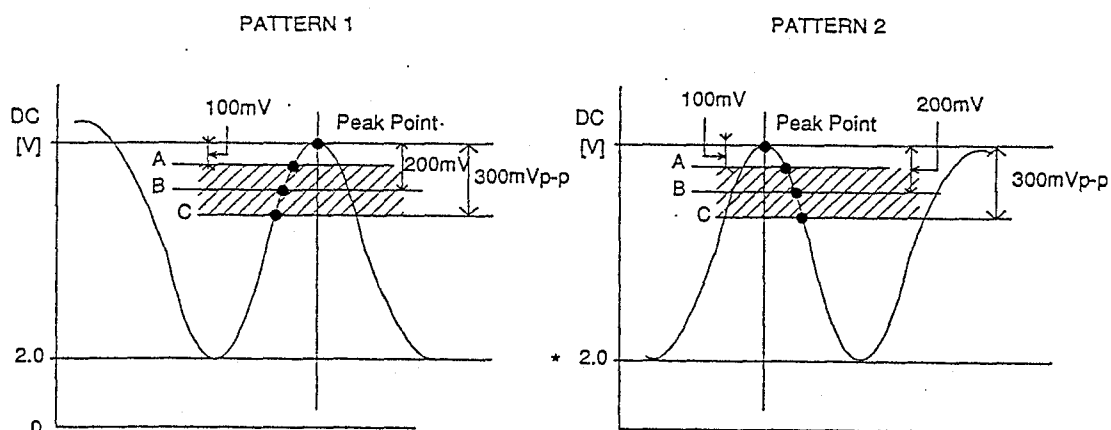

Note :

- From Peak Point to A Point ----- : No colored Area
- From A Point to C Point ----- : Colored Area
- B Point ----- : Peak of Colored Area
- Below of C Point ----- : No colored Area


Reference Notes:*

1. Connect equipments as shown in the above table.
2. TAPE 2 Color system switch = Auto Mode.
3. Turn the VR3094 slowly to be obtained the Peak Point to Maximum.
Then hold about 2 seconds, and turn the VR3094 again to be obtained the specification as shown in the above table.


H. BLANKING ADJUSTMENT

Test Point	Adj. Point	Mode	Input
J71 (V-OUT)	VR3007 (BPP) (TAPE 2 Y/C PROCESS PCB)	P.B	---
Tape	M. EQ.	Spec.	
F7-A	Oscilloscope	$1.2\mu\text{sec} \pm 0.2\mu\text{sec}$	

Connections of M. EQ.

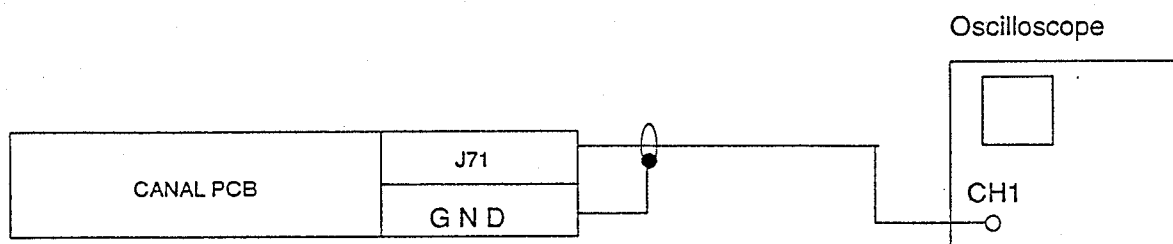

Figure

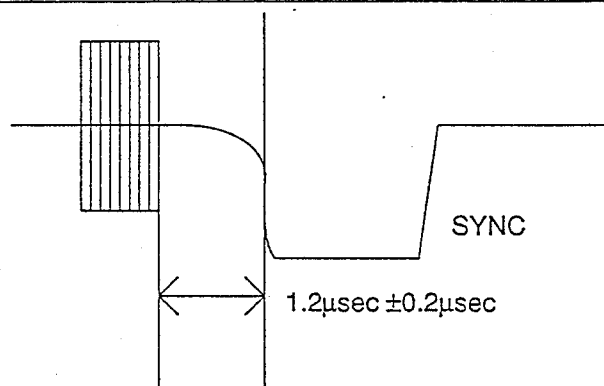

Reference Notes:

1. Connect equipments as shown in the above table.
2. TAPE 2 Color system switch = Auto Mode.
3. Playback test tape and adjust VR3007 so that the H.BLANKING becomes $1.2\mu\text{sec} \pm 0.2\mu\text{sec}$.

REC. BIAS CURRENT ADJUSTMENT

Purpose:

Set Optimum Record Audio Bias Level.

Symptom of Misadjustment:

If Audio Bias Level is too high, the Frequency Response deteriorates. If the level is too low, sound distortion may cause.

cause.

Test Point	Adj. Point	Mode	Input
J38 (BIAS +) J37 (BIAS -)	VR4101 (BIAS) (TAPE 2 Main PCB)	REC (SP)	---
Tape	M. EQ.	Spec.	
Blank Tape	AC Voltmeter (RMS)	24.0±0.5mV RMS	

Connections of M. EQ.

TAPE 2 Main PCB

J38

J37

AC Voltmeter (RMS)

(+)

(-)

Reference Notes:

1. Connect equipments as shown in the above table.
2. Insert a blank tape and set the VCR to REC mode.
(Do not set to PAUSE mode, the bias oscillation is stopped.)
3. Adjust VR4101 so that the voltage becomes 24±0.5mV RMS.

SCHEMATIC DIAGRAMS / C.B.A.S AND TEST POINTS

Standard Notes

WARNING


Many electrical and mechanical parts marked with in this chassis have special characteristics. These characteristics often pass unnoticed and the protection afforded by them cannot necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts that have these special safety characteristics are identified in this manual and its supplements; electrical components having such features are identified by the mark shown below in the schematic diagram and the parts list. Before replacing any of these components, read the parts list in this manual carefully. The use of substitute replacement parts that do not have the same safety characteristics as specified in the parts list may create shock, fire, or other hazards.

Capacitor Temperature Markings


Mark	Capacity change rate	Standard temperature	Temperature range
(B)	±10%	20°C	-25~+85°C
(F)	+30 -80%	20°C	-25~+85°C
(SR)	±15%	20°C	-25~+85°C
(Z)	+30 -80%	20°C	-10~+70°C

Note :


- 1 Do not use the part number shown on these drawings for ordering. The correct part number is shown in the parts list, and may be slightly different or amended since these drawings were prepared.
- 2 All resistance values are indicated in ohms ($K=10^3$, $M=10^6$).
- 3 Resistor wattages are 1/5W or 1/6W unless otherwise specified.
- 4 All capacitance values are indicated in μF ($P=10^{-6}\mu F$).
- 5 All voltages are DC voltages unless otherwise specified.
- 6 Voltage Indications for PB and REC modes on the Schematics are as shown below.

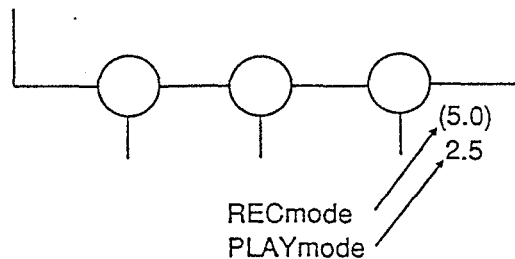

Capacitors and transistors are represented by the following symbols.

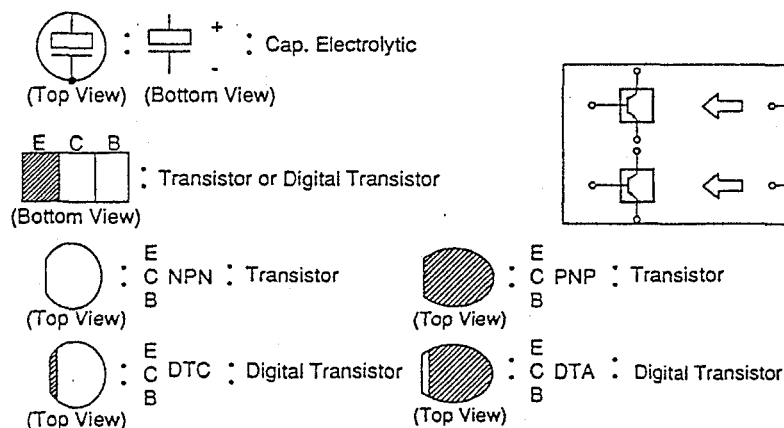


8	GND(T)
7	SBT1
6	STS1
5	SST1
4	GND(T)
3	AFT
2	SD
1	RENTAL ①

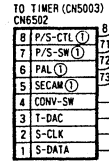 


All voltage are DC voltage
One voltage : PLAY mode with test tape F6-A
Two voltage : PLAY and (RECORD) mode with PAL color signal

TAPE 1 MAIN P.C.BOARD TOP VIEW

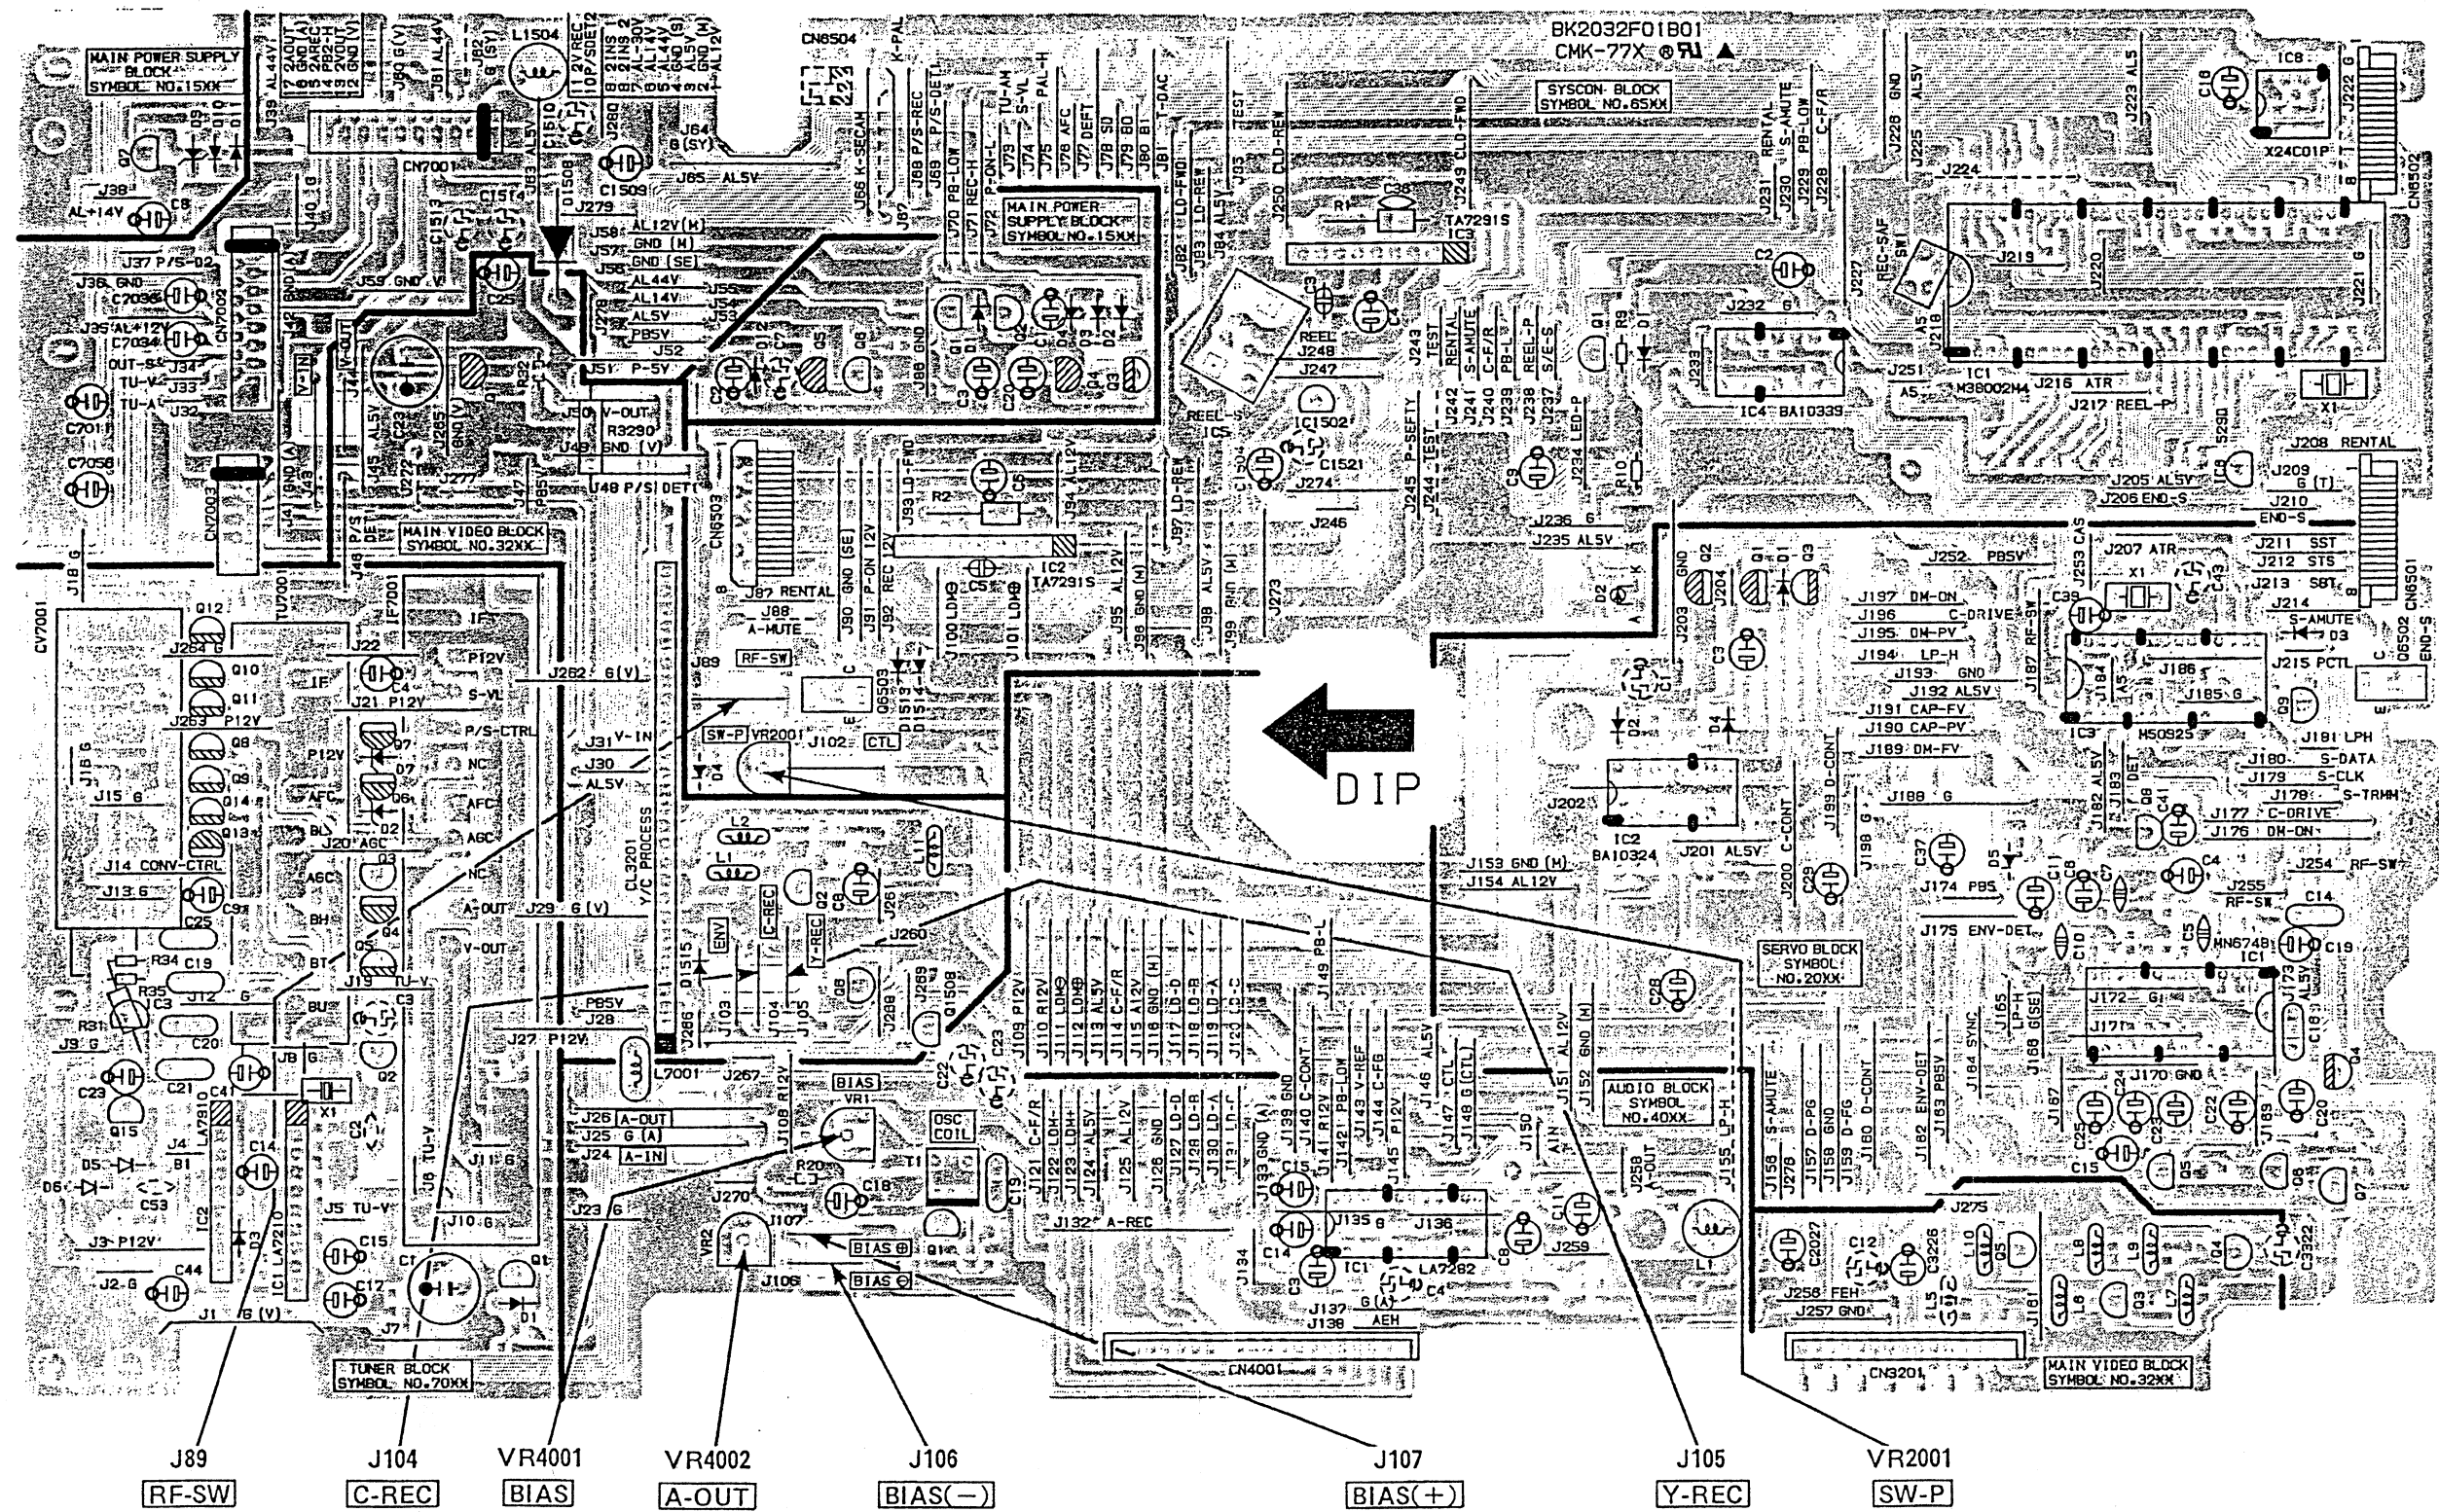


TAPE 1 MAIN P.C.BOARD BOTTOM VIEW

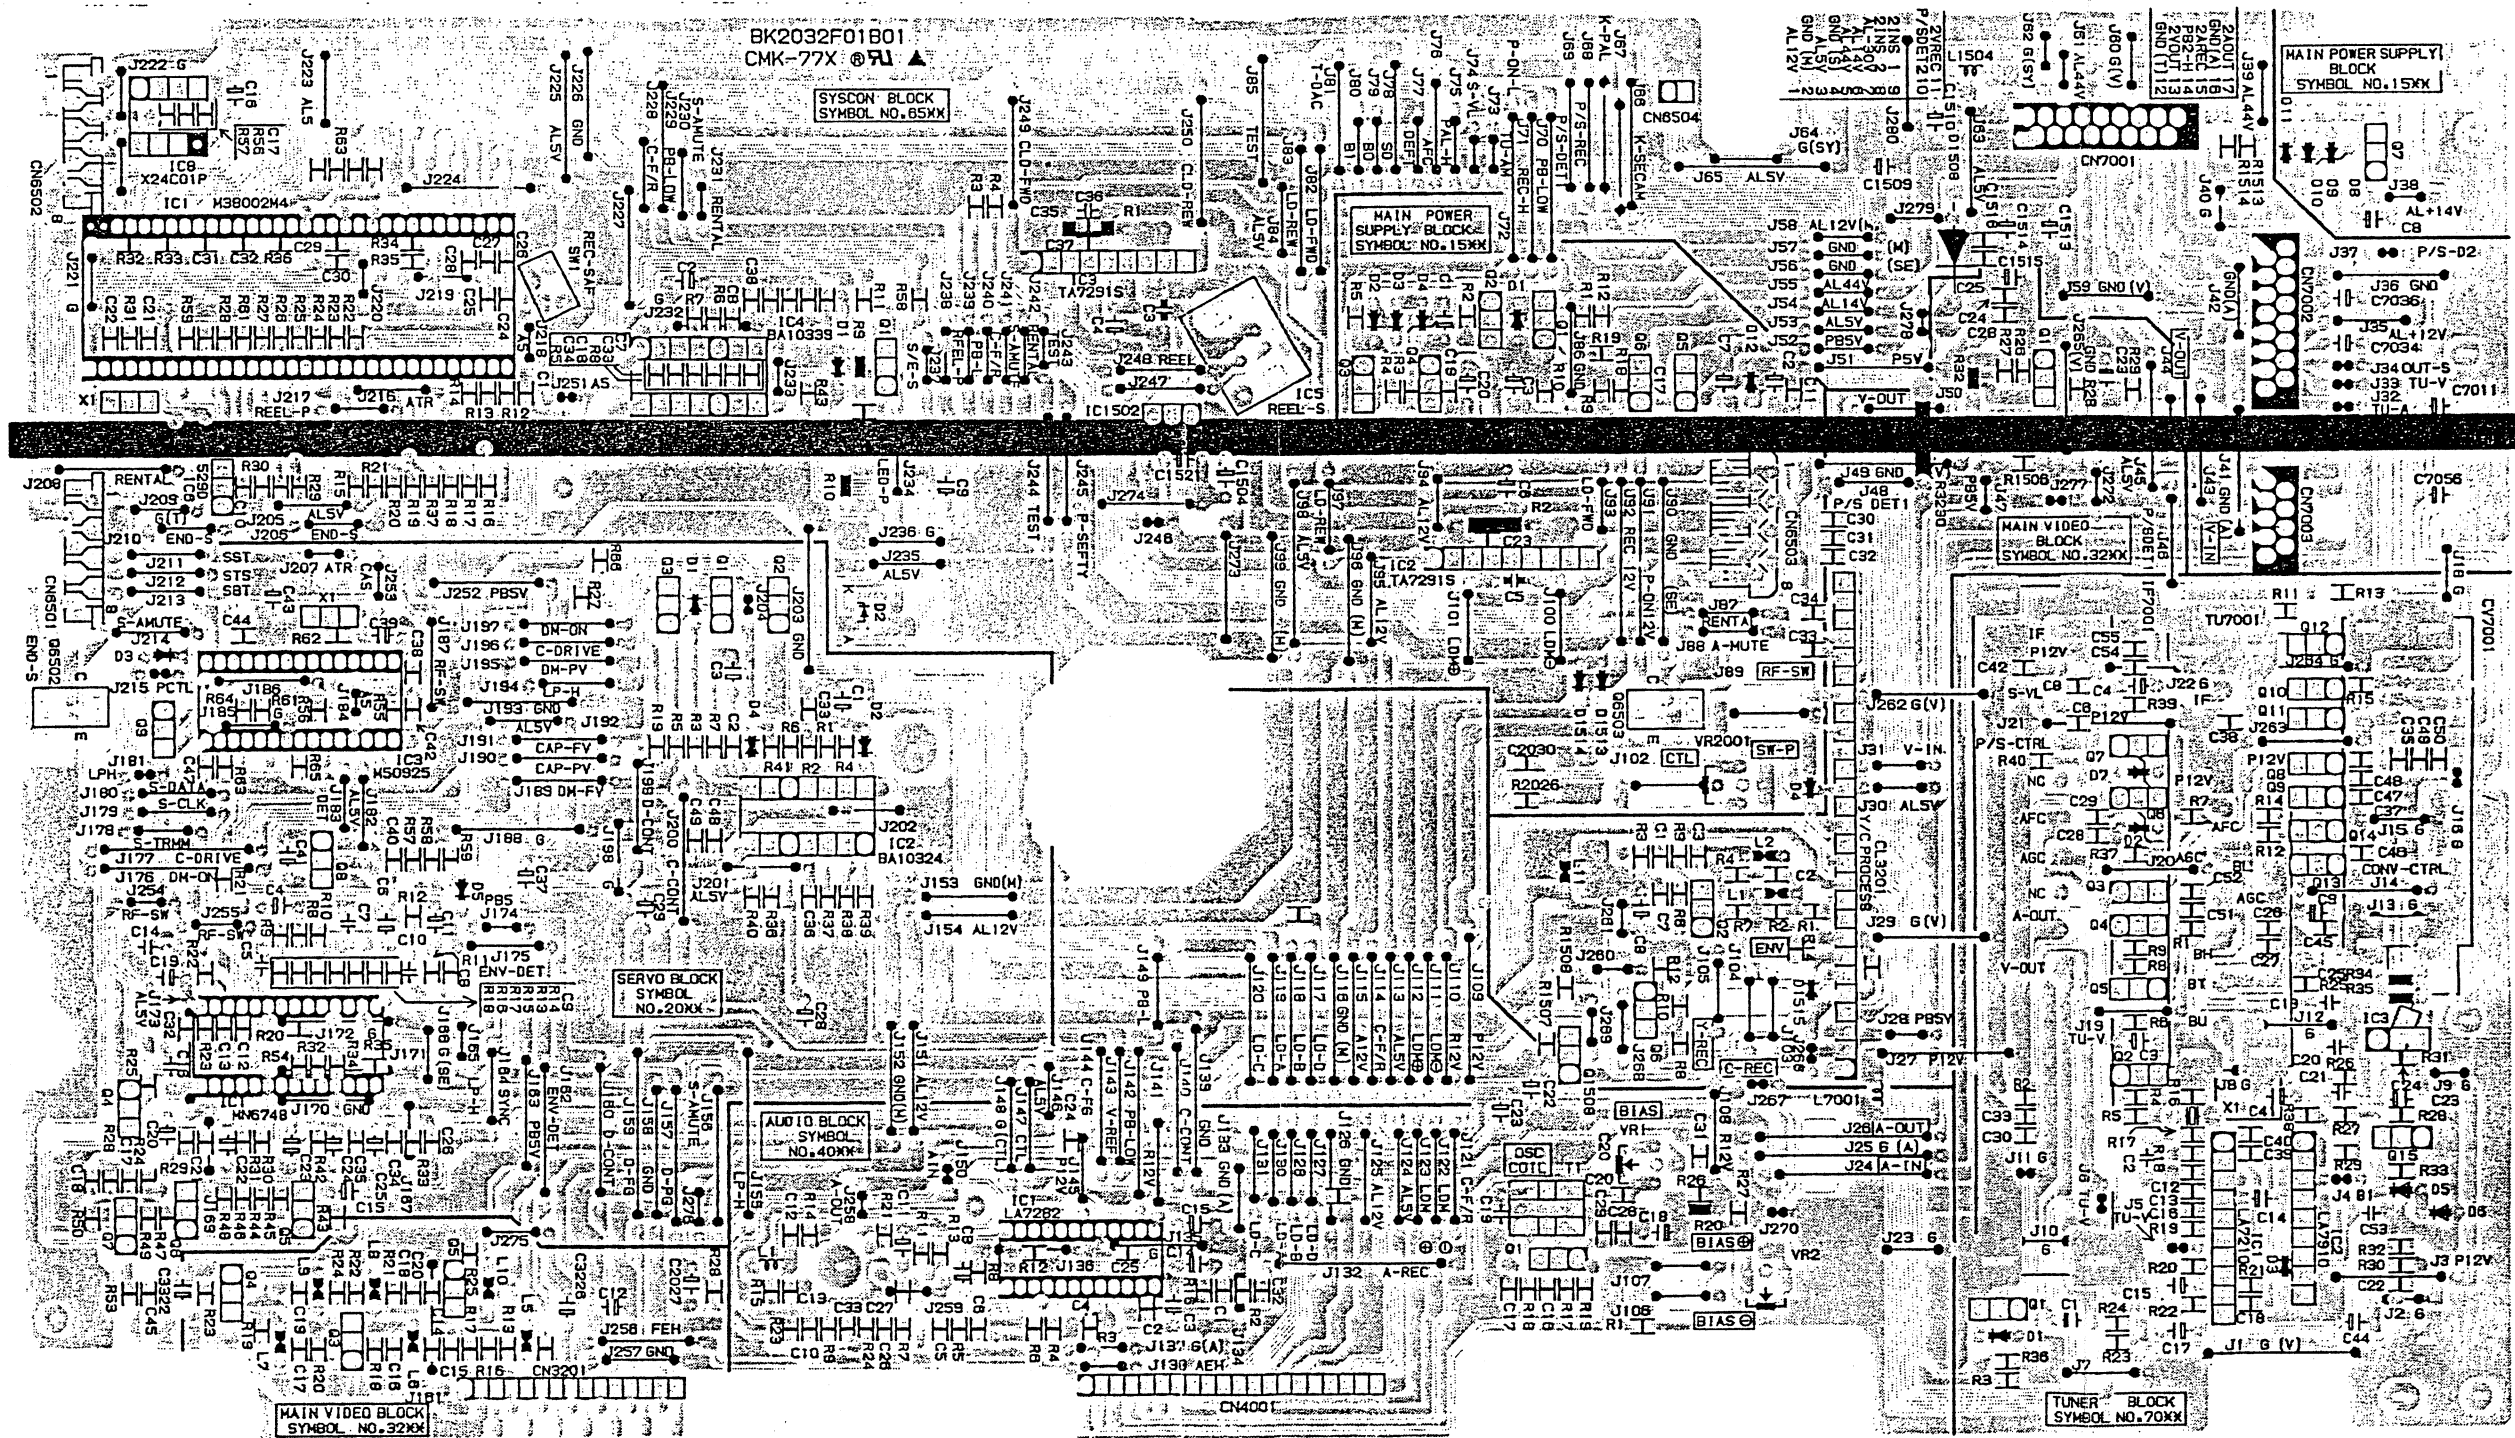


[illegible]

TAPE 2 MAIN P.C.BOARD TOP VIEW

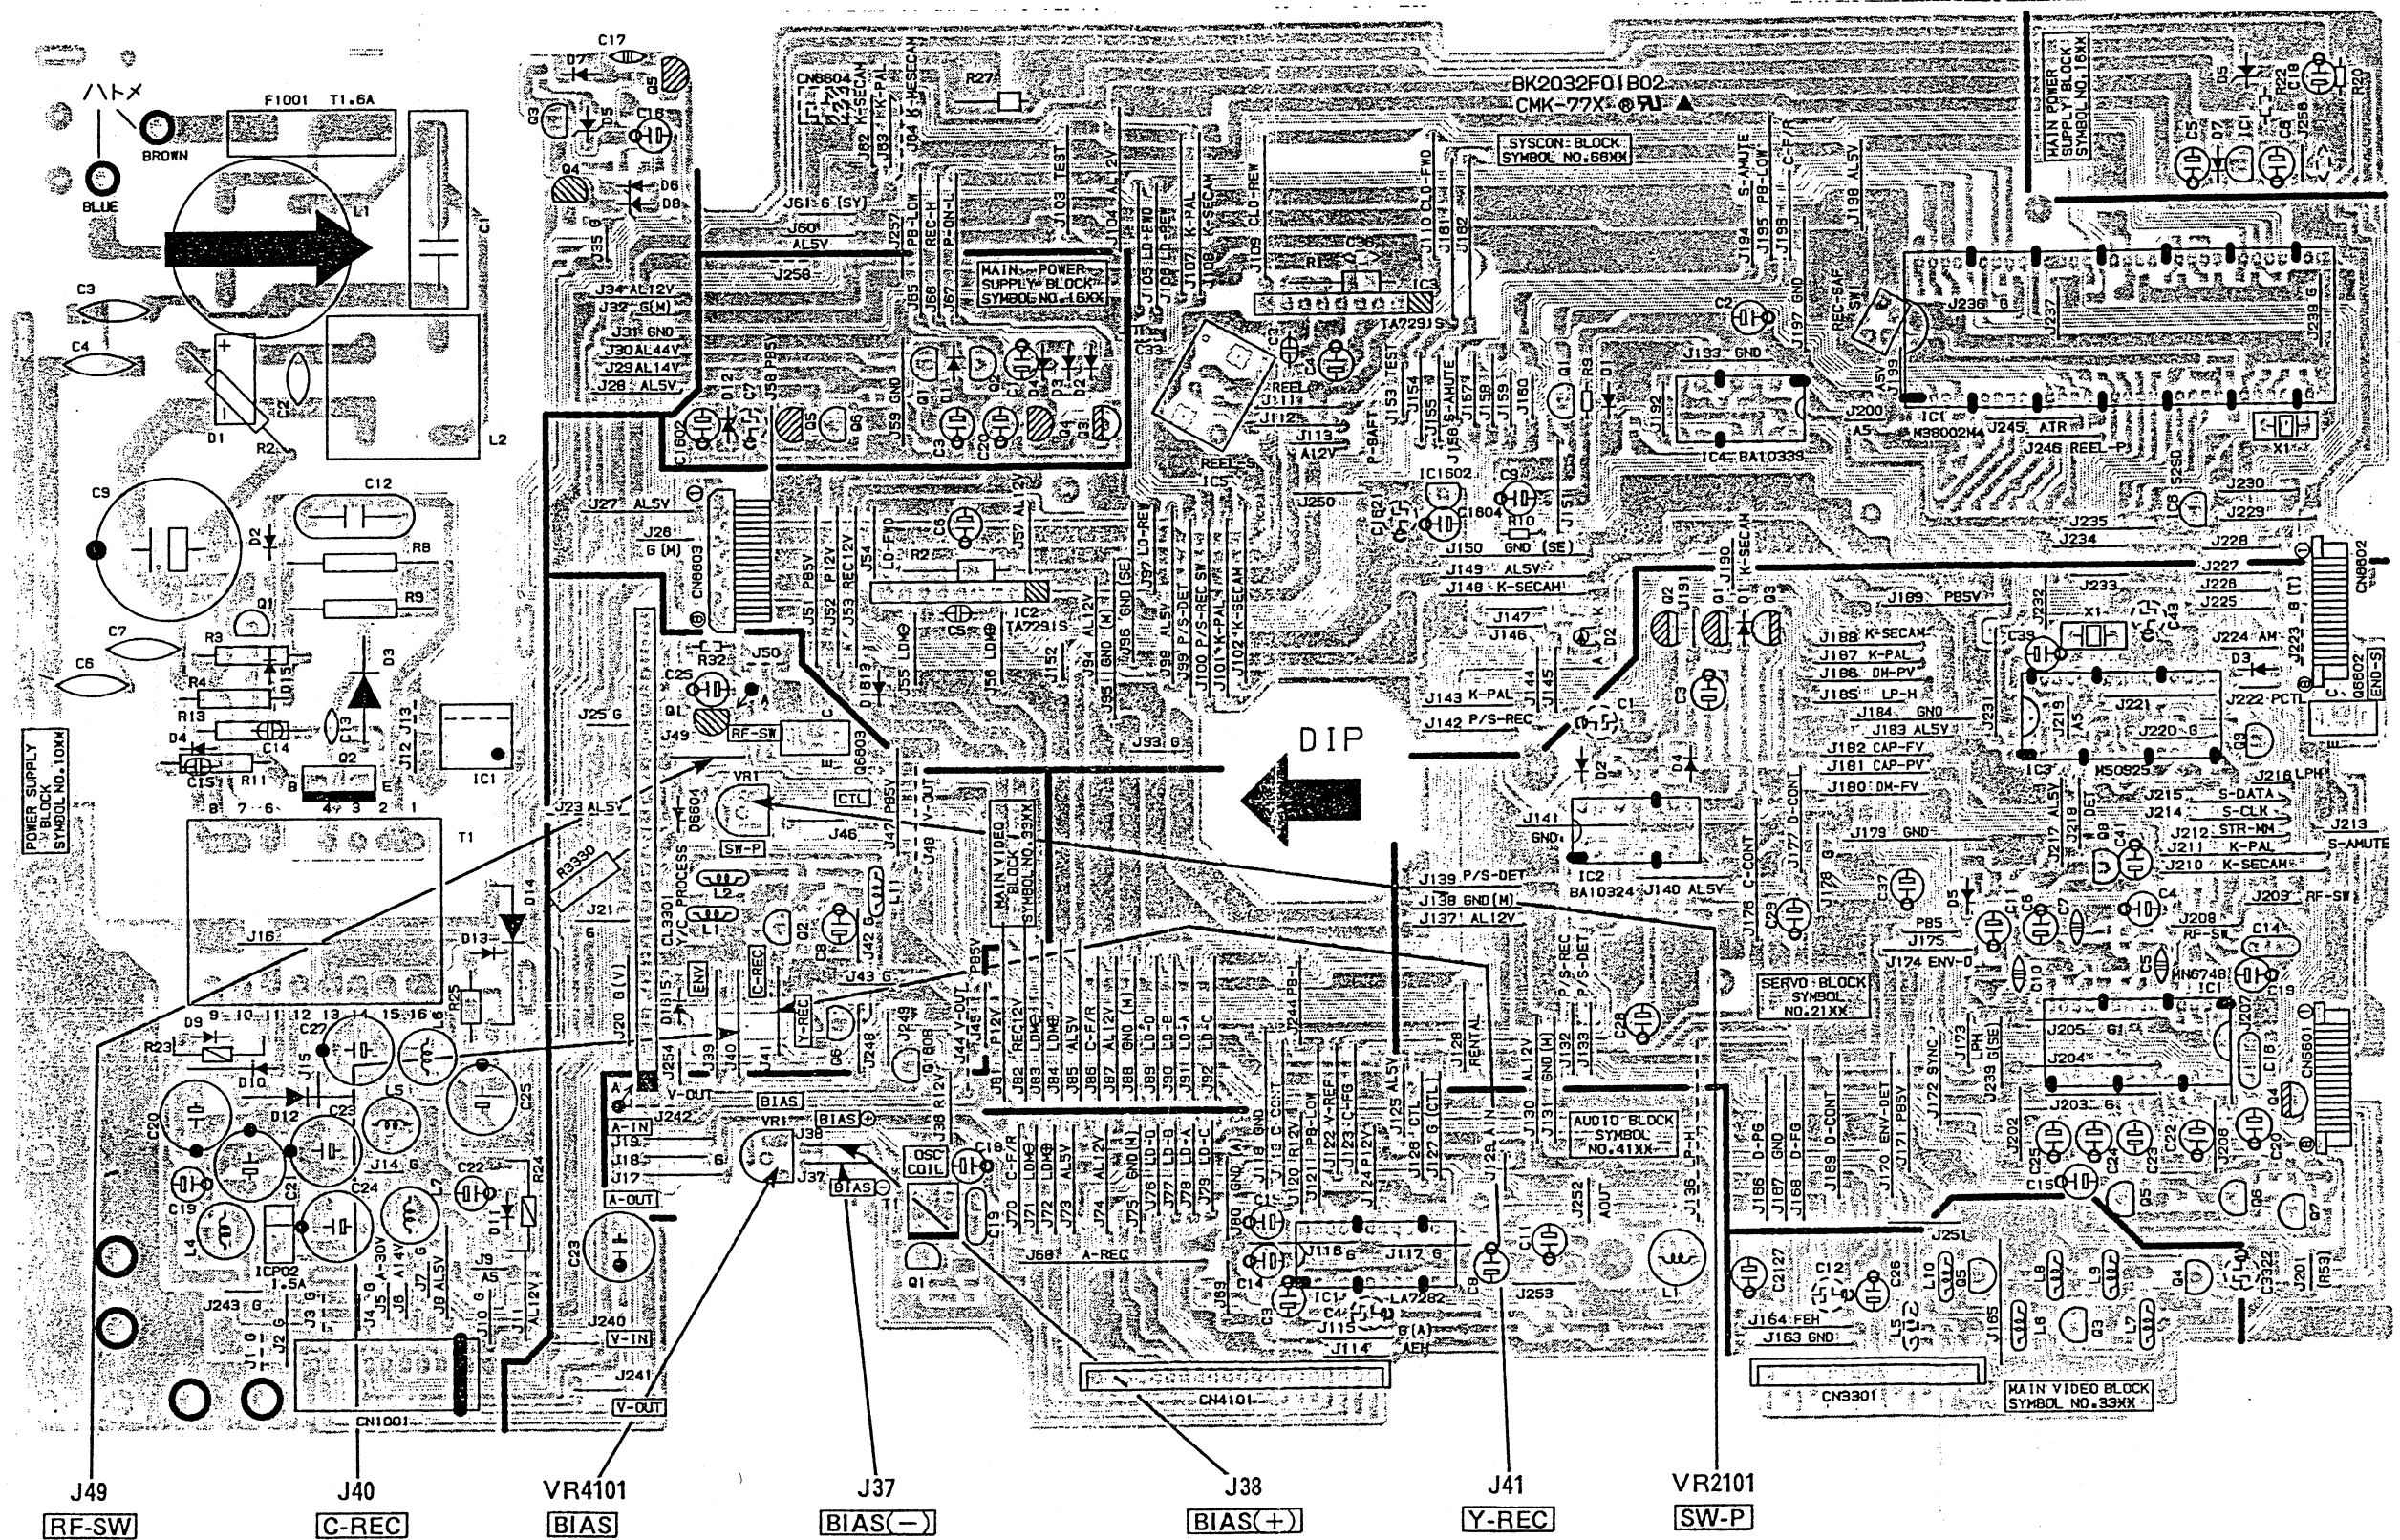



NOTE
ONE VOLTAGE ; PB OR REC MODE
TWO VOLTAGE ; PB AND REC MODE

 WF4,WF5,WF7

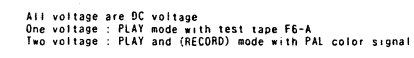


BOTTOM VIEW

TOP VIEW

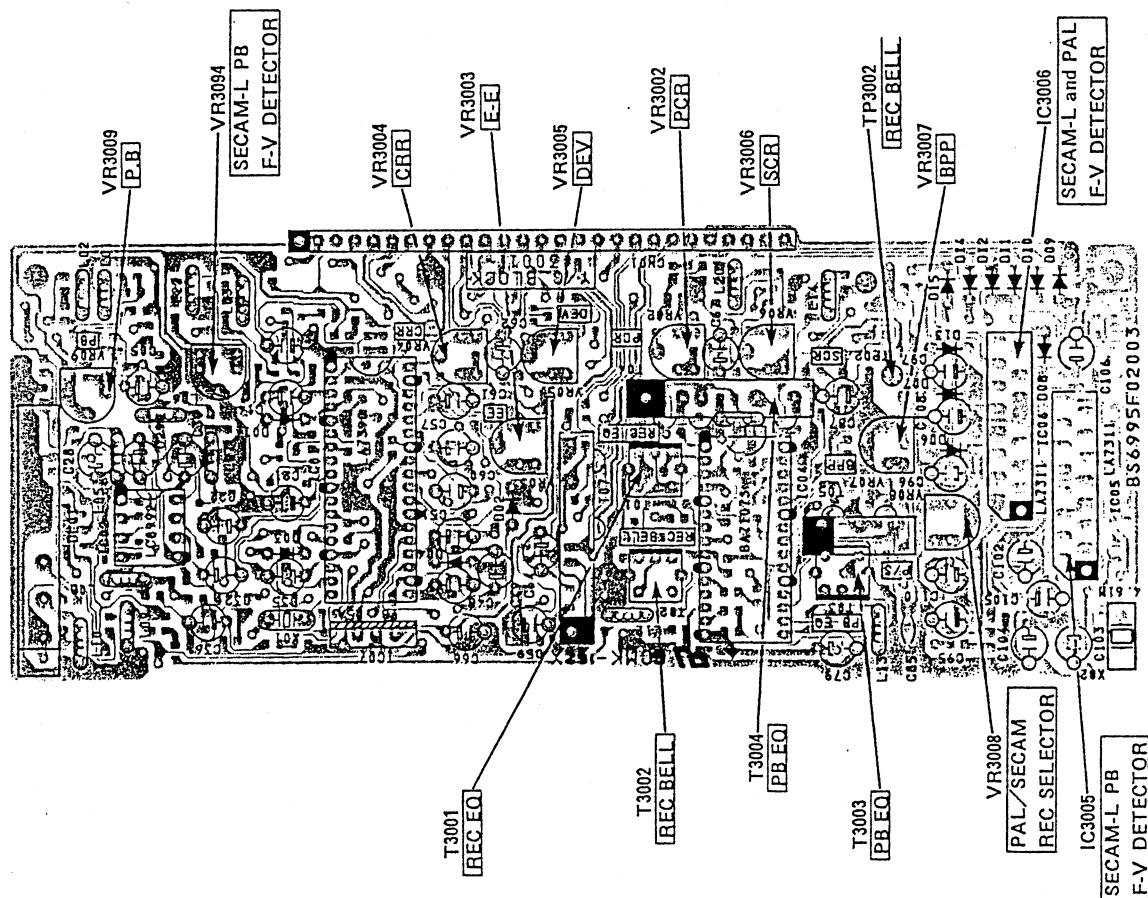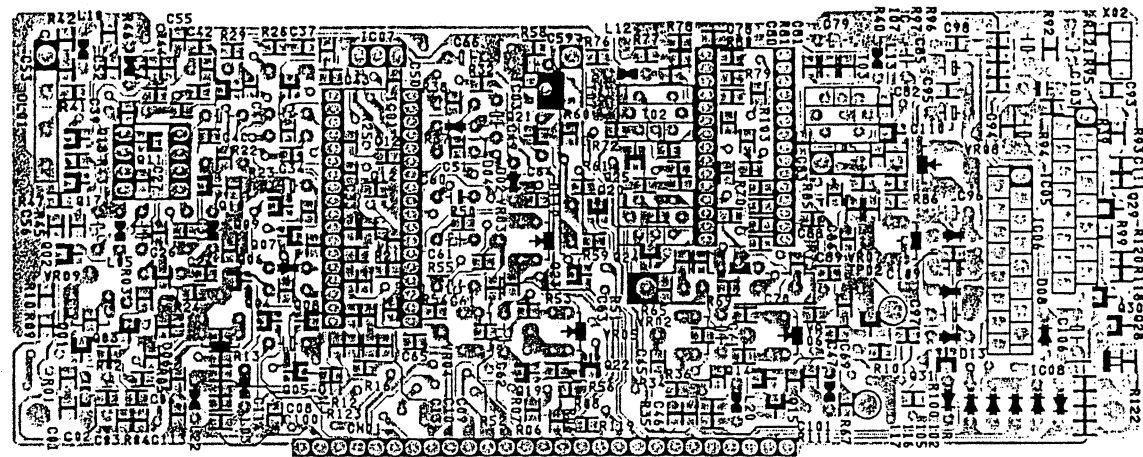


CANAL P.C.BOARD

TOP VIEW

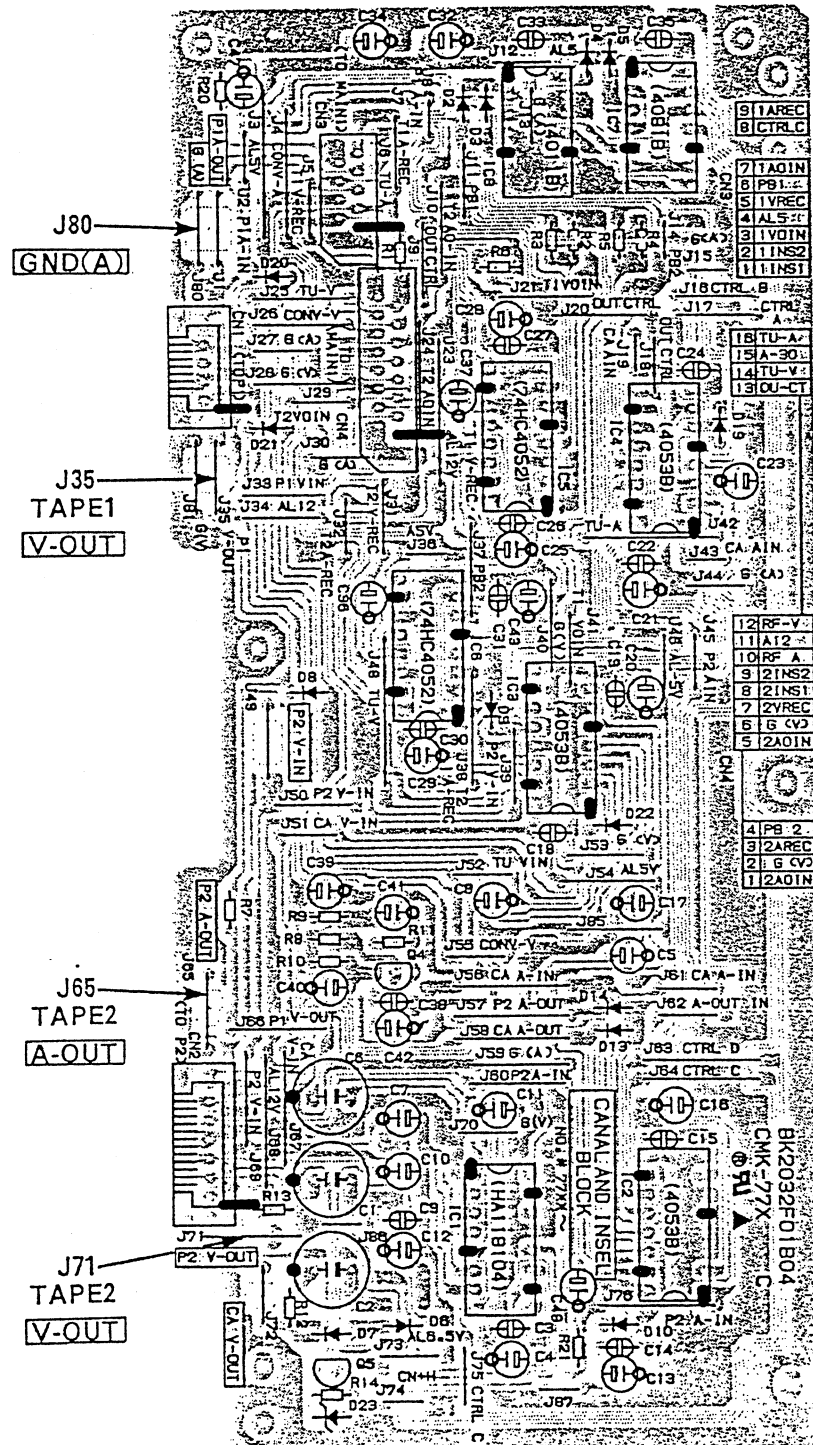


BOTTOM VIEW

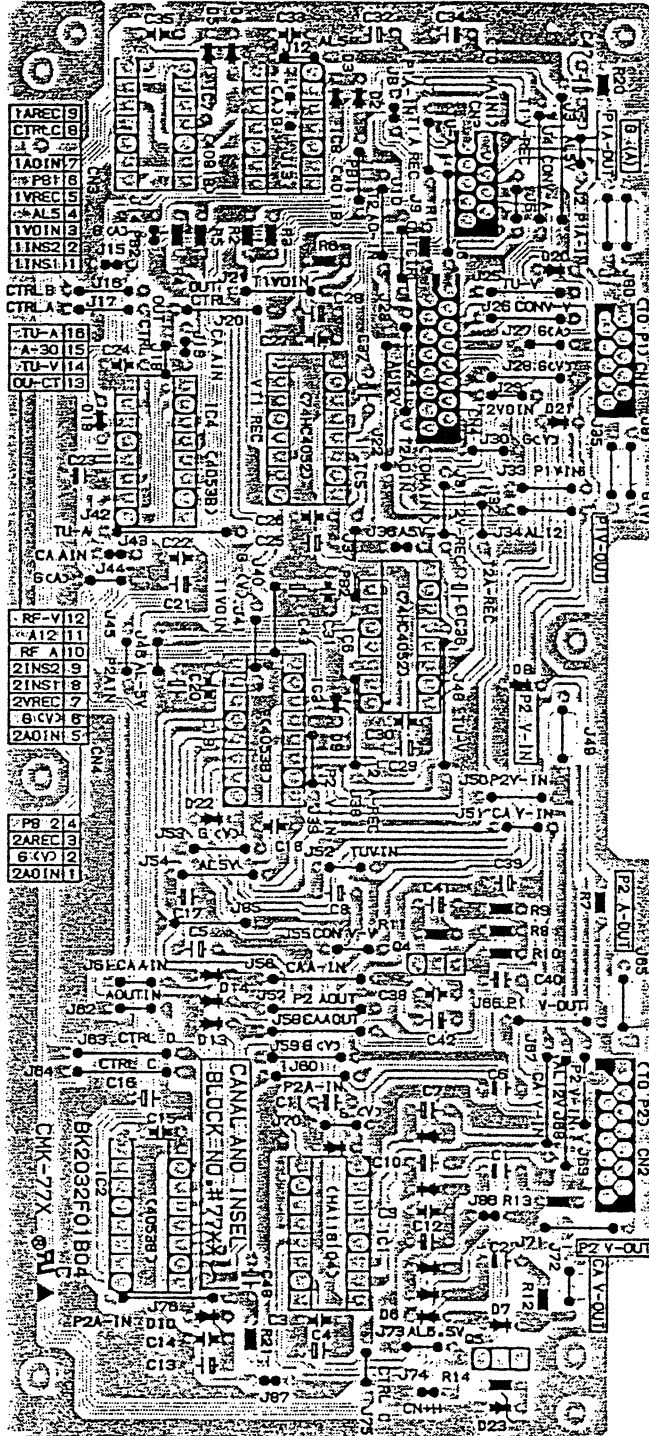


TAPE 1 JACK P.C.BOARD

TOP VIEW

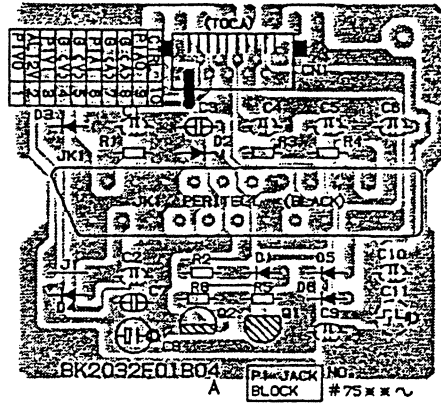

CMK-77X @ Φ Δ


BOTTOM VIEW

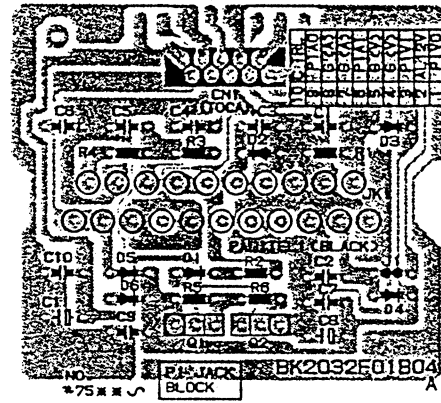


CMK-77X @ Φ Δ

TAPE 2 JACK P.C.BOARD

TOP VIEW

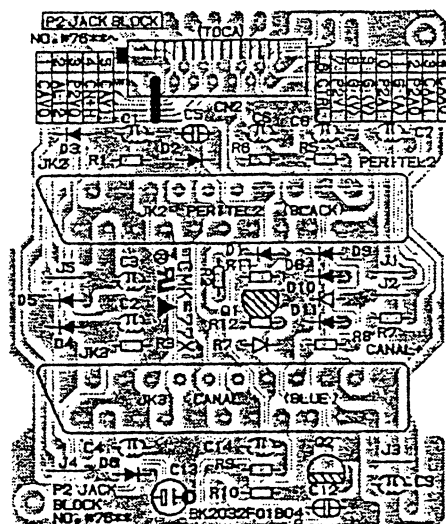


BOTTOM VIEW

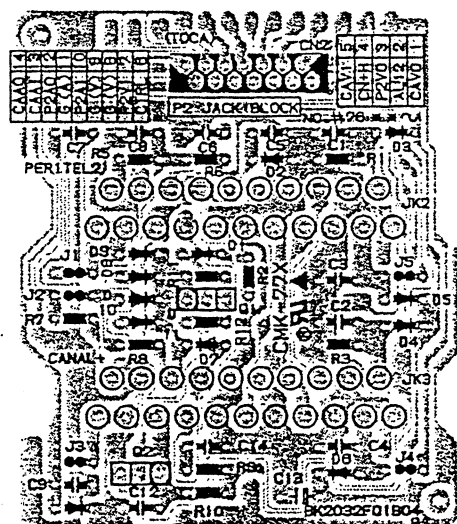

HEAD AMP SCHEMATIC DIAGRAM

HEAD AMP P. C. B.

SYMBOL NO. #35**

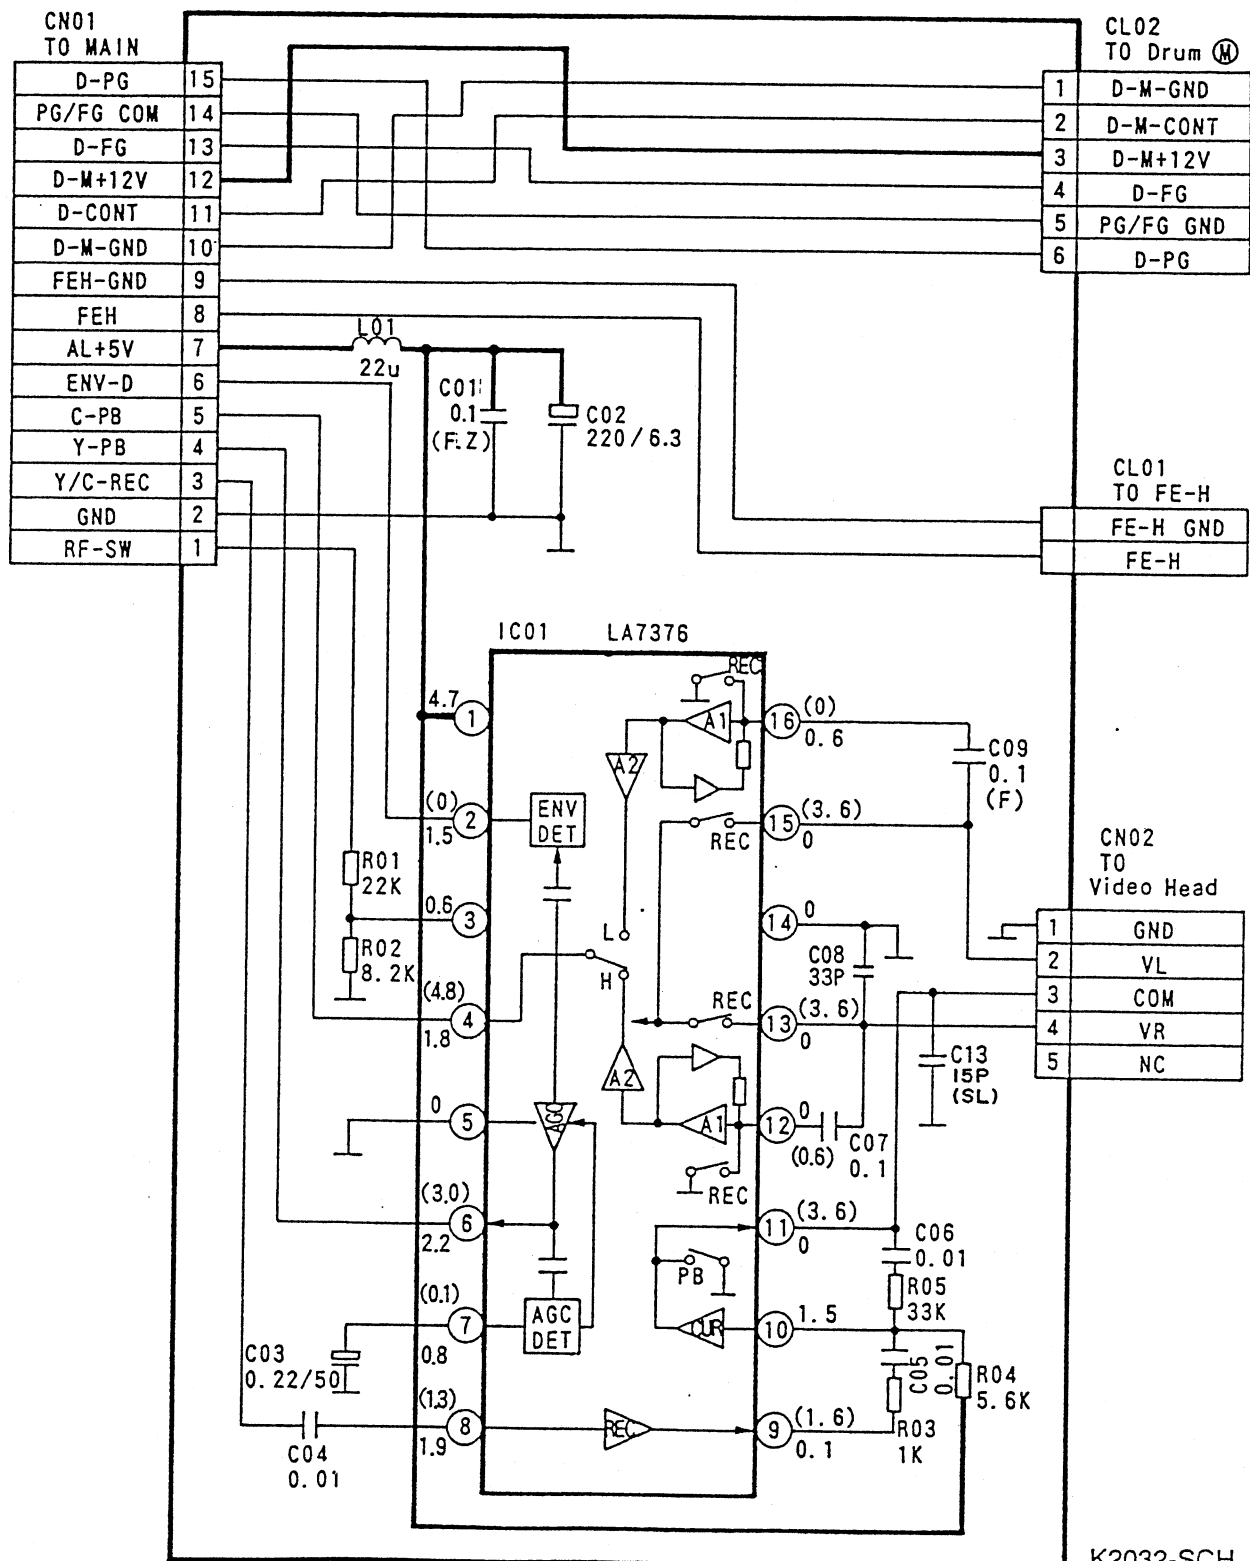


K2032-SCH


NORMARK:PLAY Mode
():REC Mode

HEAD AMP P.C.BOARD


TOP VIEW

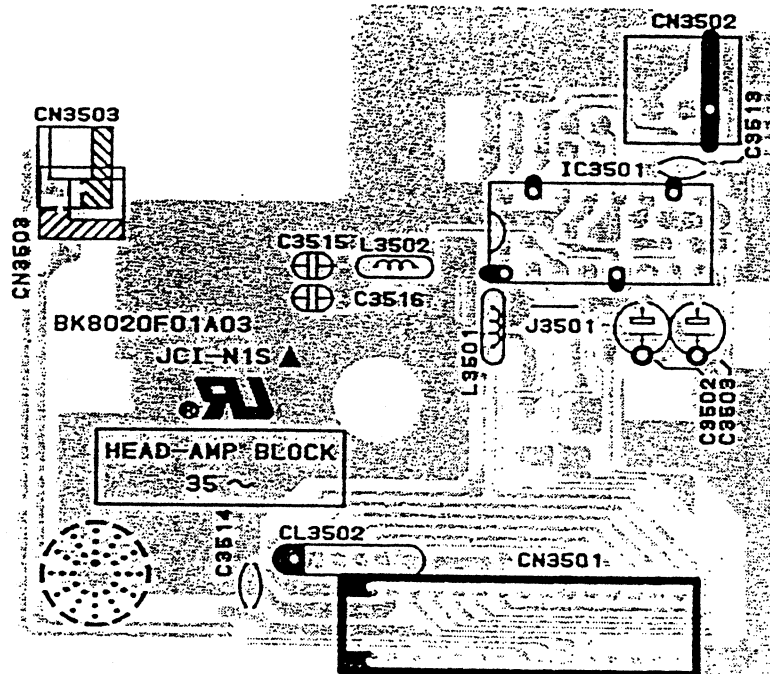


BOTTOM VIEW

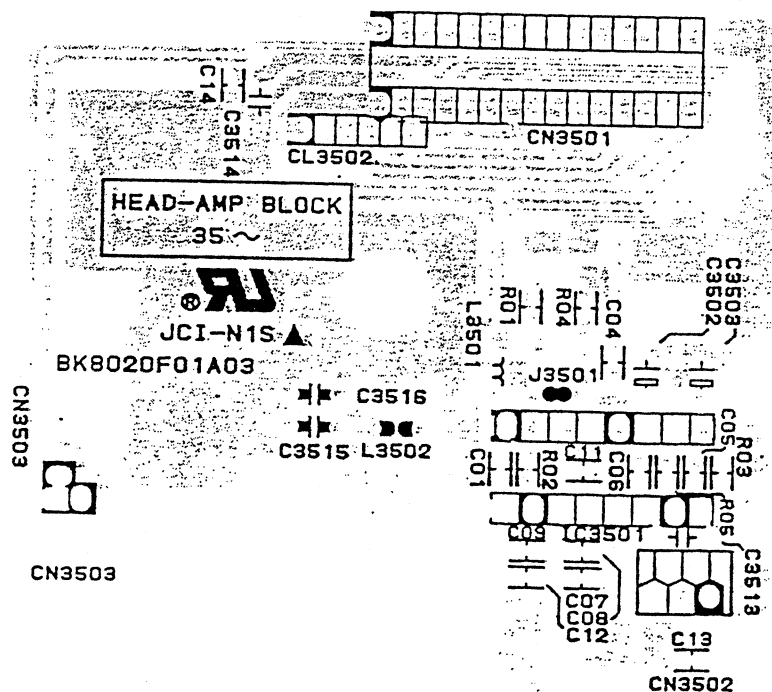


SIDE LOADING P.C.BOARD
TOP VIEW

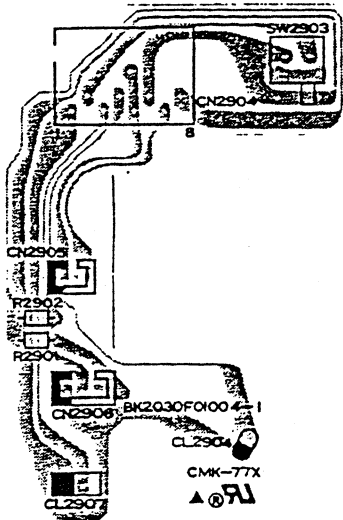


S/E SENSOR P.C.BOARD
TOP VIEW

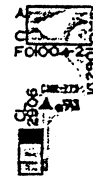 


CASSETTE DIRECTION SW
P.C.BOARD
TOP VIEW

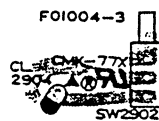



CASSETTE IN SW
P.C.BOARD
TOP VIEW

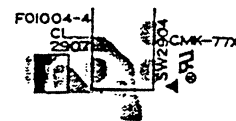

SIDE LOADING SCHEMATIC DIAGRAM

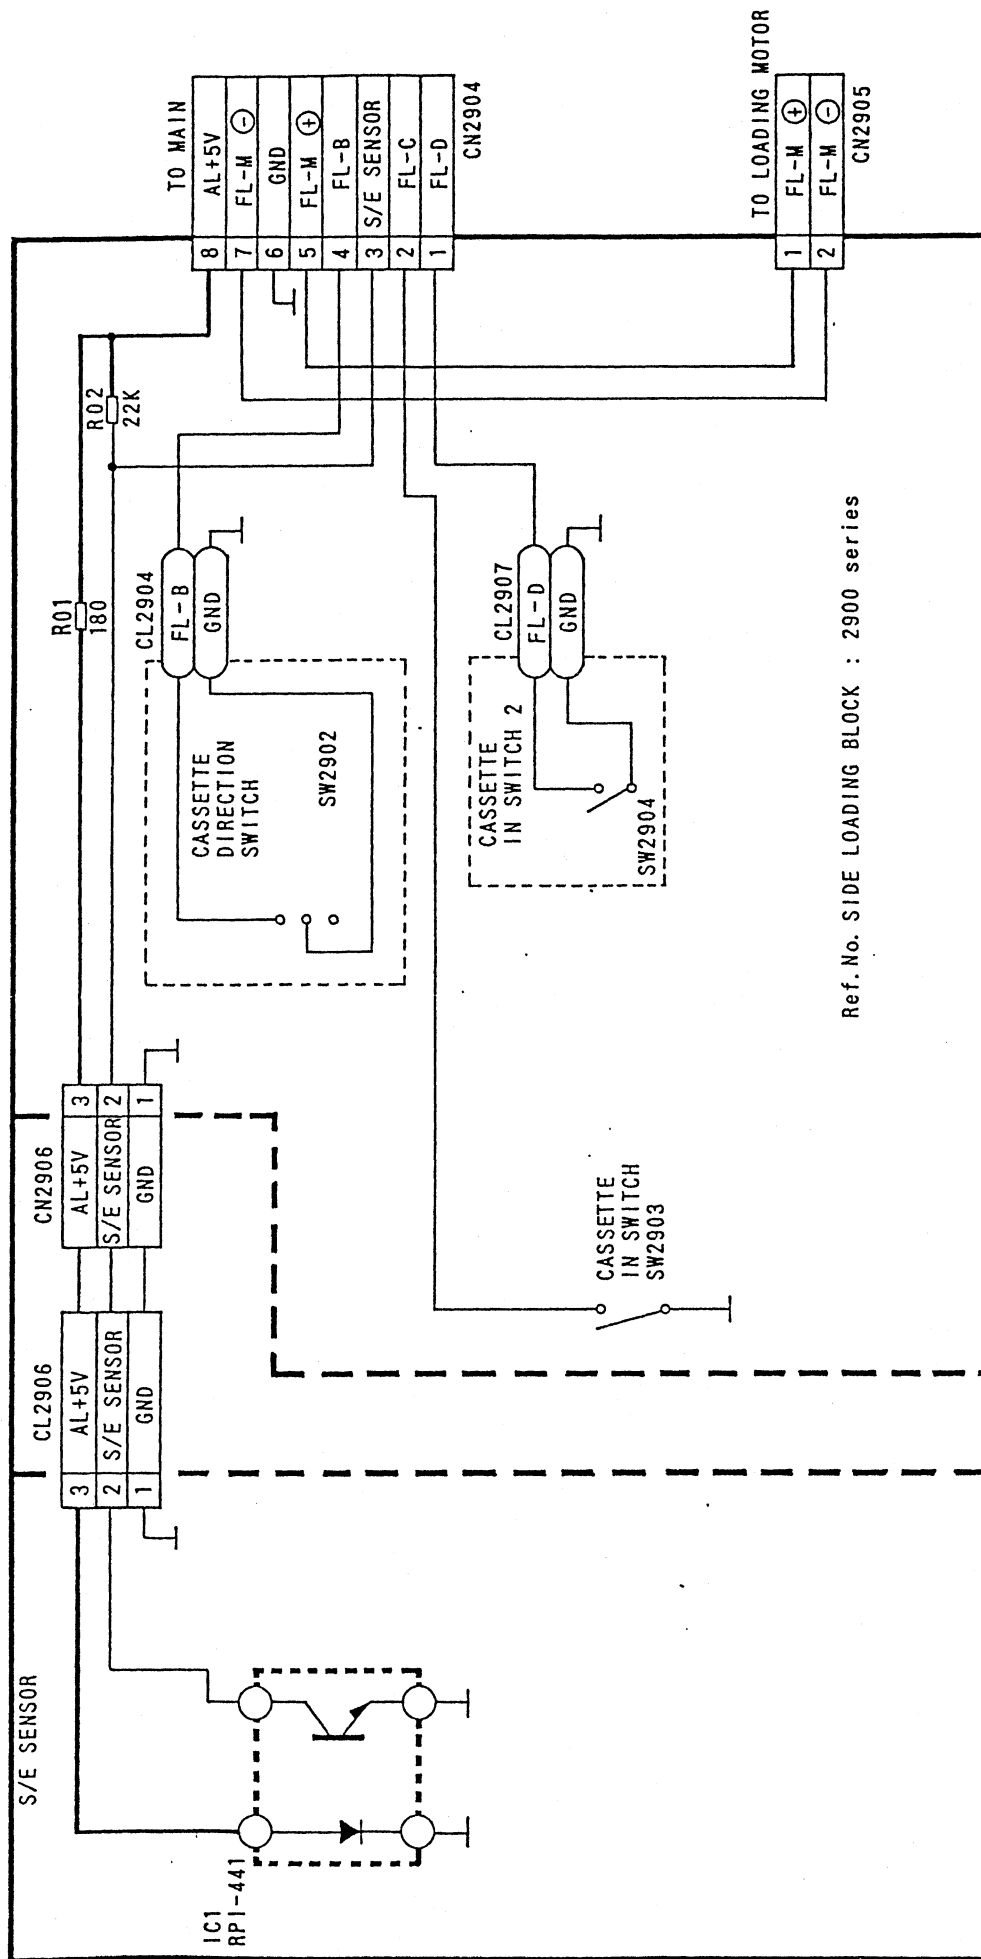

TIMER / CONTROL SCHEMATIC DIAGRAM

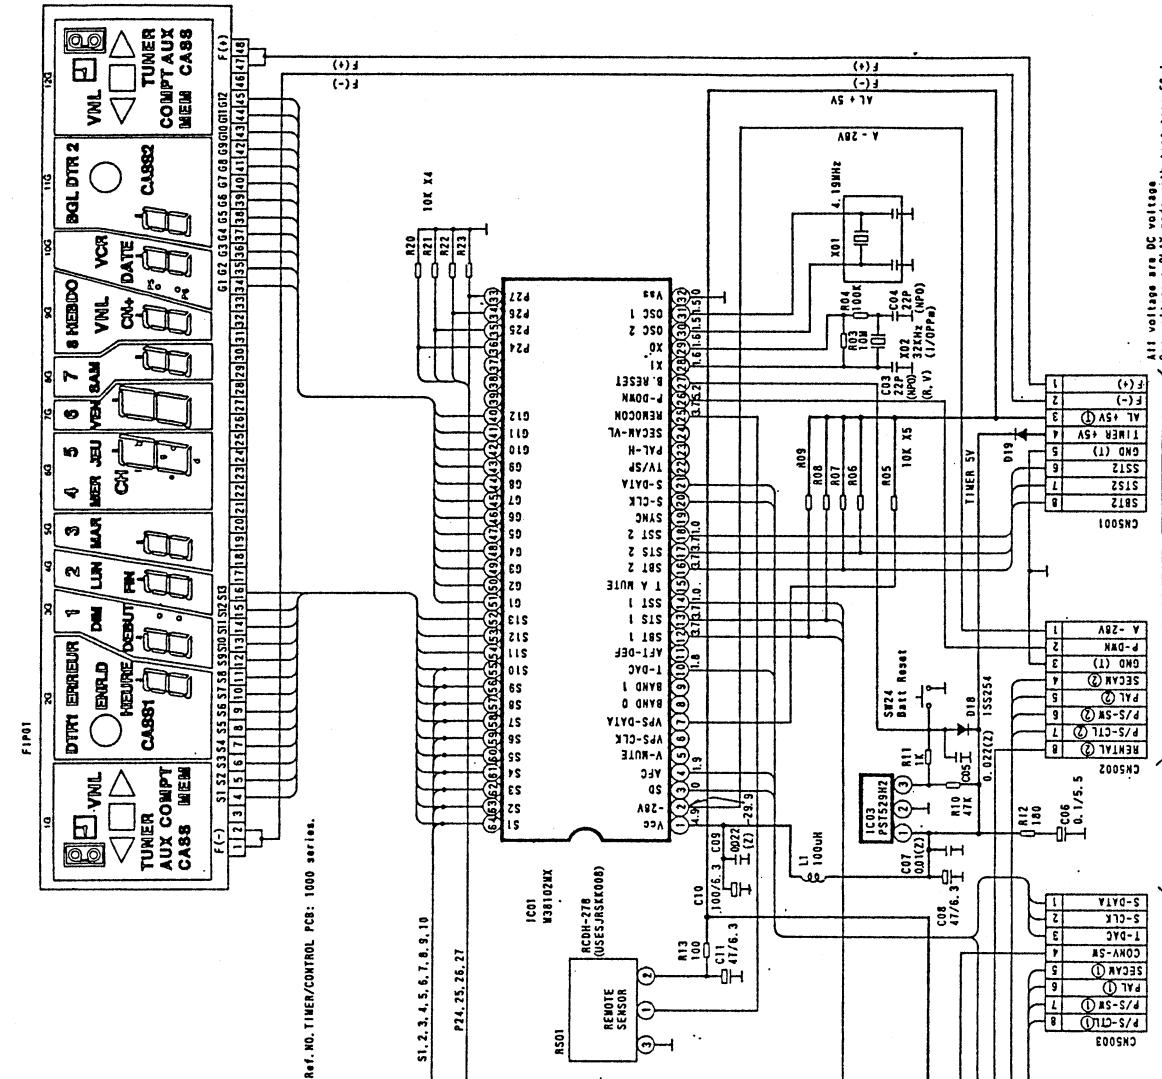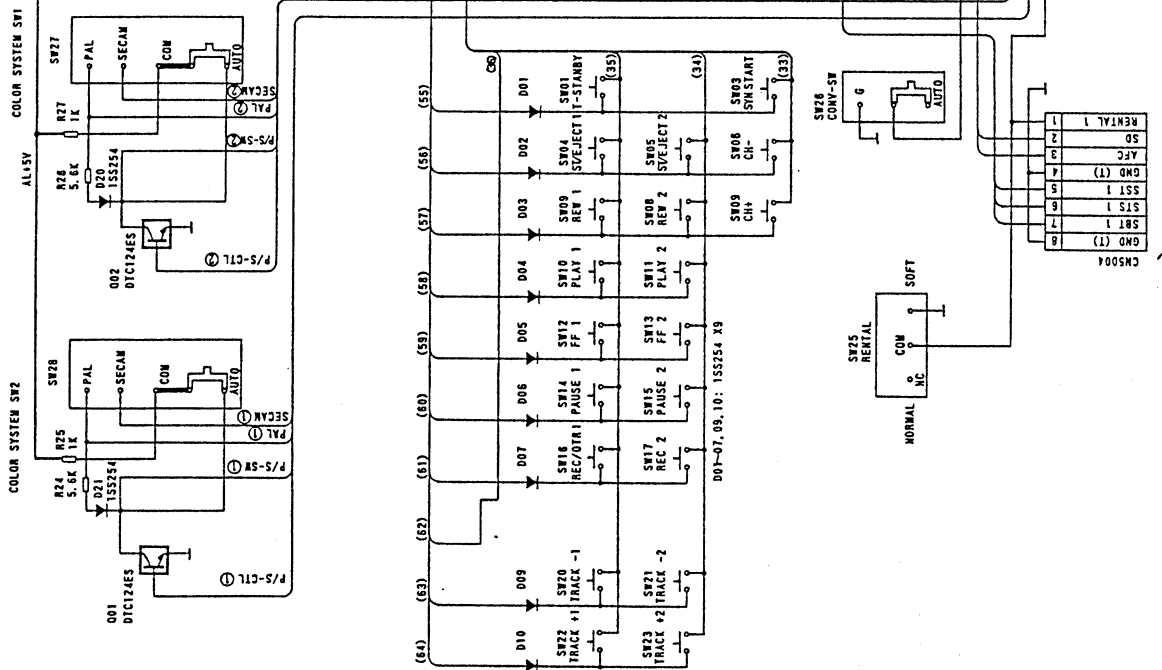


TO TAPE 1 MAIN

TO TAPE 2 MAIN


All voltage are DC voltage
One voltage : PLAY mode with test tape FG-A.
Two voltage : PLAY and (RECORD) mode with PAL color signal.

TIMER / CONTROL P.C.BOARD











TOP VIEW

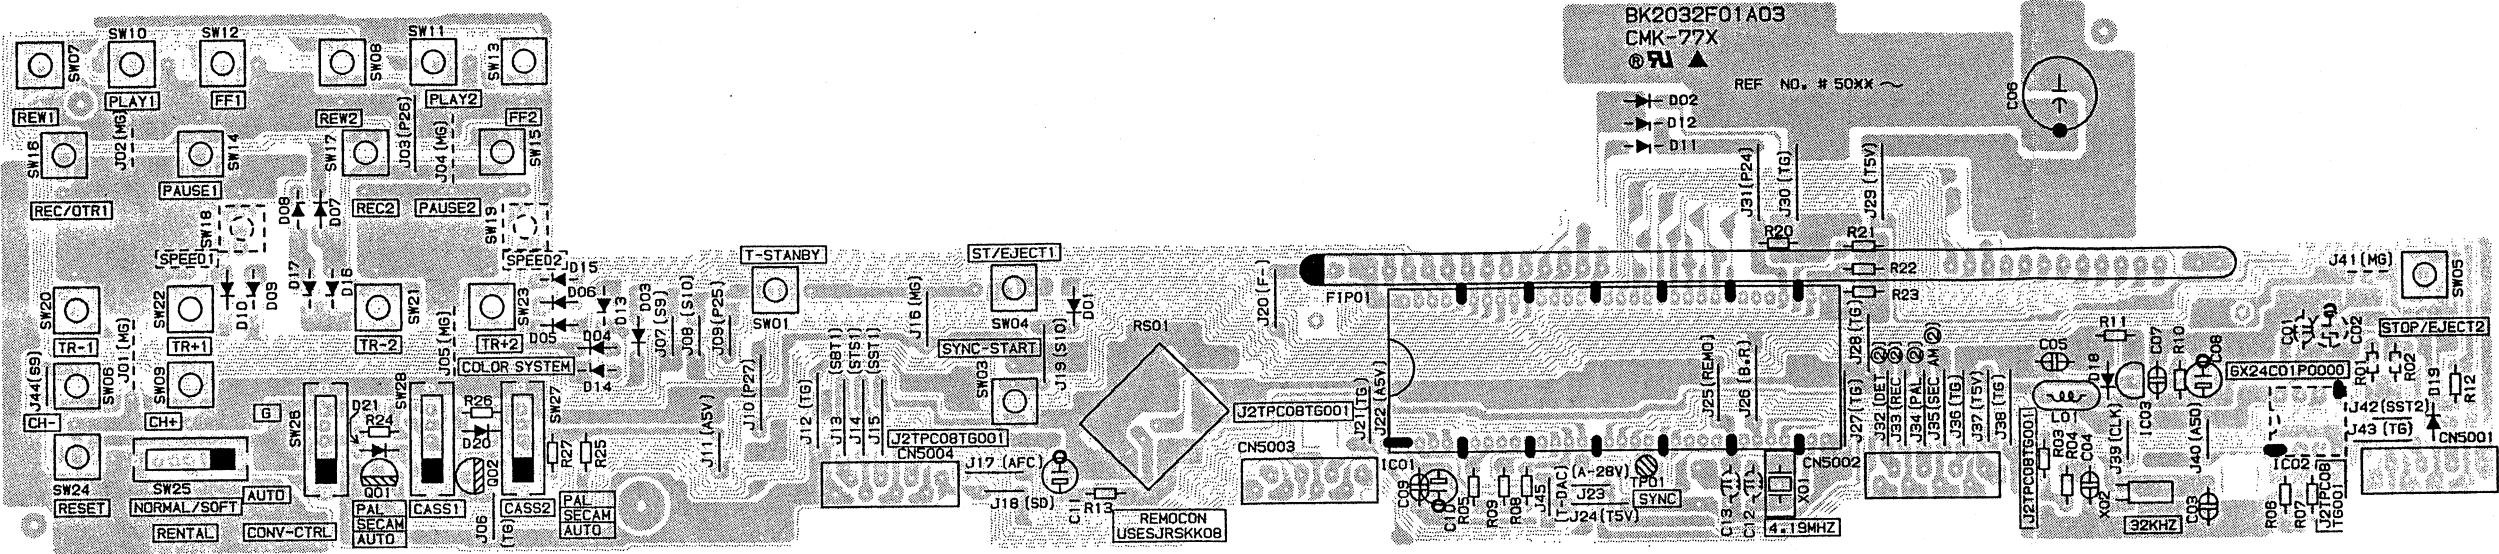


BOTTOM VIEW

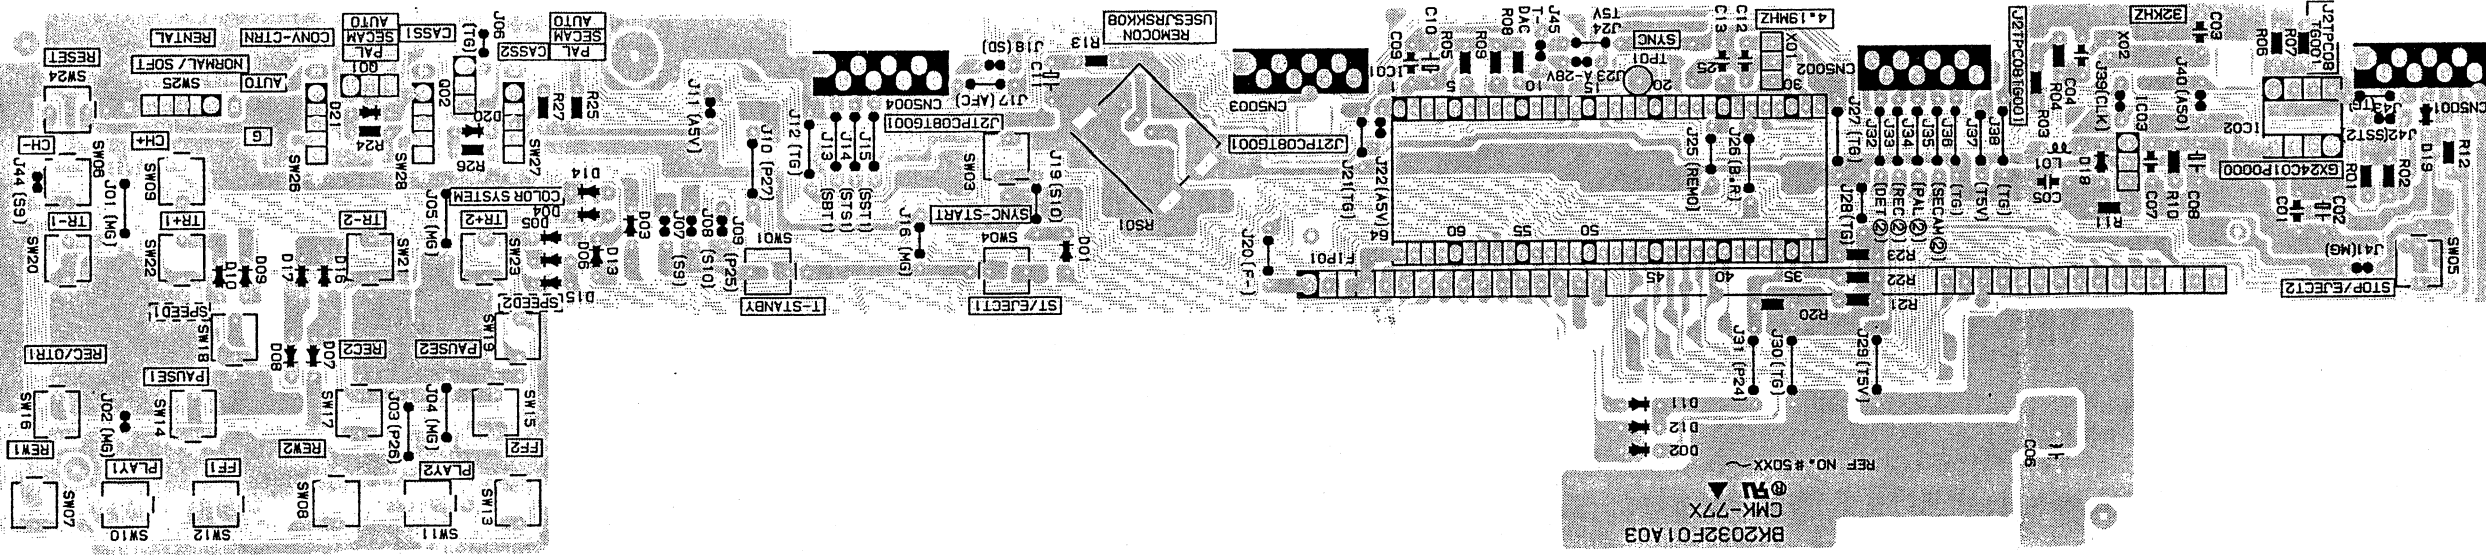

WAVEFORMS

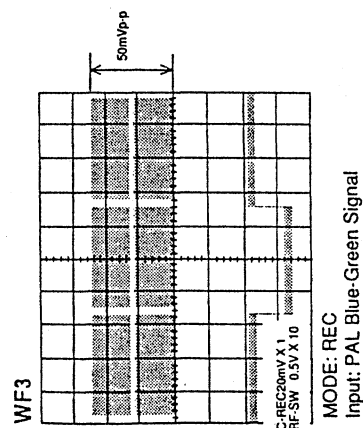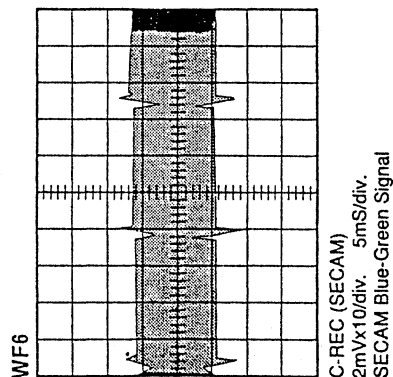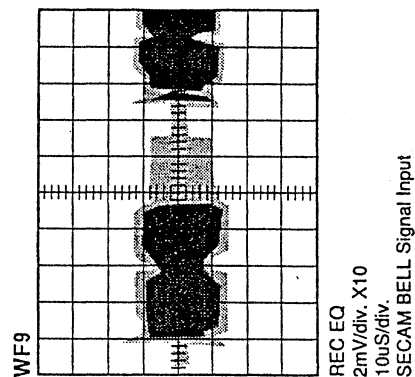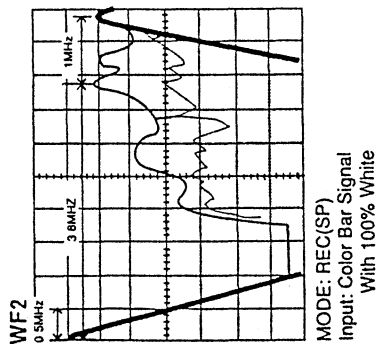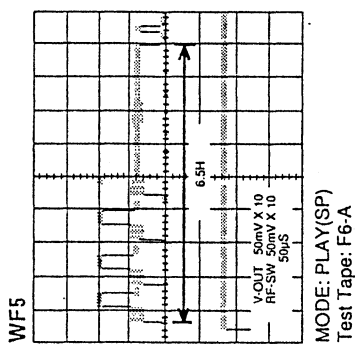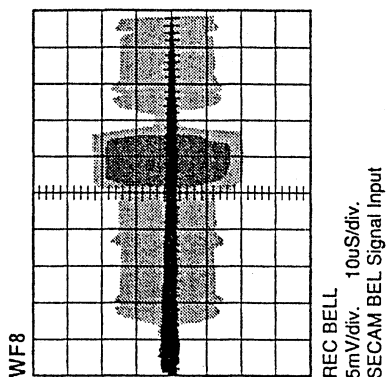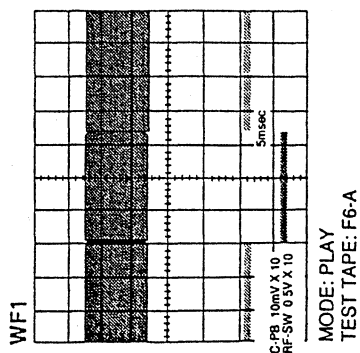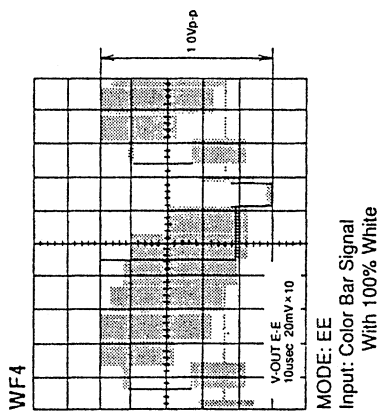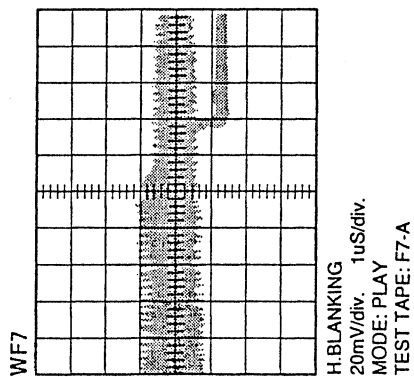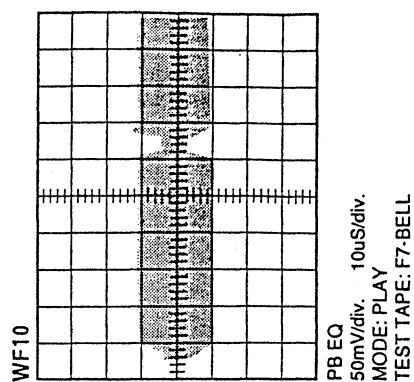

WIRING DIAGRAM

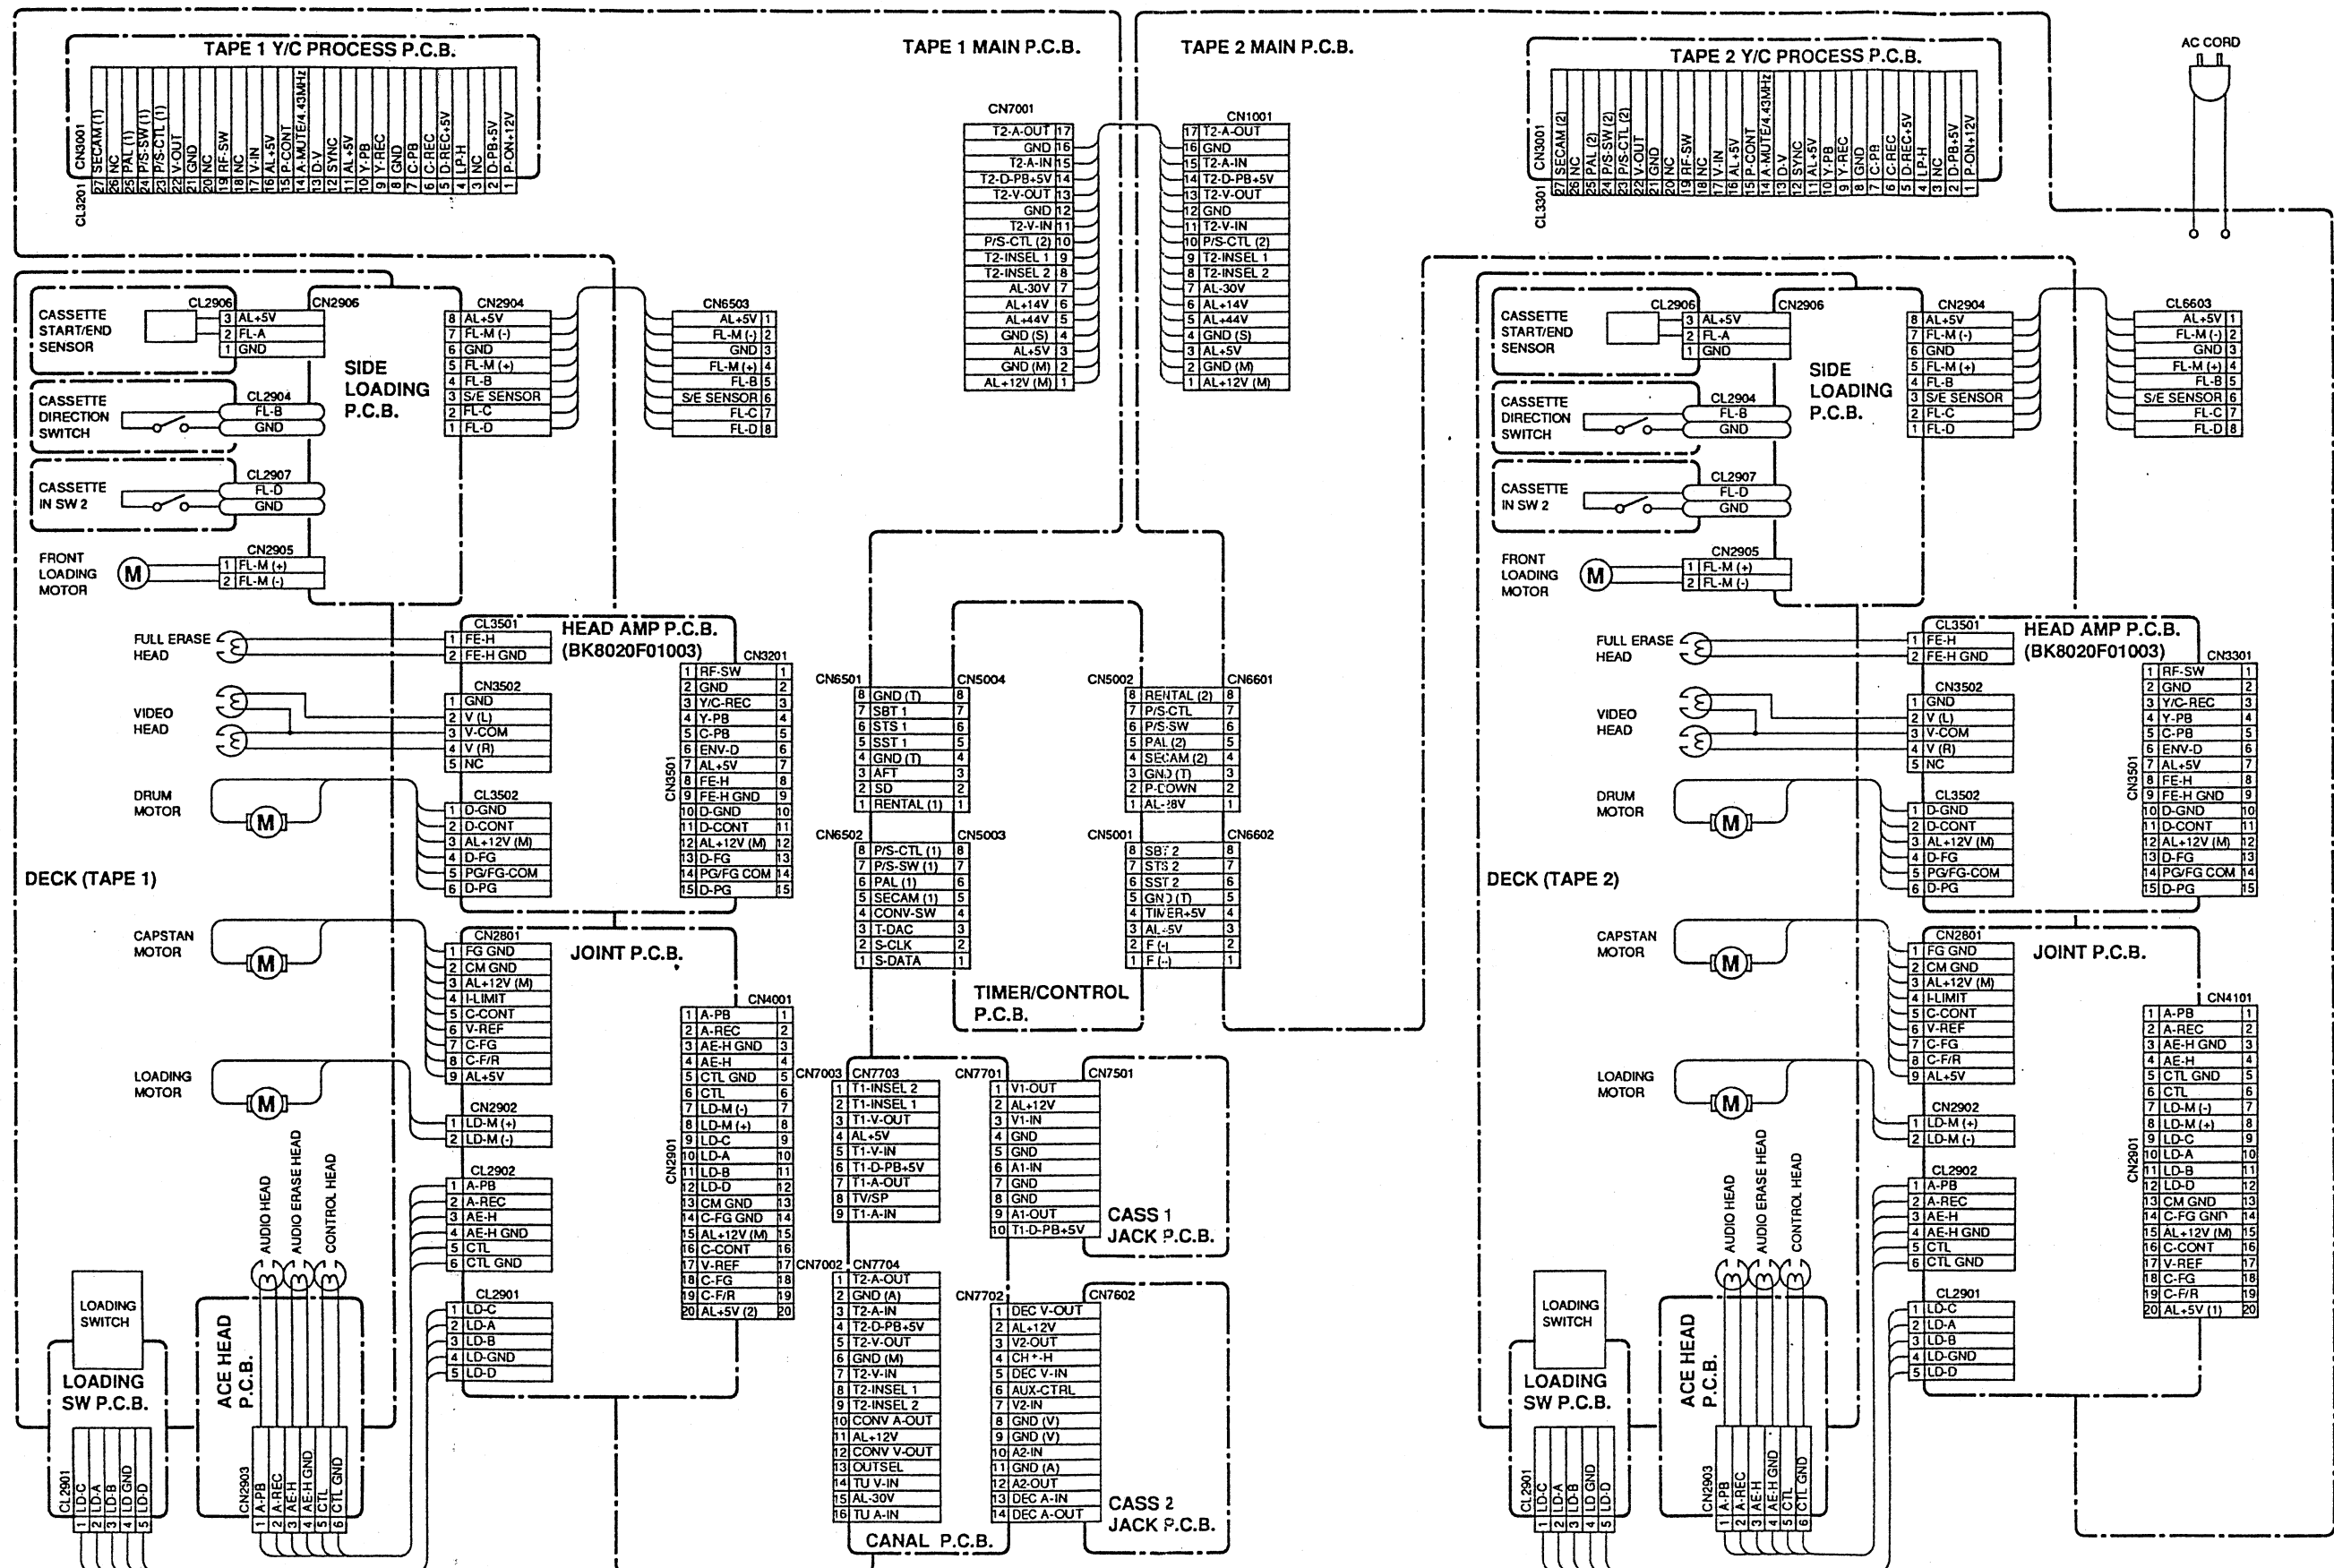

REF. NO.	DESCRIPTION.	PT. NO.
CABINET PARTS LIST		
A1	FRONT ASSY	255243
	PLATE COUNTER	
	FRONT	
	PLATE FRONT	
	PLATE TIMER	
	BUTTON POWER	
	BUTTON STOP	
A2	DOOR TIMER	255242
	SPRING DOOR TIMER	255173
A3	DOOR CASSETTE 1	255199
A4	DOOR CASSETTE 2	255200
A5	FOOT	255175
A6	SPRING DOOR CASSETTE	255174
A9	SPACER A	
A10	SPACER B	
A15	CASE TOP	255100
A16	PANEL BOTTOM	255902
A17	JACK BOARD A	
A18	JACK BOARD	
A19	LABEL RATING	
B1	DECK MECHANISM N1106XA	
B2-1	CHASSIS	
B2-6	HOLDER REEL SENSOR	254929
B2-8	BUSH LED	
B2-9	HOLDER SENSOR	
B2-13	CASE SHIELD	
B2-14	SHEET INSULATOR	
B2-17	HOLDER CHASSIS	

DECK MECHANICAL PARTS LIST		
B1	CHASSIS ASSY	
B2	CYLINDER ASSY 2HD SP	255004
	UPPER DRUM ASSY	255158
	LOWER DRUM ASSY	255157
B3	LOADING MOTOR PREPARATION	254991
B4	MOTOR HOLDER CALKING ASSY	
B5	CASSETTEDRIVE LEVER ASSY	254978
B6	PINCH ROLLER ARM ASSY	
B7	PINCH ARM ASSY	254966
B8	PULLEY ASSY	254989
B9	MOVING GUIDE S ASSY	254984
B10	MOVING GUIDE T ASSY	254985
B11	LOADING ARM A ASSY	254982
B12	LOADING ARM B ASSY	254983
B13	LOADING ARM M ASSY	254965
B14	PINCH ROLLER SP	254967
B15	LUMINAR WASHER 3.1X6X0.35	254976
B16	CAM	254960
B17	P.S.W. 1.7X3.2X0.5T	
B18	FRICTION GEAR SPRING	254975
B19	FRICTION GEAR	254974
B20	KICK ARM	255018
B21	LOADING BELT	254977
B22	P.S.W.A.	
B26	CLUTCH BLOCK ASSY	254987
B27	BAND BRAKE ASSY	254961
B28	MAIN BRAKE S ASSY	254980
B29	MAIN BRAKE T ASSY	254981
B30	T BRAKE ARM ASSY	255019
B31	AC HEAD ASSY	254988
B32	REEL BASE ASSY	254990
B34	MAIN LEVER ASSY	254964
B35	TAPE GUIDE ASSY	255020
B36	TENSION LEVER SP ASSY	254986
B37	CAPSTAN MOTOR F2QKB92	255003
B38	MODE CHANGE LEVER	254959
B39	M BRAKE (S) SPRING	254970
B40	M BRAKE (S) LEVER	255021
B41	S BRAKE ARM	255022
B42	M BRAKE T ARM SPRING	254973
B43	T BRAKE SPRING	254971
B44	HEAD ADJ SPRING	255023
B45	M LEVER SPRING	254968
B46	TAPE GUIDE ARM SPRING	254972
B47	TAPE GUIDE ARM ADJ SCREW	
B48	ADJUST NUT	
B49	BT DRIVE ARM	255024
B51	CHANGE ARM	254963
B52	BELT FAST WIND 2397	254956
B53	P.S.W 3.1X6X0.3T	
B54	EARTH BRUSH ASSY	
B55	C SLIDER L ASSY	254999
B56	C SLIDER R ASSY	255000
B57	CASSETTE GUIDE R ASSY	255025
B58	C.D. GEAR L ASSY	255026
B59	C.D. GEAR R ASSY	255001
B60	CASSETTE PLATE	254998
B61	FRONT GUIDE	254993
B62	GEAR CONNECT SHAFT	255027
B63	CASSETTE GUIDE L	254992
B64	INTERLOCKING GEAR R	254995
B65	FRONT DOOR OPENER	254994
B66	INTERLOCKING GEAR L	255028
B67	FRONT DOOR OPENER SPRING	254997
B68	DRIVING GEAR REINFORCEMENT	
B71	FL RACK	255029
B72	CASSETTE HOLDER UPPER PLATE	254996
B73	FE HEAD HVFHF0002A	255030
B74	LUMINENCE PRISM	254962
B75	REC ARM U5	255031
B76	REC ARM SPRING	254969
B77	PRISM R	255032
B78	DRIVE I	255033

B79	EARTH SPRING	
B80	SPRING FOR PRESSING PACK	254974
B81	M LEVER HOLDER ASSY	255034
B82	KICK ARM HOLDER	255035
B83	RACK SPRING	
B84	PRESS FIT BUSH	
B99	REC SPRING	
B100	HOLDER SPRING	
	SIDE LOADING ASSY	255095
B201	ARM HL CONTROL	
B202	LEVER DOOR CONTROL	
B204	ROLLER GUIDE	
B205	PULLEY REDUCTION	
B206	GEAR REDUCTION	
B207	SPRING TORSION F	
B208	SPRING TORSION B	
B209	BELT SQUARE	255107
B210	CUT WASHER 2.6 0	
B211	CATCHER SLIDE ASSY	
B212	RUBBER CATCHER	
B213	SPRING CATCHER	
B214	COMUTATE MOTOR SUB ASSY CASSETTE	255106
B215	LEVER SYNCHRO F	
B216	LEVER SYNCHRO FS	
B217	SPRING LEVER SYNCHRO	
B218	SLEEVE LEVER	
B219	LEVER SYNCHRO BS	
B220	LEVER SYNCHRO B	
B221	GEAR BRACKET SUB ASSY	
B222	FRAME L	
B223	GUIDE CASSETTE	
B224	SPRING PLATE GIMBAL	
B225	SPRING TORSION GIMBAL	
B226	SHAFT GIMBAL	
B227	PR BRACKET ASSY	
B229	STANS F	
B230	MIRROR F	
B231	STAND B	
B232	MIRROR B	
B233	LEVER OPENER	
B234	GUIDE OPENER LEVER	
B235	CASSETTE HOLDER ASSY	
B236	LEVER SWITCH	
B237	SWITCH LEVER	
B238	SHAFT SWITCH	
B239	SWITCH LEVER SPRING	
B240	WASHER 1.6	
B250	CHASSIS ASSY	
B251	MODE CHANGE LEVER	
B253	MAIN BRACKET T ASSY	
B254	S BRAKE ARM 1409	
B255	T BRAKE ARM SPRING	
B256	M BRAKE (T) SPRING	
B257	HOLDER DECK A	
B258	HOLDER DECK B	
L1121	HEXAGON NUT M3	25495

ICS		
IC1001	IC TLP621 PHOTO COUPLER	25332
IC1002	IC PROTECTOR UN10015 P-N38	25511
IC1502	IC AN78L05 REGULATOR	25000
IC2001,2101	IC MN6748FVDP SERVO	25510
IC2002,2102	IC BA10324 OP AMP	24083
2003		
IC2075,2175	IC GC90000MB006 MICRO CON 8BIT	25510
IC2101	IC 4BIT MOCRO AT/M50925-486SP	25520
IC2901	IC RPI-441 PHOTO COUPLER	25522
IC3001	IC LA7390A VIDEO	25428
IC3002	IC LC8992	25000
IC3003	IC MM1031XM TI	25461
IC3004	IC BA7107S SECAM CHROMA	25066
IC3005,3006	IC LA7311	25461
IC3007	IC AN7805F NJM7805FA	15207
IC3008	IC TC4S66F-TE85R	25471
IC3501	IC LA7376 VIDEO HEAD AMP	25416
IC4001,4101	IC LA7282 AUDIO	25416
IC5001	IC MICRO CON 8BIT TI/M38102M5	25526
	MB007*	
IC5002	IC X24C01P	25401
IC5003,6506	IC PST529H-2 RESET	25000
IC6501,6601	IC SY M38002M2 MICRO CON 8BIT	25520
IC6502,6503	IC TA7291S	25306
IC6504,6604	IC BA10339	15239
IC6505,6506	IC REEL SENSOR SG-211L	25491
6605		
IC6508	IC X24C01P	25401
IC7001	IC LA7210	15202
IC7002	IC LA7910	25020
IC7003	IC L5631	15240
IC7501,7502	IC BU4053B SWITCHING	15235
7801-7803		
IC7701	IC HA118104 VIDEO SWITCH	25520
IC7702-7704*	IC BU4053B	15235
IC7705,7706*	IC BU4052B	25471
IC7707	IC HD14081BP	15030
IC7708	IC HD14011BP	25461


TRANSISTORS		
Q1001	TR 2SC4204	25491
Q1002	TR 2SC4517	25491
Q1501	TR 2SD1581	25491
Q1502	TR 2SC1740	50011
1508		
2005-2009		
3202		
3205,3206		
4001		

7015			X2001,2101	CERAMIC RESONATOR 3.34MHZ	255176
7704			X3001	CRYSTAL 4.433619MHZ	254066
Q1503.	TR DTC124ES	152050	X3002	CERAMIC RESONATOR 4.16MHZ	
2003,2004			X5001	CERLOCK 4.19MHZ	253566
5001			X5002	CRYSTAL 32KHZ	254950
5002			X6501	CERAMIC RESONATOR 4MHZ	241712
7005,7008-			X7001	CERAMIC RESONATOR 500KHZ CSB500E	254069
7012,7014					
7502,7602					
Q1504,1505	TR 2SA933	150874		*SWITCHES*	
3201,7501			SW2901	MODE SWITCH HMW0420-510010	254957
7601			SW2902	SLIDE SWITCH MSS-8B	255230
Q7006,7007	TR DTA143XS	152406	SW2903	PUSH SWITCH CASSETTE IN	255231
Q1506	TR 2SD1384	152049	SW2904	LEAF SWITCH MLS-2S1 KB005	255201
Q2001,2002	TR DTA124ES	254934	SW5027,5028	SLIDE SWITCH SLD-13-497E 1832	255105
3030,3031			SW5001,5003	PUSH SWITCH EVQ-335 05R	254037
7004			-5017,5020		
7013			-5024		
Q	TR DTA144WS	151103	SW5025,5026	SWITCH SLIDE 1C-2P	253279
Q3001-3003	TR 2SC2412K T146	254714	SW6501,6601	PUSH SWITCH SPPB61	255151
3011,3013-					
3015,3017-				*VARIABLE RESISTORS*	
3020			VR2001,4001	VRSF 100K OHM	254935
Q3004,3006	TR 2SA1037 T146 / 2SA1179-5	253105	2101,4101		
3010,3021			VR3001,3002	VROT 4.7K OHM	254936
Q3007,3023	TR DTA144WK	254713	3003-3005		
Q3009,3022	TR DTC124EK	152050	VR3004	VROT 1K OHM	255186
3025			VR3201,3301	VRSF 2.2K OHM	254336
Q3203	TR 2SC2058	151417	3002,3006		
3204			3008,3009		
Q	TR 2SC1741S	152038	3094		
Q6502,6503	TR RPT-38PB3F PHOTO	254921	VR3007	VROT METAL 50K OHM	
6602,6603			VR4002	VRSF 22K OHM	254594
Q1507,6501	TR 2SD400 F 2SC2060	254930			
7705				*MISCELLANEOUS*	
Q7003	TR 2SK128 FET	152040	CN6501-6503	SCART SOCKET 21PIN	153030
Q7001	TR 2SD1468S	151722	JK7501-7603	SCART JACK	153030
			7801		
			TU7001	TUNER VIF BLOCK TPS7-BGL01	253281
			CV7001	RF CONVERTOR MDF33-UM3815	253280
			DL3001	COMB FILTER 4.433619MHZ	250084
			CN6601,6602	FLOATING SOCKET CONNECTOR	
			T1001 !	POWER TX SRW2929ED-544V119	255103
			AC1001	AC CORD EP-631-E01	255140
			FH1001,1002	FUSE HOLDER	
			F1001 !	FUSE T1.60A/250V	272327
			F7801	FFC CABLE 17P	255232
			FP5001	FIP12RM6	255203
				FIP HOLDER L	
				FIP HOLDER R	
			RS5001	REMOTE SENSOR UNIT SFN-R0011 /	254723
				REMOTE CONTROL UNIT HC-278N	
				REMOTE CONTROL HANDSET	255267
				RF CORD	253261
			F7002	FFC CABLE 16P	
			F7003	FFC CABLE 9P	
				USER INSTRUCTIONS	255209
				CARTON	255208
				SET POLY PACKING	
			DESCRIPTION	REF. NO.	PT. NO.
				RESISTORS	
				CHIP RESISTOR 1/10W	
			0 OHM	R1516,1517,2008,2053-2056	
				2065,2066,3048,3210,3213	
				4007,4021,4025,6529,6558	
				6559,7039,7040	
			4.7 OHM	R4019	
			18 OHM	R3071	
			22 OHM	R2061	
			33 OHM	R3072	
			47 OHM	R4018,4026,4027	
			75 OHM	R3228	
			82 OHM	R4003	
			91 OHM	R3229,7001	
			100 OHM	R2030,3119,4001	
			150 OHM	R2027,3007	
			180 OHM	R6504	
			220 OHM	R2029,3226,3227	
			270 OHM	R3041	
			330 OHM	R3074	
			390 OHM	R3070,3218,3220	
			470 OHM	R3001,3012,3123,3212	
			560 OHM	R3005,3021	
			680 OHM	R3078,3079,3224	
			820 OHM	R3065,3111,3112,3203,3213	
				7019	
			1K OHM	R2021,2022,2035,2043	
				3023,3024	
				3029,3037,3047,3059,3060	
				3062,3067,3068,3069,3073	
				3081,3085,3088,3093,3095	
				3102,3103,3105,3110,3114	
				3121,3201,3207,3221-3223	
				4015,7002,7003,7018	
				R2048,7017	
			1.2K OHM	R3003,3014,3017,3036,3204	
			1.5K OHM	3208,3216,3217,3219,6557	
				R2009,3009,3042,4012	
			1.8K OHM	R1510,2031,2038,2040,2044	
			2.2K OHM	2045,3022,3028,3044,3057	
				3058,3063,3100,3118,4007	
				4013,6511,7008	
				R1506,3004,3013	
			2.7K OHM	3019,3020	
				3097,3101	


	3066,7004,7007				
	7015				
3.9K OHM	R2057,3043,3050,3096,				
	3209,3225,4011				
4.7K OHM	R1502,1505,1519,2002,2004				
	2020,3015,3033,3045,3046				
	3076,3092,3098,3116,3117				
	3120				
5.6K OHM	R1504,1507,1508,2063				
	3053,3214				
	7005,7032				
6.8K OHM	R2046,4009				
	4017,7024,7029,7033,				
8.2K OHM	R3026,3052,3054				
	3064,3080,3206				
10K OHM	R2003,2012,2024,2025,2028				
	2032-2034,2049,2064,3002				
	3006-3008,3027,3031,3032				
	3035,3087,4005,6507,6508				
	7023,7030				
12K OHM	R2058,3010				
15K OHM	R7016,7028				
18K OHM	R3030				
22K OHM	R2014,3016,3038,3051,3099				
	4016,6503,6512-6528,6531				
	6536,7011,7013,7021				
27K OHM	R3055,4023				
33K OHM	R1501,1512-1514,3034,4002				
	7026,7027				
39K OHM	R2001				
47K OHM	R1503,1518,2013,2018,2023				
	2036,2037,2042,2050,3056				
	6530,6537,6556,7006,7012				
	7014,7025				
56K OHM	R2006,2007,2014,2015,2017				
	2026,2039,2047,7037				
100K OHM	R2005,7022				
150K OHM	R2010,2011,2019				
180K OHM	R2016				
220K OHM	R3061				
330K OHM	R3086,4006,7020				
470K OHM	R6505,6506				
1M OHM	R2062,3025,3039,3040				
	7009				
2.2M OHM	R4008				
	CARBON RES 1/5W				
10 OHM	R6510				
47 OHM	R6509				
68 OHM	R7707,7712				
82 OHM	R7501,7601,7603				
100 OHM	R5013				
180 OHM	R5012				
820 OHM	R7502,7602,7714				
1K OHM	R5011,5025,5027				
2K OHM	R3132				
2.2K OHM	R3131,7034,7035				
2.7K OHM	R7607,7608				
3.9K OHM	R7706				
4.7K OHM	R7711,				
5.6K OHM	R5024,5026				
10K OHM	R5005-5009,5020-5023,7503				
	7504,7506,7605,7606,7612				
	7710				
22K OHM	R7701				
33K OHM	R7703,7705				
47K OHM	R5010,7505,7611				
56K OHM	R7708,7709				
100K OHM	R5004,7609				
10M OHM	R5003				
	CARBON 1/2W				
1.2 OHM	R1025				
6.8 OHM	R1026				
1.5K OHM	R7003				
	METAL OXIDE				
1 OHM 1W	R1013	255176			
2.7 OHM 1W	R6502	254940			
3.3 OHM 1W	R6501	255168			
82 OHM 1W	R1011	254941			
330 OHM 1W	R3203,3303	255169			
130K OHM 2W	R1008	255206			
240K OHM 1W	R1009	255109			
270K OHM 1W	R1004	254923			
330K OHM 1W	R1003	254924			
	WIRE WOUND				
8.2 OHM 3W	R1002	255207			
	FUSE				
10 OHM 1/2W	R1023,1024	254949			
	CAPACITORS				
	CERAMIC CHIP				
6PF 50V	C3024				
12PF	C3069				
18PF	C3017,3214,3216				
22PF 50V	C3039,3113,3218				
27PF 50V	C3219				
33PF	C3010,3013				
39PF 50V	C3026,3070,3201,3217				
47PF	C3008,3100,3101				
56PF 50V	C3076				
68PF 50V	C3003,3202				
82PF 50V	C3023				
100PF 50V	C2012,2013,3054,3075,3080				

EXPLODED VIEW

CABINET EXPLODED VIEW

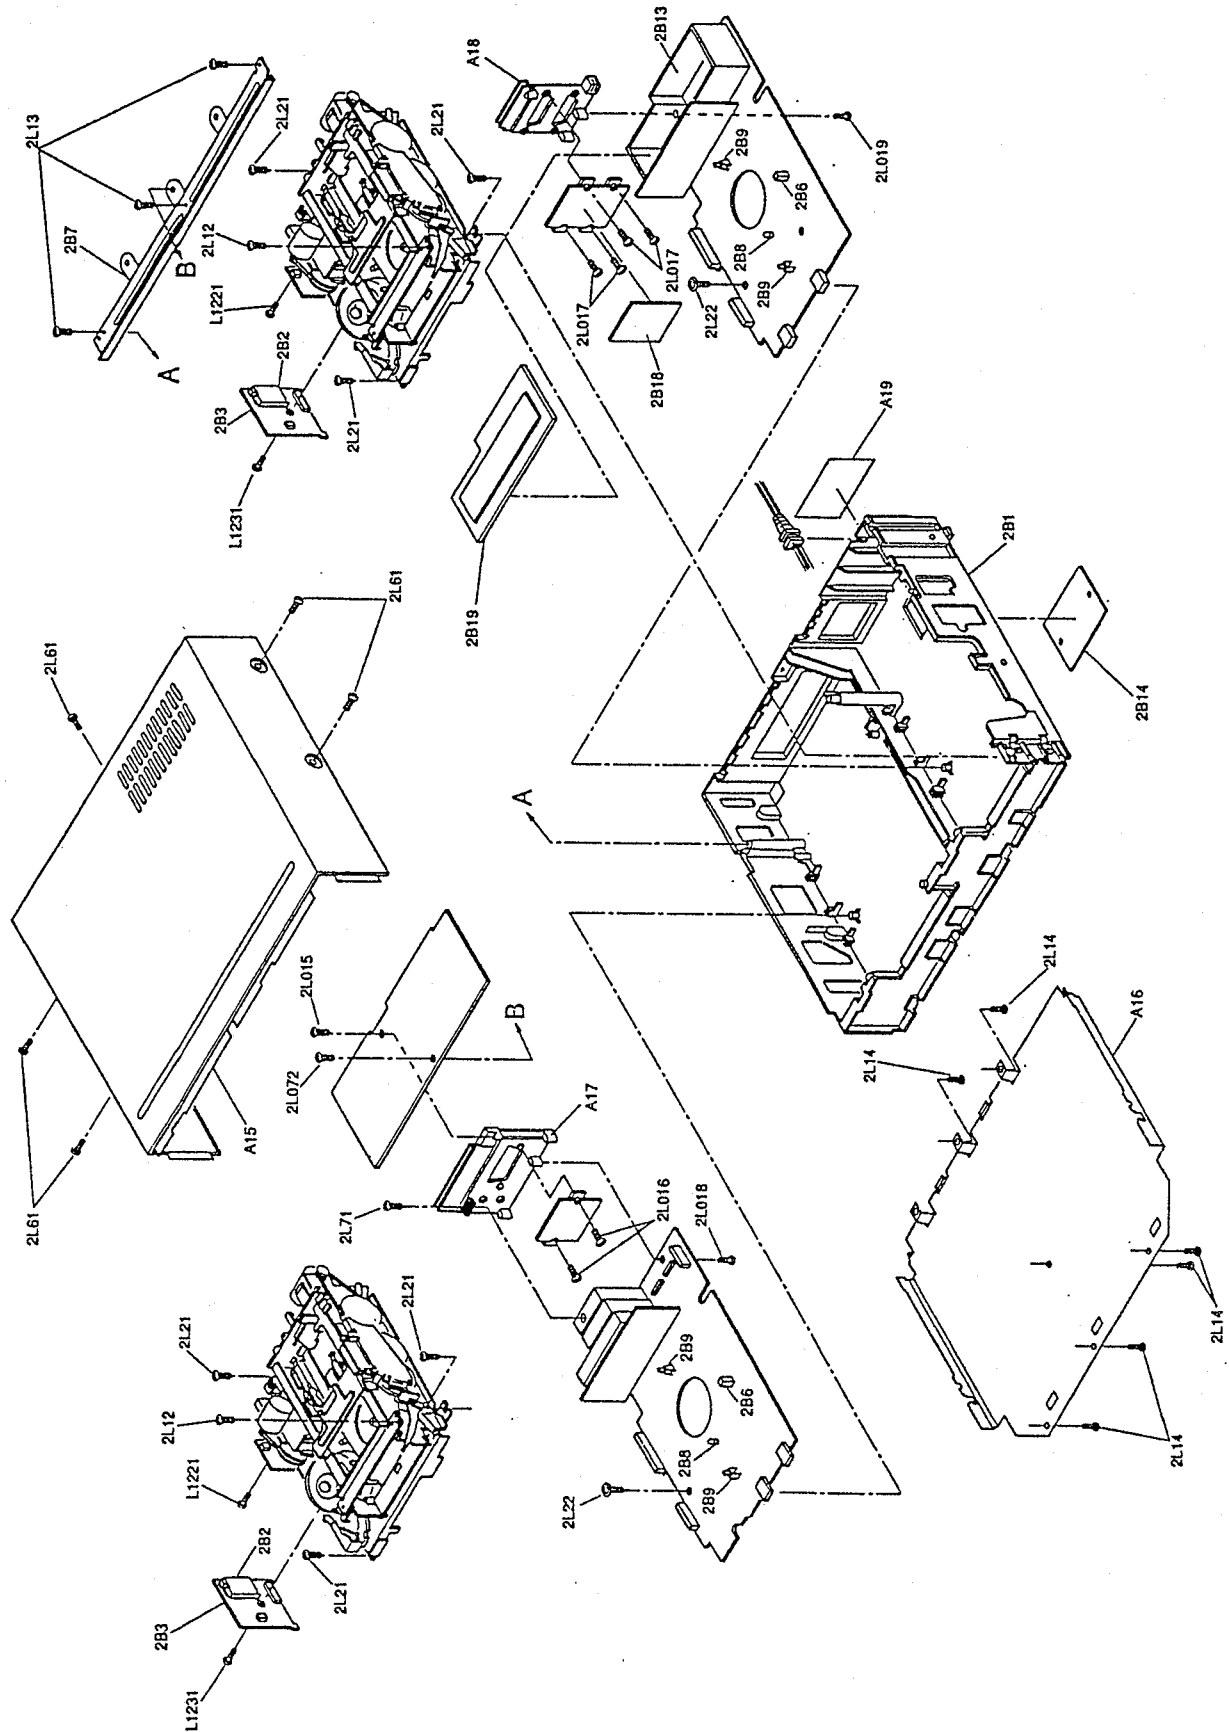

FRONT EXPLODED VIEW

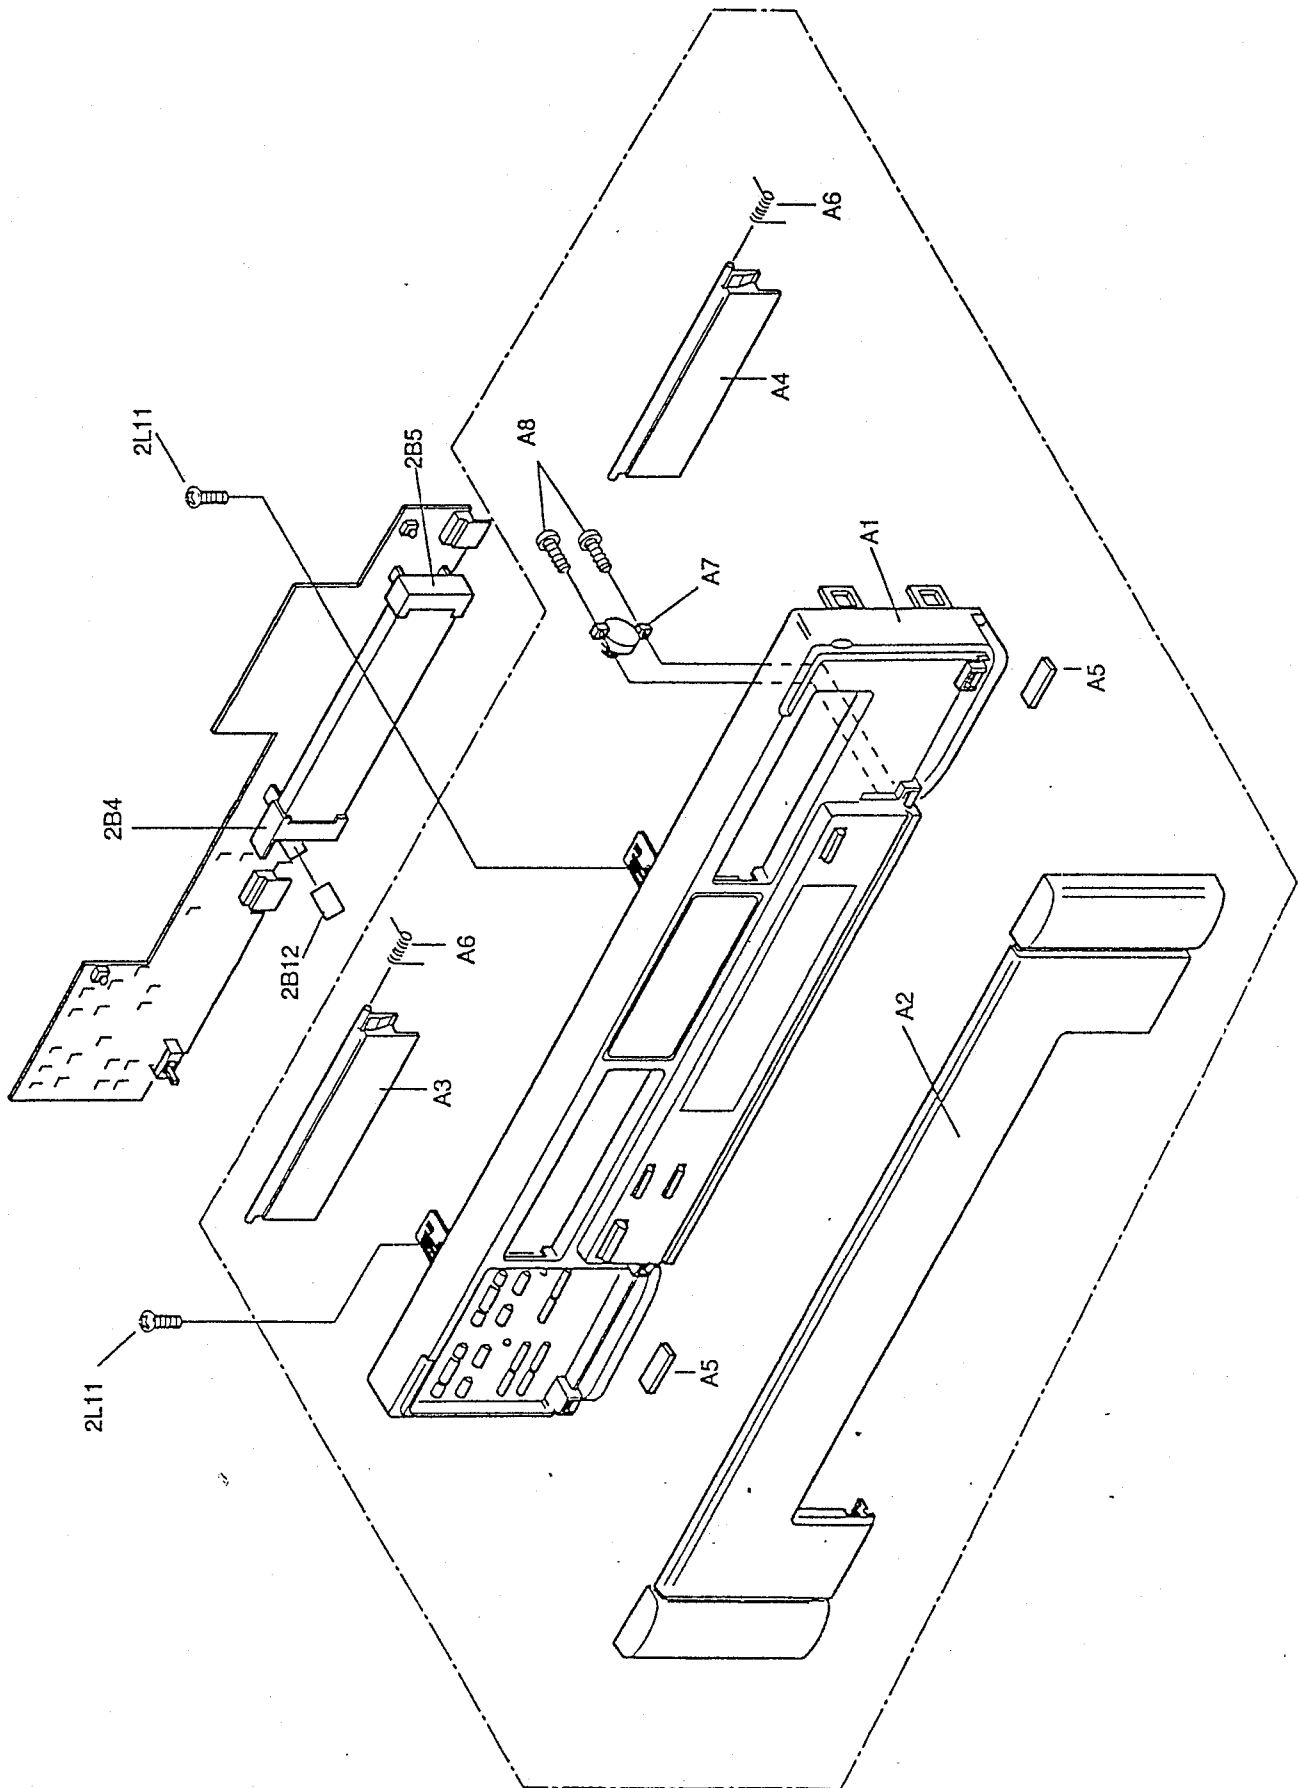

IC PIN FUNCTION DESCRIPTION

IC6501, IC6601 (QSMQA0SMB008)

SYSTEM CONTROL

Pin No.	IN/OUT	Signal Name	Function	Active Level
1	IN	VCC	+5V	—
2	IN	SENS-INH	Start/End/Reel Sensor INH	L
3	IN	TAPE1/TAPE2	Syscon TAPE1/2 Switching Pulse	H/L
4	OUT	LED-P	Pulse Output Signal for Sensor (for ST/END Sensor)	H/L
5	IN	ATR ON/OFF	ATR On at "L", ATR Off at "H"	H/L
6	IN	A•TR	"L" at Auto Tracking Function	H/L
7	IN	ST-S	Tape Start Position Detector	L
8	IN	END-S	Tape End Position Detector	L
9	IN	REEL-P	Take Up Reel Rotation Signal Input	H/L
10	IN	DEW	Dew Sensor	L
11	IN	P-SFT	Power Voltage Abnormal Detect="L" when Power On	L
12	IN	FL-C	Cassette Loading Position Detector	H/L
13	IN	FL-A	Cassette Loading Position Detector	H/L
14	IN	FL-B	Cassette Incorrect Insertion Detector Switch	H/L
15	IN	FL-D	Cassette Loading Position Detector	H/L
16	IN	LD-A	Tape Loading Position Detector	H/L
17	IN	LD-B	Tape Loading Position Detector	H/L
18	IN	LD-C	Tape Loading Position Detector	H/L
19	IN	LD-D	Tape Loading Position Detector	H/L
20	IN	RF-SW	Head Switching Pulse	H/L
21	IN/OUT	SBT	Serial Buffer Timing/Input/Output Signal of Serial Transfer Timing Pulse with Timer IC	—
22	OUT	SST	Serial Data from System Control to Timer	—
23	IN	STS	Serial Data from Timer to System Control	—
24	IN	R-SFT	Record Safety Tab Detect	L
25	IN	V-SYNC 2	Head Switching Pulse	H/L
26	IN	VSS	GND	—
27	IN	RESET	Reset at Reset Signal Input "L", Normal at "H"	L
28	IN	TR•PRESET	TR•PRESET Value Beginning Set	H/L
29	OUT	TR A/M SW	Tracking of Auto/Manual Switching Pulse	H/L
30	IN	OSC IN	Cristal Oscillator (4MHz Input)	—
31	OUT	OSC OUT	Cristal Oscillator (4MHz Output)	—
32	—	VSS	GND	—
33	OUT	V-MUTE	Video Mute Signal (Not used)	H
34	OUT	OUT-A-MUTE	Out Put Select Audio Mute Signal (Not used)	H
35	OUT	D-PB	Video/Audio Playback Instruction Signal	L
36	OUT	D-REC	Video/Audio Recording Instruction Signal	H
37	OUT	P-ON	Power-On Instruction Signal	L
38	OUT	FL-REV	Cassette Loading Motor Control Signal	H
39	OUT	FL-FWD	Cassette Loading Motor Control Signal	H
40	OUT	TV/VCR	RF Conv. On/Off Signal	H/L
41	OUT	BAND 0	Tuner Band Set Signal 0	H/L
42	OUT	BAND 1	Tuner Band Set Signal 1	H/L

Pin No.	IN/OUT	Signal Name	Function	Active Level
43	OUT	AFT DEF	Auto Frequency Control On/Off Signal	H
44	OUT	TV/SP	Output for Channel Adaptor Switching	H/L
45	OUT	PAL-H	PAL/SECAM Switching Pulse	H/L
46	OUT	SECAM VL	Output "H" when Receiving VL Band in SECAM Mode	H
47	OUT	VPS CHK	Output "H" when Checking VPS in Timer REC Stand By (Not used)	H
48	IN	AUTO EJ INH	"H" at Auto Eject Inhibition Function	H/L
49	OUT	DM-ON	Drum Rotation Control Signal Output (Rotation="H")	H
50	OUT	C-DRIVE	Capstan Motor Drive Signal (Rotation=Open/Stop="L")	H
51	OUT	C-F/R	Capstan Motor FWD/REV Control Signal (Forward="L", Reverse="H")	H/L
52	OUT	PAUSE	Pause Control	H
53	IN	LP/EP-H	Tape Speed LP or EP Mode="H" Input	H/L
54	IN	EP-H	Tape Speed EP Mode="H" Input	H/L
55	OUT	S-DATA	Servo IC Data	—
56	OUT	S-CLK	Servo IC Timing Clock	—
57	OUT	LD-REV	Loading Motor Reverse Control Output (Reverse/Stop="H")	H
58	OUT	LD-FWD	Loading Motor Forward Control Output (Forward/Stop="H")	H
59	OUT	TR-MM	Tracking Mono Multi Output	L
60	OUT	SYS-A-MUTE	System Control Audio Mute Signal	H
61	OUT	TU-A-MUTE	Tuner Audio Mute Signal	H
62	OUT	INSEL 2	Input Selector Control 2	H/L
63	OUT	INSEL 1	Input Selector Control 1	H/L
64	OUT	OUTSEL	Output Selector Control	H/L


IC5001 (QSMQB0SMB007)

TIMER

Pin No.	IN/OUT	Signal Name	Function	Active Level
1	IN	VCC	+5V	—
2	IN	-28V	-28V	—
3	IN	SD	Tuner Video Signal Sync. Signal Input	L
4	IN	AFT	Tuner AFT Voltage Input	—
5	OUT	V-MUTE	Video Mute Signal Output	H
6	OUT	VPS-CLK	VPS Interface Clock	—
7	IN/OUT	VPS-DATA	VPS Interface Data	—
8	OUT	BAND 0	Tuner Band Set Signal 0 (Not used)	H/L
9	OUT	BAND 1	Tuner Band Set Signal 1 (Not used)	H/L
10	OUT	T-DAC	Tuner Tuning Voltage Control Signal	—
11	OUT	AFT-DEF	Auto Frequency Control On/Off Signal (Not used)	H
12	IN/OUT	SBT 1	Serial Buffer Timing Signal	—
13	OUT	STS 1	Serial Data from Timer IC to System Control IC	—
14	IN	SST 1	Serial Data from System Control IC to Timer IC	—
15	OUT	T-A-MUTE	Tuner Audio Mute Signal (Not used)	H
16	IN/OUT	SBT 2	Serial Buffer Timing Signal	—
17	OUT	STS 2	Serial Data from Timer IC to System Control IC	—
18	IN	SST 2	Serial Data from System Control IC to Timer IC	—
19	OUT	SYNC	32KHz Test	—
20	OUT	S-CLK	Memory IC Timing Clock	—
21	IN/OUT	S-DATA	Memory IC Data	—
22	OUT	TV/SP	CANAL TV/VCR Switching Pulse (Not used)	H/L
23	OUT	PAL-H	PAL/SECAM Switching Pulse (Not used)	H/L
24	OUT	SECAM VL	VL SECAM Switching Pulse (Not used)	H/L
25	IN	REMOCON	Remote Control Serial Input	—
26	IN	P-DWN	Power Down Input Signal	L
27	IN	RESET	System Initialize Signal	L
28	IN	OSC 1 IN	Cristal Oscillator (32KHz)	—
29	OUT	OSC 1 OUT	Cristal Oscillator (32KHz)	—
30	IN	OSC 2 IN	Cristal Oscillator (4.19MHz)	—
31	OUT	OSC 2 OUT	Cristal Oscillator (4.19MHz)	—
32	—	VSS	GND	—
33	IN	KEY-DATA 4	Key Scan Signal Input	—
34	IN	KEY-DATA 3	Key Scan Signal Input	—
35	IN	KEY-DATA 2	Key Scan Signal Input	—
36	IN	KEY-DATA 1	Key Scan Signal Input	—
37	OUT	A.CONT 2	Audio Control Signal 2 (Not Used)	H/L
38	OUT	A.CONT 2	Audio Control Signal 1 (Not Used)	H/L
39	—	—	—	—
40	OUT	G12	Display Digit Output	H/VPP
41	OUT	G11	Display Digit Output	H/VPP
42	OUT	G10	Display Digit Output	H/VPP
43	OUT	G9	Display Digit Output	H/VPP
44	OUT	G8	Display Digit Output	H/VPP
45	OUT	G7	Display Digit Output	H/VPP
46	OUT	G6	Display Digit Output	H/VPP


Pin No.	IN/OUT	Signal Name	Function	Active Level
47	OUT	G5	Display Digit Output	HVPP
48	OUT	G4	Display Digit Output	HVPP
49	OUT	G3	Display Digit Output	HVPP
50	OUT	G2	Display Digit Output	HVPP
51	OUT	G1	Display Digit Output	HVPP
52	OUT	S13	Display Segment Output	HVPP
53	OUT	S12	Display Segment Output	HVPP
54	OUT	S11	Display Segment Output	HVPP
55	OUT	S10	Display Segment Output/Key Scan Signal Output	HVPP
56	OUT	S9	Display Segment Output/Key Scan Signal Output	HVPP
57	OUT	S8	Display Segment Output/Key Scan Signal Output	HVPP
58	OUT	S7	Display Segment Output/Key Scan Signal Output	HVPP
59	OUT	S6	Display Segment Output/Key Scan Signal Output	HVPP
60	OUT	S5	Display Segment Output/Key Scan Signal Output	HVPP
61	OUT	S4	Display Segment Output/Key Scan Signal Output	HVPP
62	OUT	S3	Display Segment Output/Key Scan Signal Output	HVPP
63	OUT	S2	Display Segment Output/Key Scan Signal Output	HVPP
64	OUT	S1	Display Segment Output/Key Scan Signal Output	HVPP

 LEAD IDENTIFICATIONS

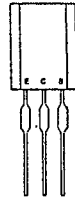


DTA124
DTA143
DTC124
A1346

 
2SA608
2SA933
2SC536
2SC1740
2SC2058
2SC3400
2SD400
2SC4204
2SD1468

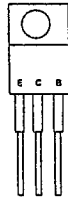

2SC3979
2SC4517
2SC3866

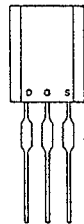 


2SK128

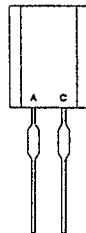 


L5631

 A: Anode
C: Cathode

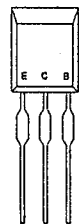


2SD1581

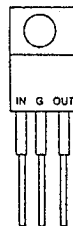 


AN7812
NJM7812



 
SG-211

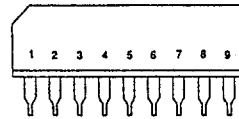


LA7910
LA7956

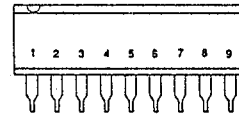 


TA7291S

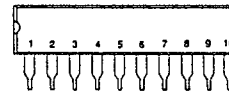 


LA7210

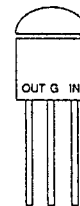 

AN78L05
NJM78L05A

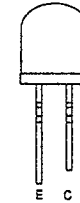 

RPT-38PB3F

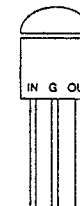 

T529D

STANDARD MAINTENANCE

SERVICE SCHEDULE OF COMPONENTS

○:Check ●:Change

Deck		Periodic Service Schedule			
Ref. No.	Parts Name	1,000 H	2,000 H	3,000 H	4,000 H
B2	Cylinder Ass'y	○	●	○	●
B3	Loading Motor			●	
B7	Pinch Roller Arm Ass'y		●		●
B8	Pulley Sub Ass'y		●		●
B21	Belt LDG		●		●
B26	Clutch Block Assembly		●		●
B27	Band Break Ass'y		●		●
B28	Main Break S Ass'y		●		●
B29	Main Break T Ass'y		●		●
B30	T Break Arm Ass'y		●		●
B31	AC Head Ass'y			●	
B32, B33	Reel Assembly			●	
B37	Capstan Motor		●		●
B52	Belt FWD		●		●
B54	Drum Ground			●	
* B73	Full Erase Head			●	
☆ B86	F Break Ass'y		●		●

Note:

1. Clean all parts for the tape transport (Upper Drum with video head / Pinch Roller / Audio Control Head / Full Erase Head) using 91% Isoprophyl Alcohol.
2. After cleaning up the parts, perform all DECK ADJUSTMENTS.
3. All Reference Numbers listed above refer to parts shown on Deck Exploded View .
4. Parts marked ☆ are used in 4 head model only.
5. Parts marked * is used in Rec / Play model only.

CLEANING

1. Cleaning of Video Head


Use a Head Cleaning Stick or Chamois Skin

Procedure

1. Remove the top cabinet.
2. Put on a glove (thin type) to avoid touching the upper drum and lower drum with bare hands.
3. Put a few drops of alcohol on the Head Cleaning Stick, and by slightly placing it against the head tip, allow the upper drum to turn to the right and left.

NOTE:

1. The video head is very hard material, but since it is very thin, avoid cleaning it vertically.
2. Wait for the cleaned part to dry out before operating the unit.
3. Do not reuse the stained Head Cleaning Stick.

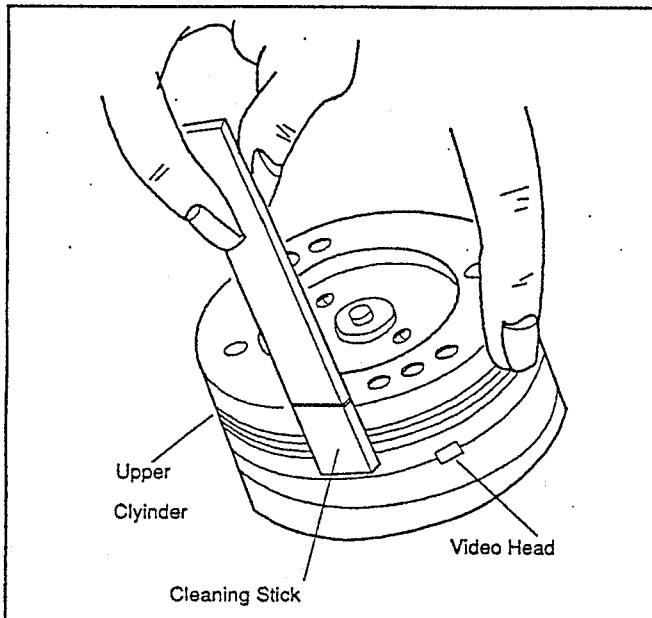

2. Cleaning of Audio Control Head


Use a cotton swab (Q-Tip)

Procedure


1. Remove the top cabinet.
2. Put a few drops of alcohol on the cotton swab, and clean up the audio control head, being careful not to damage the upper drum and other tape running parts.

NOTE:

1. Avoid cleaning audio control head vertically.
2. Wait for the cleaned part to dry out, before operating the unit, or damage will occur.

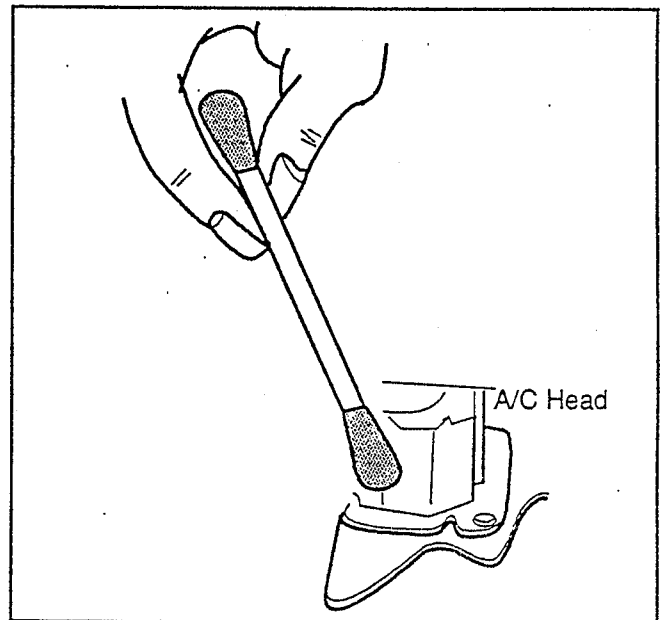

SERVICE FIXTURES AND TOOLS

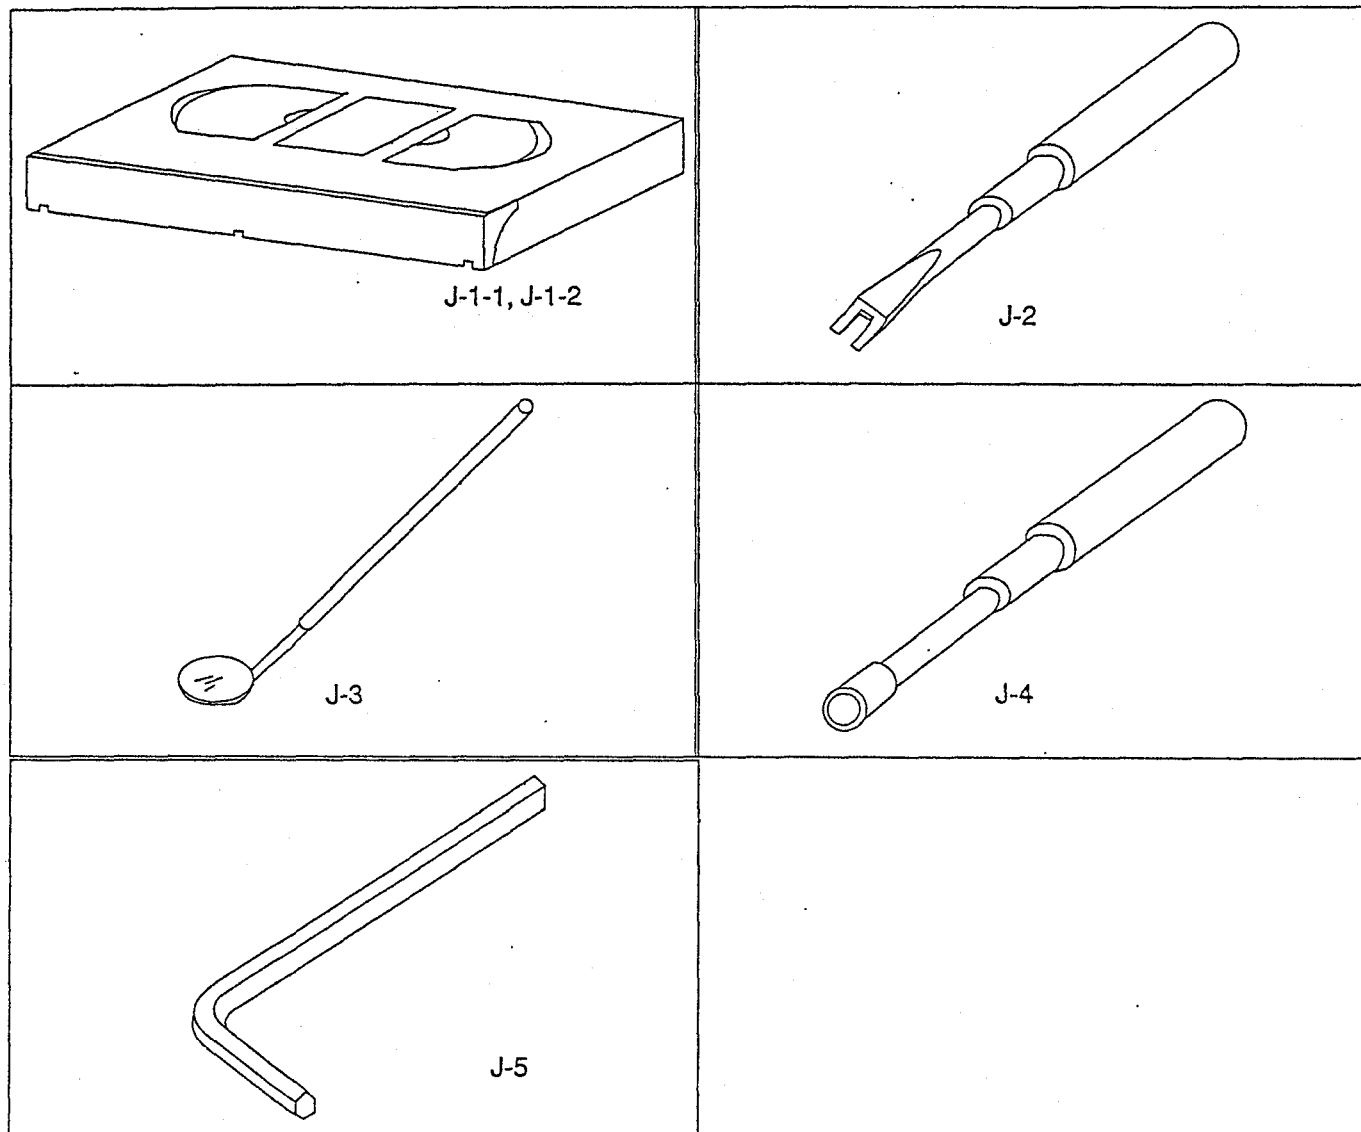

Ref. No	Name	Adjustment
J-1-1	Alignment Tape (F6-A)	Head Adjustment of Audio Control Head
J-1-2	Alignment Tape (F6-N): 2 Head Model	Azimuth Adjustment of Audio Control Head / X Value
	Alignment Tape (F6-NS): 4 Head Model	/ Confirmation / Adjustment of Envelope Waveform
	Alignment Tape (F6-NF): 4 Head model	
J-2	Special Driver (FSJ-0001)	Tape Guide Height
J-3	Mirror (FSJ-0004)	Tape Transportation Check
J-4	Box Driver, Mx3 (FSJ-0005)	Guide Pole / A/C Head Height
J-5	Hexagon Wrench (0.9mm)(FSJ-0002)	Confirmation and Adjustment of Tape Running
	Hexagon Wrench (1.5mm)(FSJ-0003)	Confirmation and Adjustment of Tape Running

MECHANICAL ALIGNMENT PROCEDURES

Service Information

A. Method for Manual Tape Loading/Unloading of VCR.

To place the Cassette Holder in the down position, turn the Pulley Ass'y counterclockwise after inserting a tape.

To place it in the UNLOAD/EJECT position, turn the Pulley Ass'y clockwise.

B. How to place the Cassette Holder in the down position without a cassette tape.

METHOD

1. Disconnect AC Plug and remove the Top Cover.

2. Cover the LED Sensors below Prism L and Prism R.

Note: When handling Tape Sensor, take care of Static Electricity.

Connect AC plug. Push the tab to unlock cassette (1) and then push the tape to load it into the cassette holder (2).

Top View

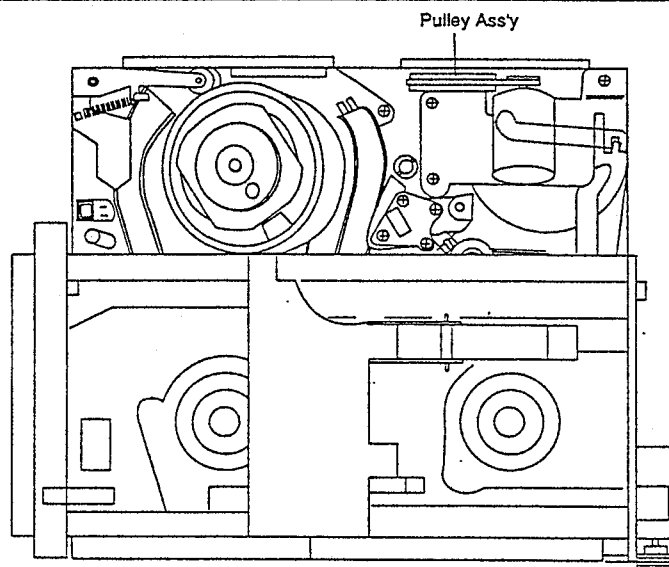


Fig. M1

Bottom View

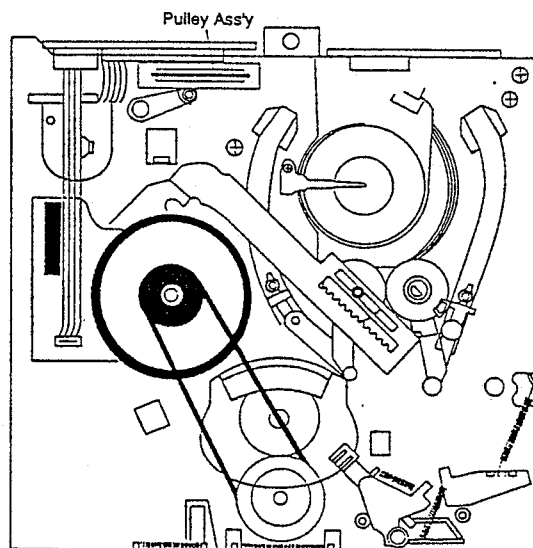


Fig. M2

1. TAPE INTERCHANGEABILITY ALIGNMENT (FINAL ALIGNMENT)


Note: To perform these alignment / confirmation procedures, make sure that the Tracking Control is set in the Neutral position.

Equipment required :

- Dual Trace Oscilloscope
- VHS Alignment Tape(F8-A, F8-N)
- Post Alignment Screwdriver
- X-Position Alignment Fixture
- Screwdriver (Lock the Tape Guide Rollers)
- Box Driver M3

Note: After this Mechanical Alignment, perform the Electrical Adjustment method.

Tape Running Alignment Flow Chart

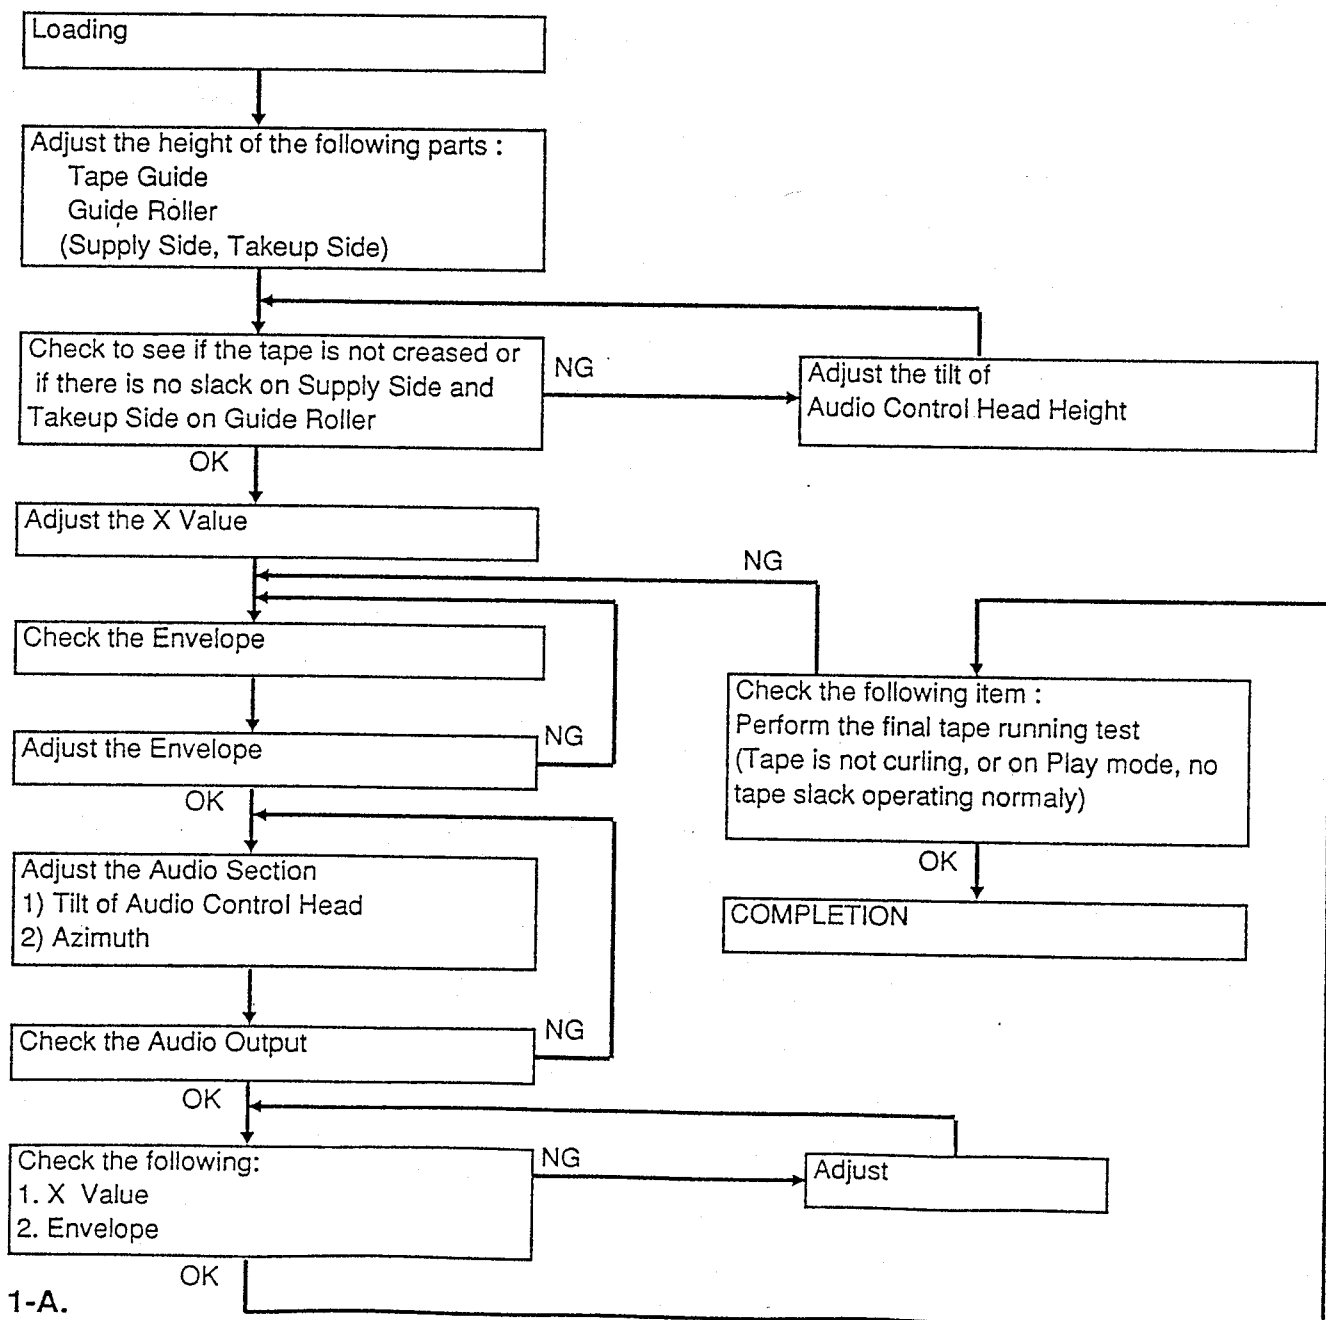

Preliminary Confirmation and Alignment of Tape Running

Purpose:

To make sure that the tape running is well stabilized.

Symptom of Misalignment:

If the tape runs unstable, the tape will be damaged.

1. Playback (on forward) a cassette tape and confirm that the tape runs without curling or creasing at the guide rollers [2] and [3], and at the points A and B on the lead surface. (Refer to Fig M3 and M4)
2. If curling or creasing is apparent, align the height of guide rollers by turning the top of guide rollers [2] and [3] with Post Adjustment Screwdriver. (Refer to Fig. M3 and M5)

Note: Before turning Lock Screw slightly, loosen silver Lock Screw using Lock Screw wrench.

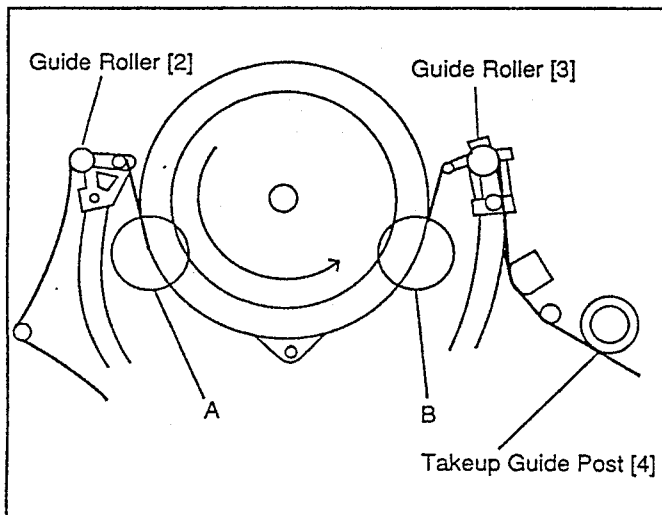


Fig. M3

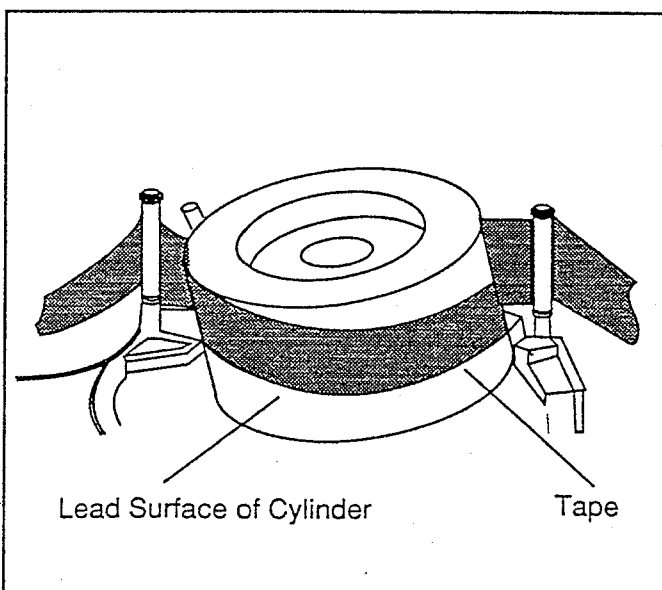


Fig. M4

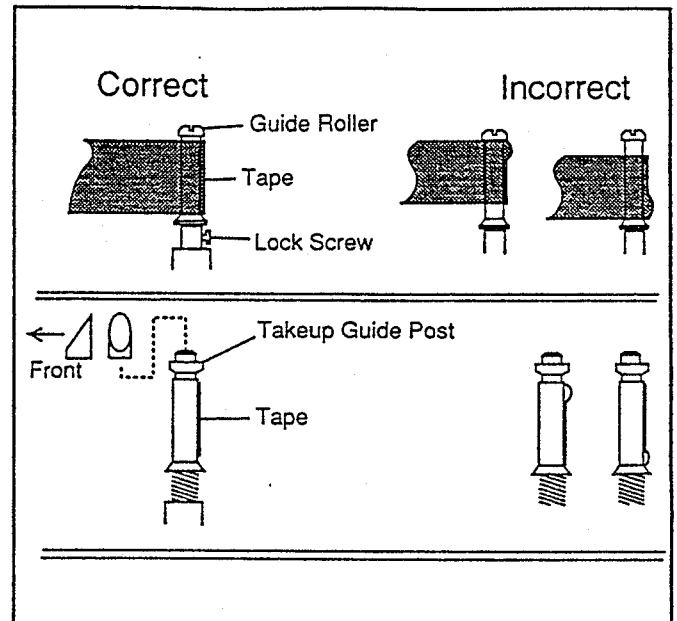


Fig. M5

1-B. Preliminary Confirmation of Audio Control Head Height

Purpose :

To make sure that the tape runs properly along the Control Head.

Symptom of Misalignment:

If the control signal is not properly picked up, Servo Operation can not be achieved.

This confirmation is required when the Audio Control Head is replaced and for a preliminary height alignment.

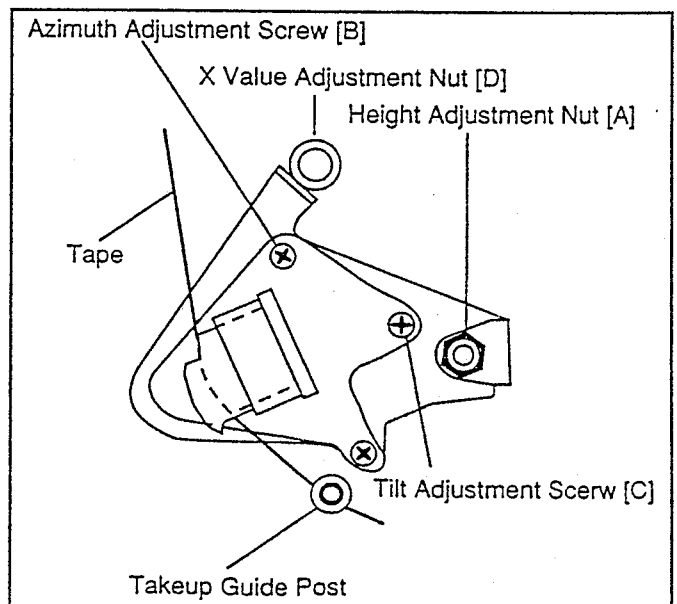


Fig. M6

For final alignment, perform items 1-C and 1-D.

1. Playback a cassette tape. Looking at the lower edge of the Control Head with the tape in motion, ensure that the lower edge of the tape runs 0.15~0.25mm above the lower edge of the Control Head. If it does not run properly, turn the Height Adjustment Nut [A] slightly in either direction as necessary to correct it. Turn clockwise to lower the head and counterclockwise to raise it. (Refer to Fig. M6 and M7.)

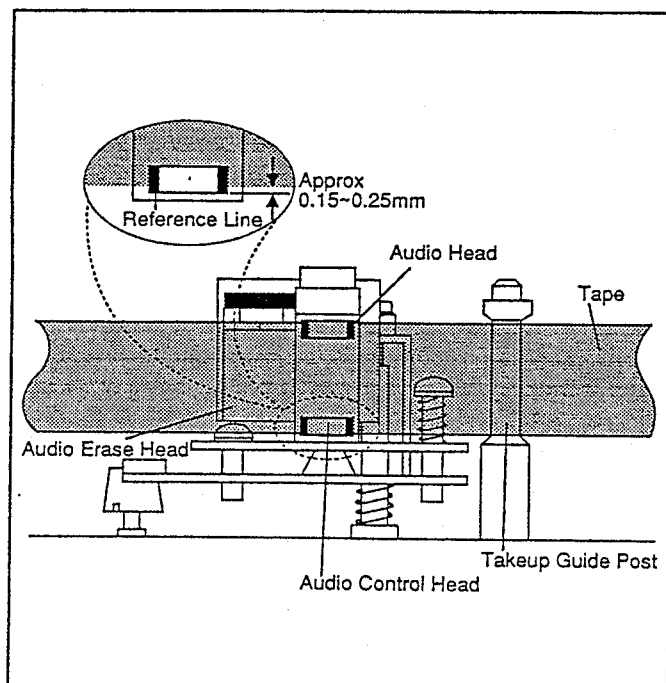


Fig. M7

1-C. Preliminary Confirmation of Tilt of Audio Control Head

Purpose:

To confirm that the tape running is well stabilized. In particular, confirm that the tape is properly picking up the Audio Signal at the upper part and the Control Signal at the lower part.

Symptom of Misalignment:

If the tilt of the Audio Control Head is poorly aligned, the tape will eventually be damaged.

Playback a cassette tape and confirm that the tape running between Takeup Guide Post [4] in Fig. M3 and Audio Control Head has no slack. If the tape has slack, align the Control Head by turning tilt adjustment screw [C] in Fig. M6 so that the tape has no slack.

1-D. Final Height Alignment of Audio Control Head

Purpose:

To align the position and height of Audio Control Head so that it meets the tape tracks properly.

Symptom of Misalignment:

If the position of Audio Control Head is not properly aligned, the Audio S/N Ratio or Frequency Response is also poor.

1. Connect the oscilloscope to the audio output jack on the rear of deck.
2. Confirm that the Tape running condition between Takeup Guide Roller and Audio Control Head has no tape slack. If there is tape slack, remove the tape slack by turning the Tilt Adjustment screw [C]. Then realign the height of Guide Roller (Item 1-A).
3. Playback the Monoscope Portion (1kHz, Audio) on the alignment tape (F8-A), then confirm that the audio signal output level is 1KHz. Finally adjust the Height Adjustment Nut [A] so that the output level is at maximum. (Fig. M6)
4. Adjust the Azimuth Adjustment Nut [B] so that the output level of AC Voltmeter Value is at maximum. (Fig. M6)

Note: Fix the screw [C] with lock paint after realignment.

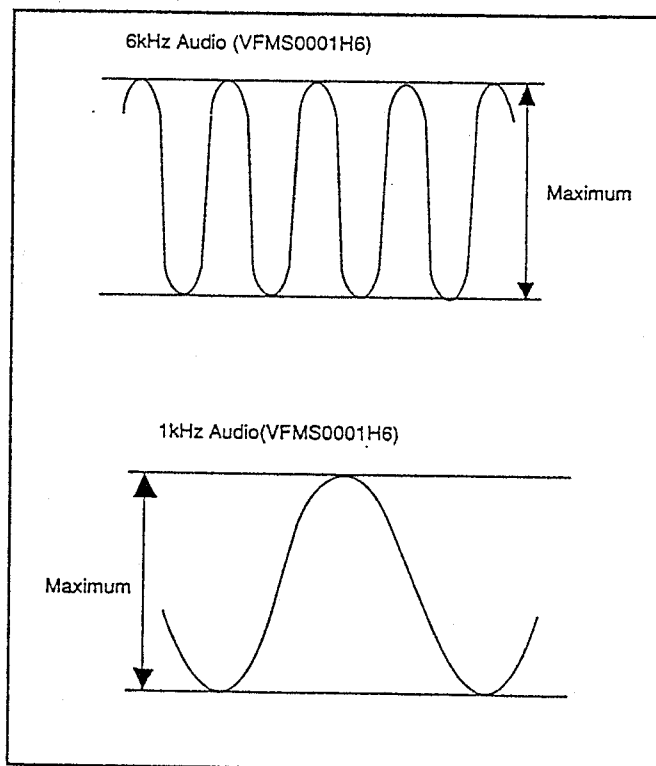


Fig. M8

Azimuth Alignment of Audio Control Head

Purpose:

To correct the Azimuth alignment so that the Control Head angle meets tape tracks properly.

Symptom of Misalignment:

If the position of Audio Control Head is not properly aligned, the Audio S/N Ratio or Frequency Response is also poor.

1. Connect the oscilloscope to the audio output jack on the rear of the deck.
2. Playback the Monoscope pattern (6kHz, audio) on the alignment tape (F8-N), and adjust the Height Adjustment Nut so that the output level of AC Voltmeter or waveform of oscilloscope is at maximum.

Note:

Fix the screw [C] with lock paint after realignment.

1-E. Final X Value Alignment

Purpose:

To align the Horizontal Position of the Audio Control Head.

Symptom of Misalignment:

If the Horizontal Position of the Audio Control Head is not properly aligned, maximum envelope cannot be obtained at the Neutral Position of the Tracking Control Circuit by pressing CH UP and DOWN buttons on VCR at the same time.

1. Set the Tracking Control to the Neutral position.
2. Connect the oscilloscope to TP of C-PB on Main C.B.A. Use TP RF-SW as a Trigger.
3. Playback the Monoscope pattern of the Alignment Tape (F8-N) and confirm that the PB FM signal is present.
4. Adjust the X Value adjustment Nut with X Position Adj-Fixture so that the PB FM signal is at maximum.

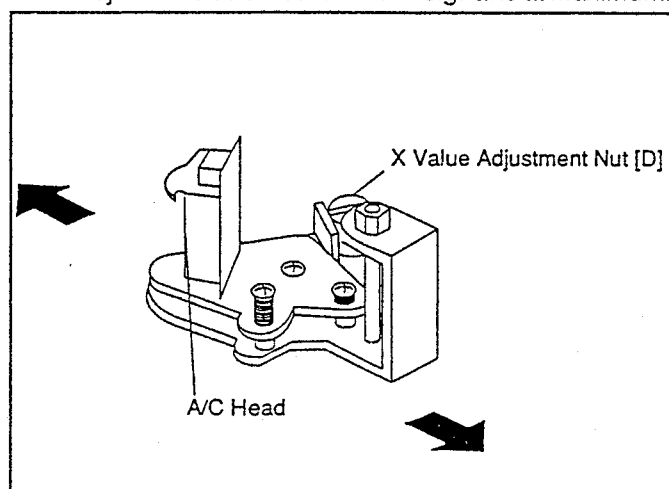


Fig. M9

1-F. Final Confirmation / Adjustment of Envelope Waveform

Purpose:

To achieve a satisfactory picture and secure precise tracking.

Symptom of Misalignment:

If the envelope output is poor, noise will appear in the picture. Then the tracking will lose precision and the playback picture will be distorted by any slight variation of the Tracking Control.

1. Set the Tracking Control to the Neutral Position by pressing CH UP and DOWN buttons on VCR at the same time.
2. Connect the oscilloscope to TP C-PB on Main C.B.A. Use TP RF-SW as a Trigger.
3. Playback the Monoscope pattern on the Alignment Tape (F8-N). Adjust the height of Guide Rollers [2] and [3] watching scope display so that the envelope becomes as flat as possible. If adjustment is required, turn the top of the Guide Roller with the Post Adjustment Screwdriver.

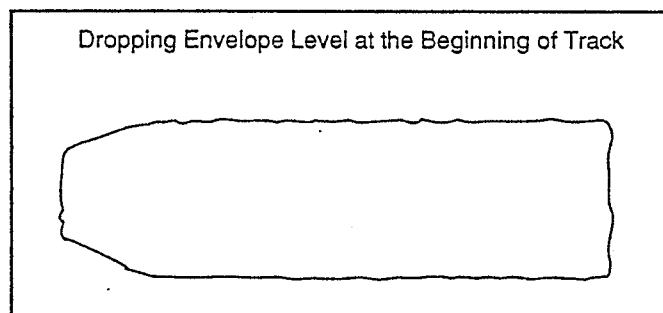


Fig. M10

4. When the Scope Display is as shown in Fig. M10, adjust the height of [2] (Refer to Fig.M3) so the waveform looks like Fig. M12.

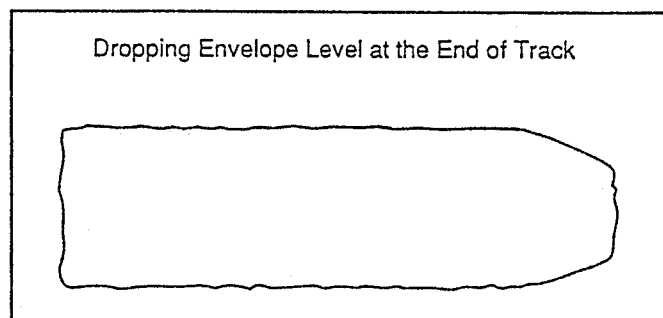


Fig. M11

5. When the Scope display is as shown in Fig. M11, adjust the height of [3] (Refer to Fig.M3) so the waveform looks like Fig. M12.

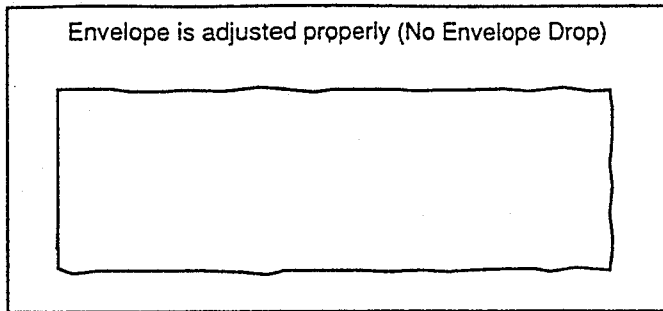


Fig. M12

- When [2] and [3] (Refer to Fig.M3) are aligned properly, there is no Envelope Drop either at the beginning or end of track as shown in Fig. M12.

Note:

Upon completion of adjustment of Guide Roller [2] and [3], tighten the silver Lock Screw on [2] and [3] using Lock Screw wench. Then confirm the X VALUE by pushing the Tracking Control Up or Down buttons alternately, to check the symmetry of the envelope. If required, perform "X VALUE ALIGNMENT".

DISASSEMBLY/ASSEMBLY PROCEDURES OF DECK MECHANISM

Main Mechanism

This procedure starts with the condition that the Cabinet Parts and Cassette Up Unit have been removed. Also, all the following procedures for adjustment and parts replacement should be performed in Stop mode. When reassembling, perform the steps in the reverse order.

STEP /LOC. No.	START- ING No.	PART		REMOVAL		INSTALLATION
				Fig. No.	REMOVE*UNHOOK/ UNLOCK/RELEASE/ UNPLUG/DESOLDER	ADJUSTMENT CONDITION
[1]	[1]	MOTOR HOLDER ASS'Y	T	DM1 DM4	3(S-2), (P-1), Belt	
[2]	[1]	LDG MOTOR PREPARATION	T	DM1 DM4	2(S-3), CN2902	
[3]	[1]	CLEANING HEAD	T	DM1	(S-11)	
[4]	[1]	PINCH ROLLER ARM ASS'Y	T	DM1 DM4	(C-1) Pinch Roller Spring	
[5]	[1]	PINCH ARM ASS'Y	T	DM1 DM4		
[6]	[1]	CAM	T	DM1 DM4		
[7]	[1]	JOINT CBA	T	DM1 DM2 DM8	(S-8), CN2903 CN2801, *CL2901	For Connecting, Refer to Connectors Points
[8]	[1]	PULLEY ASS'Y	T	DM1 DM5	*(L-5), LDG BELT (W-1)	
[9]	[9]	CLUTCH BLOCK ASS'Y	T	DM1 DM2 DM7	2(S-7) CAPSTAN BELT	
[10]	[10]	HEAD AMP CBA	T	DM1 DM2 DM8	(S-9), CN02, CN03 CN1(CYL MTR)	For Connecting, Refer to Connectors Points.
[11]	[11]	CAPSTAN MOTOR UNIT	B	DM2 DM10	3(S-10)	
[12]		MODE SW	B	DM2 DM8	(L-5), *CL2901	For Connecting, Refer to Connectors Points.
[13]		M LEVER HOLDER ASS'Y	T	DM2 DM9	(S-14)	(+)
[14]		KICK ARM HOLDER ASS'Y	B	DM2 DM9		(+)
[15]		KICK ARM	B	DM2 DM9		(+)
[16]		MODE CHANGE LEVER	T	DM1 DM11	*2(L-2)	
[17]		MAIN LEVER ASS'Y	T	DM1 DM12	*(L-3)	
[18]		TAPE GUIDE ASS'Y	T	DM1 DM12	*(P-5), *(L-4), (M5.5)	See Fig. DM12
[19]		A/C HEAD ASS'Y	T	DM1 DM13	Nylon Nut, Head Height Adjustment Spring	See Fig. DM13
[20]		TENSION LEVER SUB ASS'Y	T	DM1 DM14	*(L-1)	(+)
[21]		BAND BRAKE SUB ASS'Y	T	DM1 DM14	(S-1), (L-6)	
[22]		M BRAKE (S)	T	DM1 DM15	*(P-2), (L-7)	(+) When reassembling, hook the Spring after in- stallation of Mode Change Lever.
[23]		M BRAKE (S) LEVER	T	DM1 DM15		
[24]		S BRAKE ARM	T	DM1 DM15	*(P-3)	When reassembling, hook the Spring after in- stallation of Mode Change Lever.
[25]		M BRAKE (T) ASS'Y	T	DM1 DM15		

STEP /LOC. No.	START-ING No.	PART		REMOVAL		INSTALLATION
				Fig. No.	REMOVE*UNHOOK/ UNLOCK/RELEASE/ UNPLUG/DESOLDER	ADJUSTMENT CONDITION
[26]		T BRAKE ARM ASS'Y	T	DM1 DM15	*(P-4)	When reassembling, hook the Spring after installation of Mode Change Lever
[27]		REEL BASE ASS'Y'S (S+T)	T	DM1 DM16	2 Poly Slider Washers	(+)
[28]		EARTH BRUSH ASS'Y	B	DM2 DM17	(S-4)	When reassembling, confirm that the brush is within 1 mm of center of shaft.
[29]		CYLINDER DRUM ASS'Y	T	DM1 DM17	3(S-5), 3(S-6), CN02	
[30]		MOVING GUIDE ASS'Y	T	DM1 DM20	(S-15)	(+)
[31]		MOVING GUIDE T ASS'Y	T	DM1 DM20	(S-15)	(+)
[32]		LOADING ARM M ASS'Y	B	DM2 DM21	(C-3)	When installing, match the marks.
[33]		LOADING GEAR B	B	DM2 DM21	(P-8)	(+)
[34]		LOADING GEAR A	B	DM2 DM21	(P-9)	(+)
[35]		REC ARM	B	DM2 DM19	(S-16), (P-6)	
[36]		BT DRIVE ARM	B	DM2 DM19	(S-16), (P-7)	
[37]		FE HEAD	T	DM2 DM20	(S-12)	(+)
[38]		LUMINESCENCE PRISM	T	DM2 DM20	(S-13)	(+)

↓
①

↓
②

↓
③

↓
④

↓
⑤

↓
⑥

↓
⑦

Note :

- ① :Order of steps in Procedure. When reassembling, perform the step(s) in the reverse order.
These numbers are also used as the identification (Location) No. of parts in Figures.
- ② :The step No. to start with before coming to the corresponding step No. when disassembling.
M Brake S can be removed without removing Mode Change Lever (No. 1).
- ③ :Parts to be removed or installed.
- ④ :Location of part
T=Top B=Bottom R=Right L=Left
- ⑤ :Fig. No. Showing Procedure or Part Location
- ⑥ :Identification of part to be removed, unhooked, unlocked, released, unplugged, unclamped or desoldered.
P=Spring, W=Washer, C=Cut Washer, S=Screw, *=Unhook, Unlock, Release, Unplug or Desolder
2(C-2) = 2 Cut Washer(C-2), 2(L-2) = 2 Locking Clips(L-2), (N-1) = 1 Locking Pin(N-1)
- ⑦ :Adjustment Information for Installation(+)
Refer to Deck Exploded Views for lubrication information.

TOP VIEW

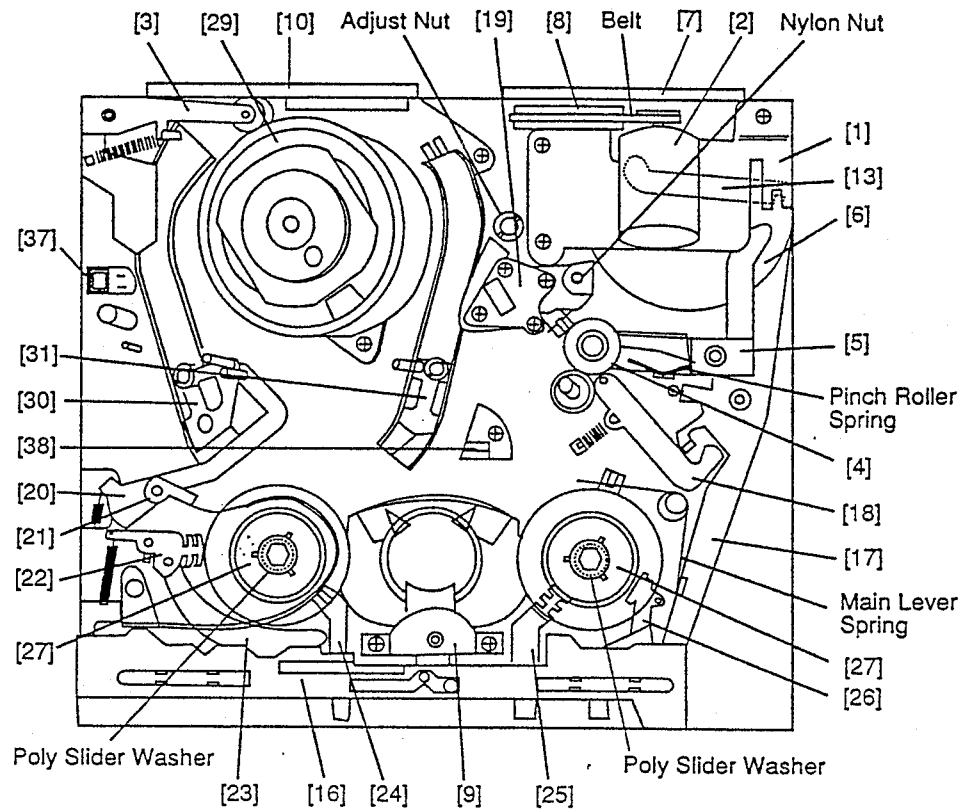


Fig. DM1

BOTTOM VIEW

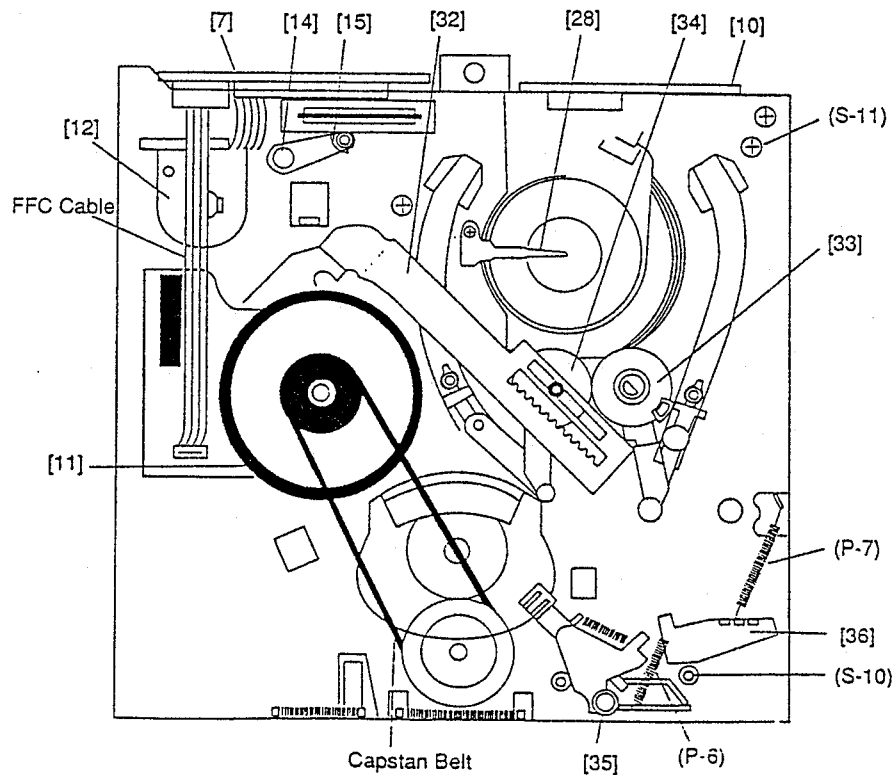


Fig. DM2

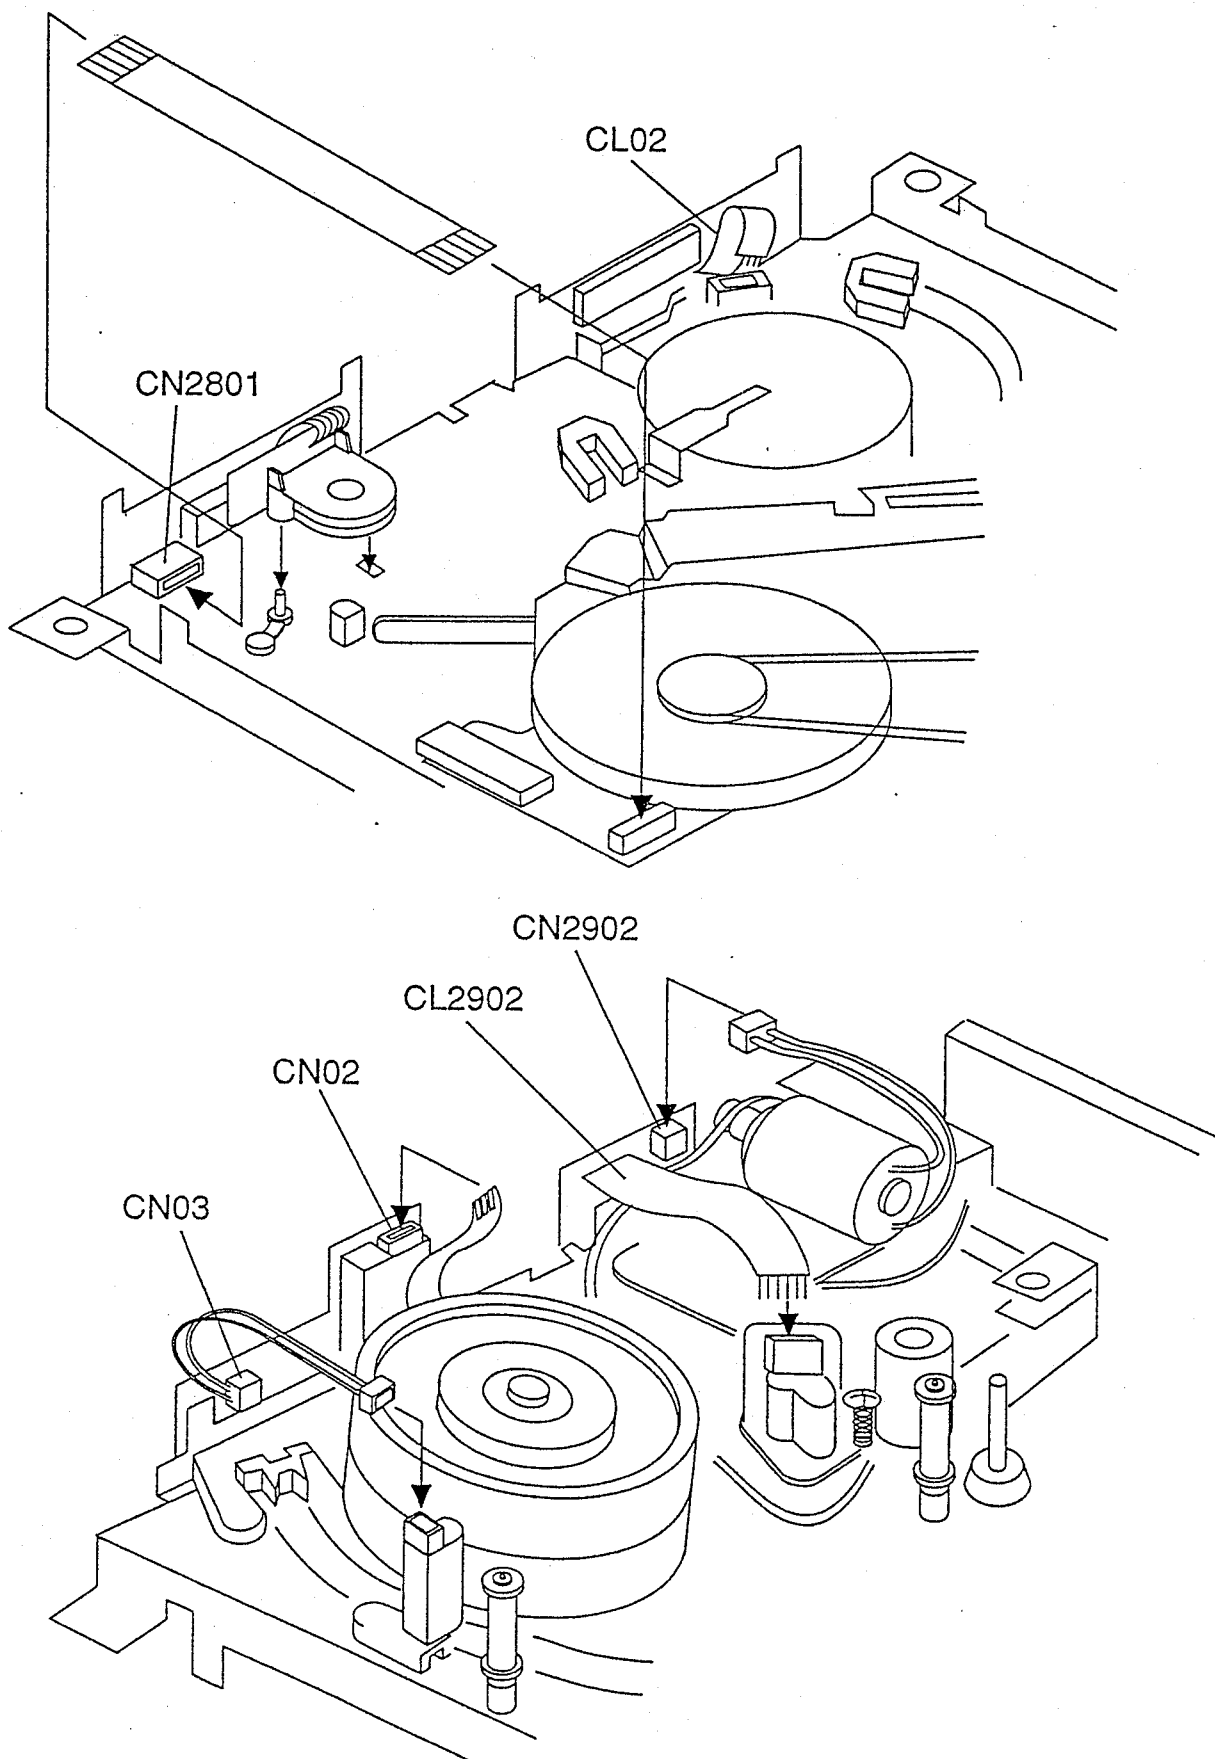


Fig. DM3

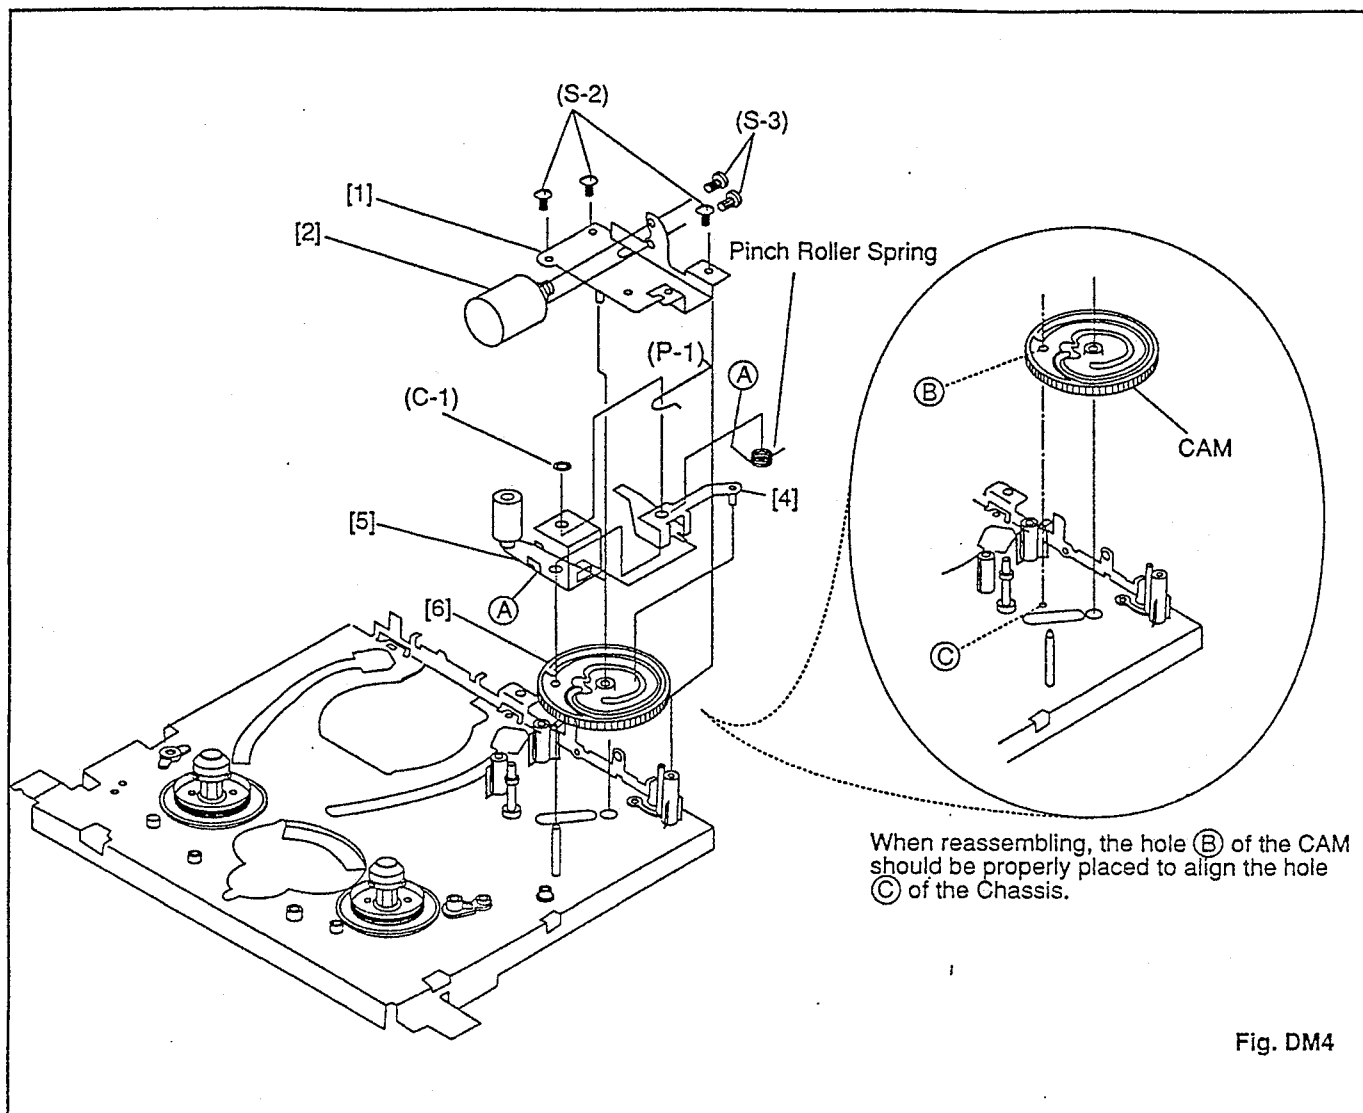


Fig. DM4

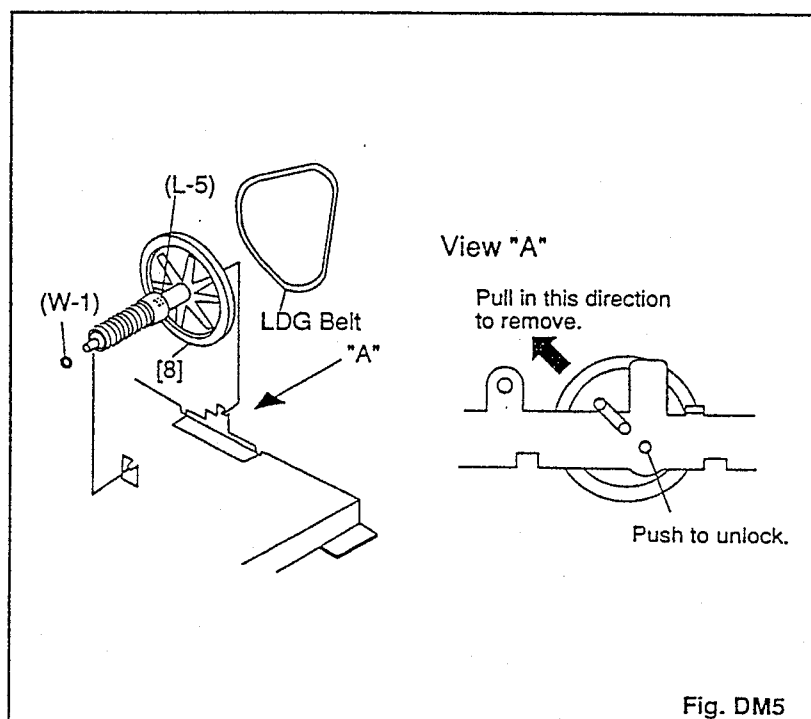


Fig. DM5

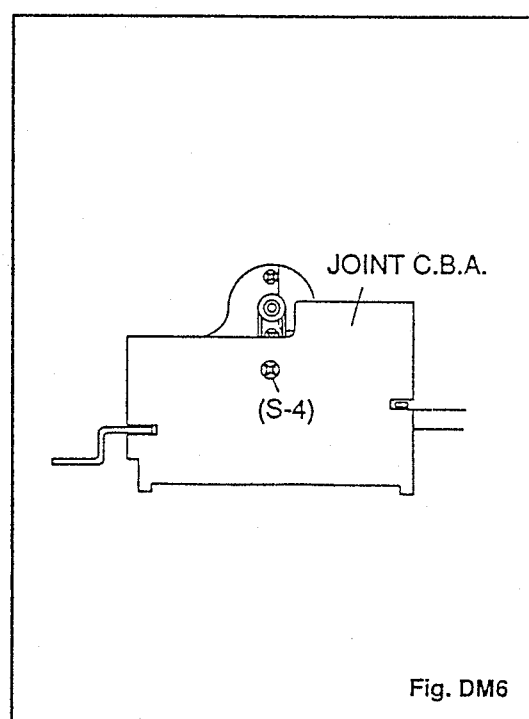


Fig. DM6

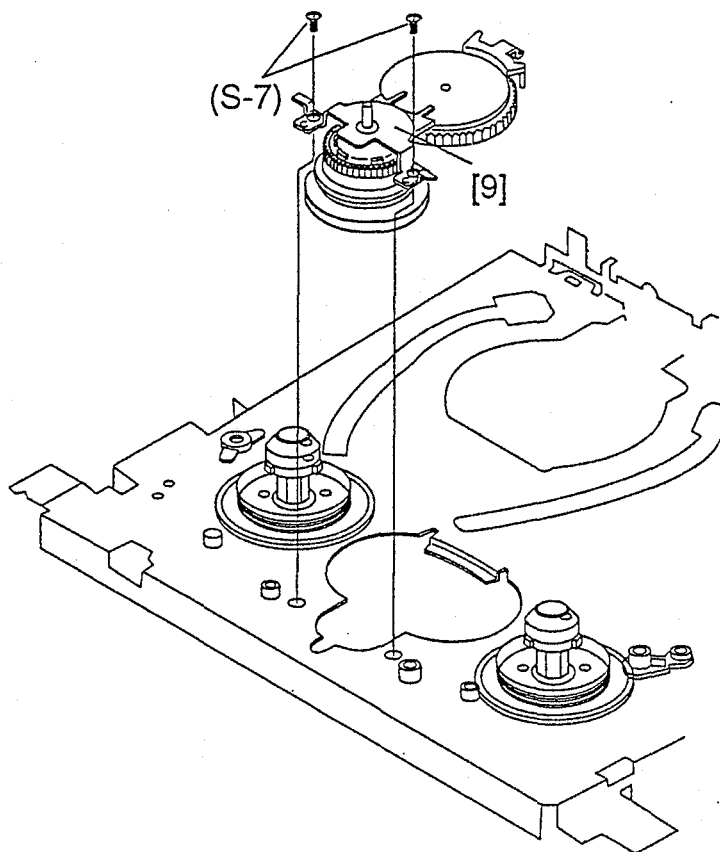


Fig. DM7

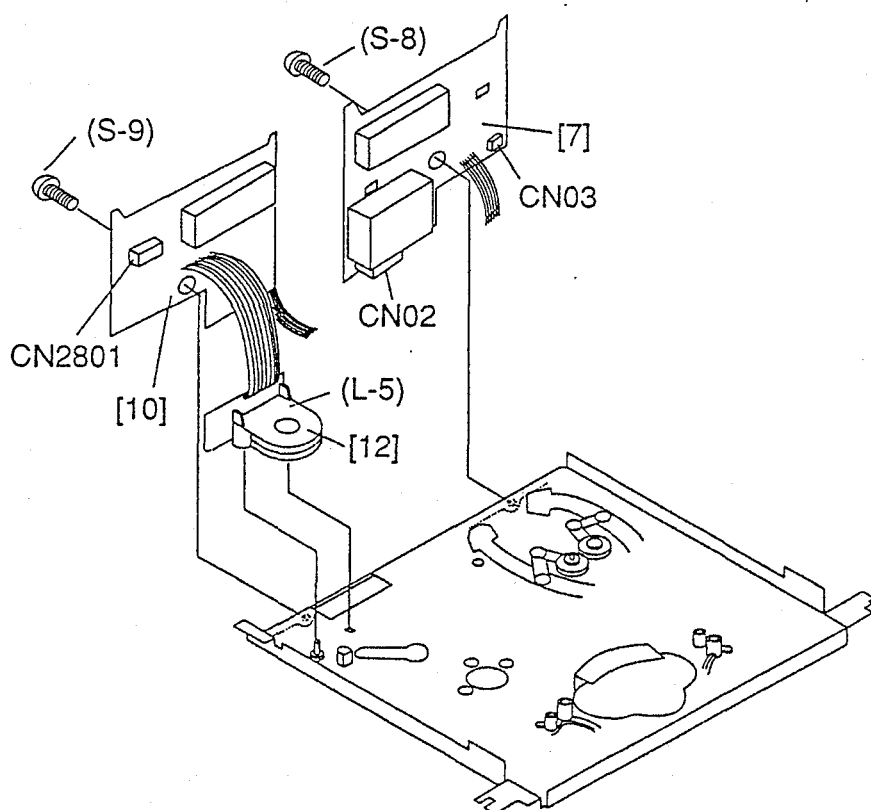


Fig. DM8

Kick Arm Position

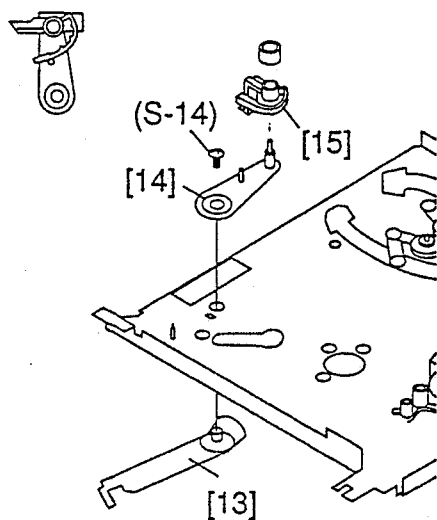


Fig. DM9

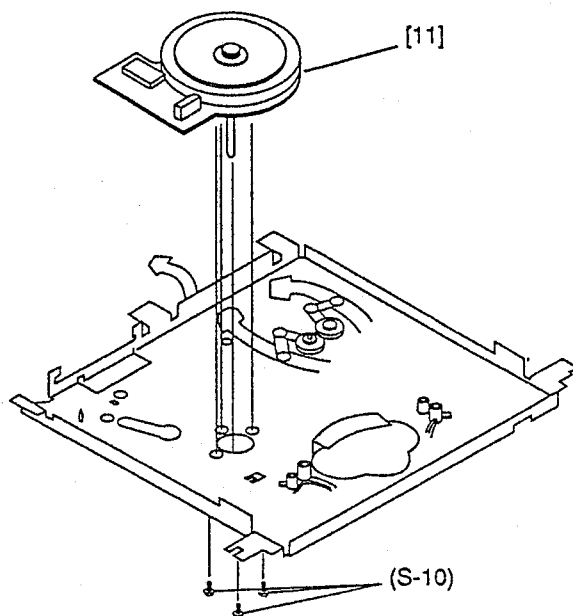


Fig. DM10

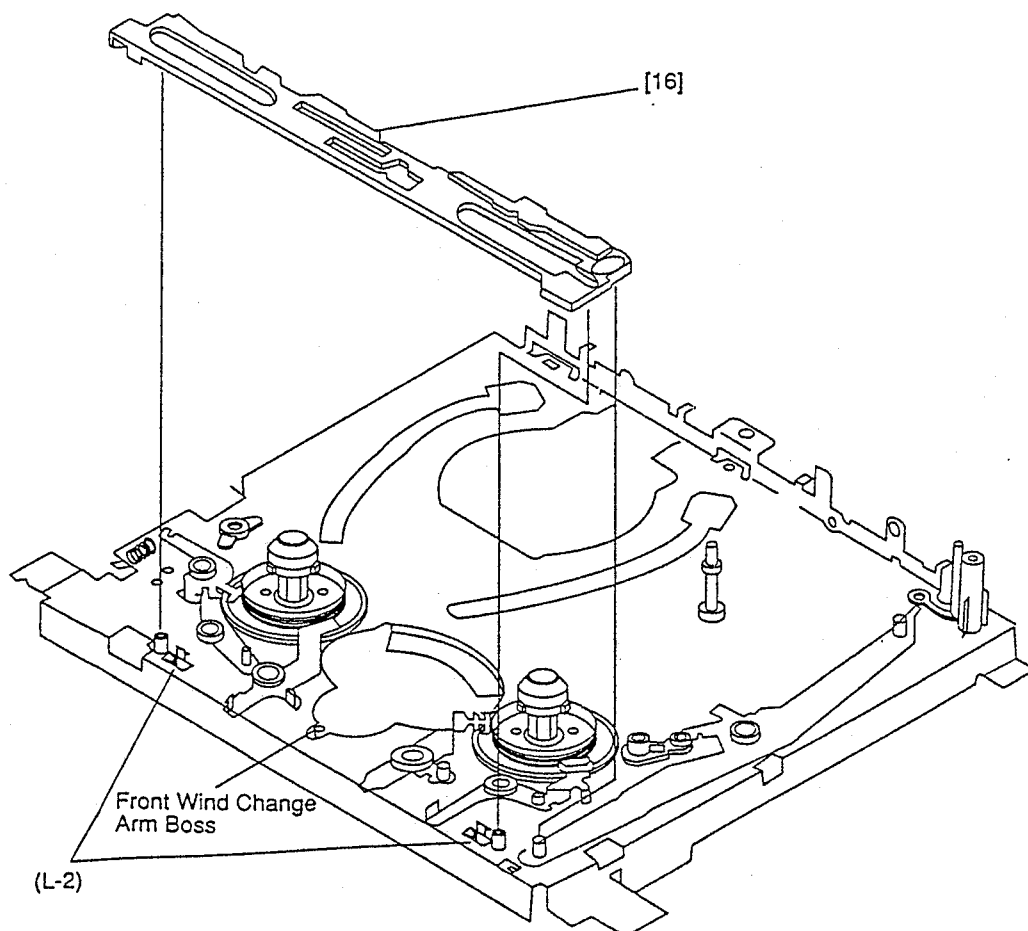


Fig. DM11

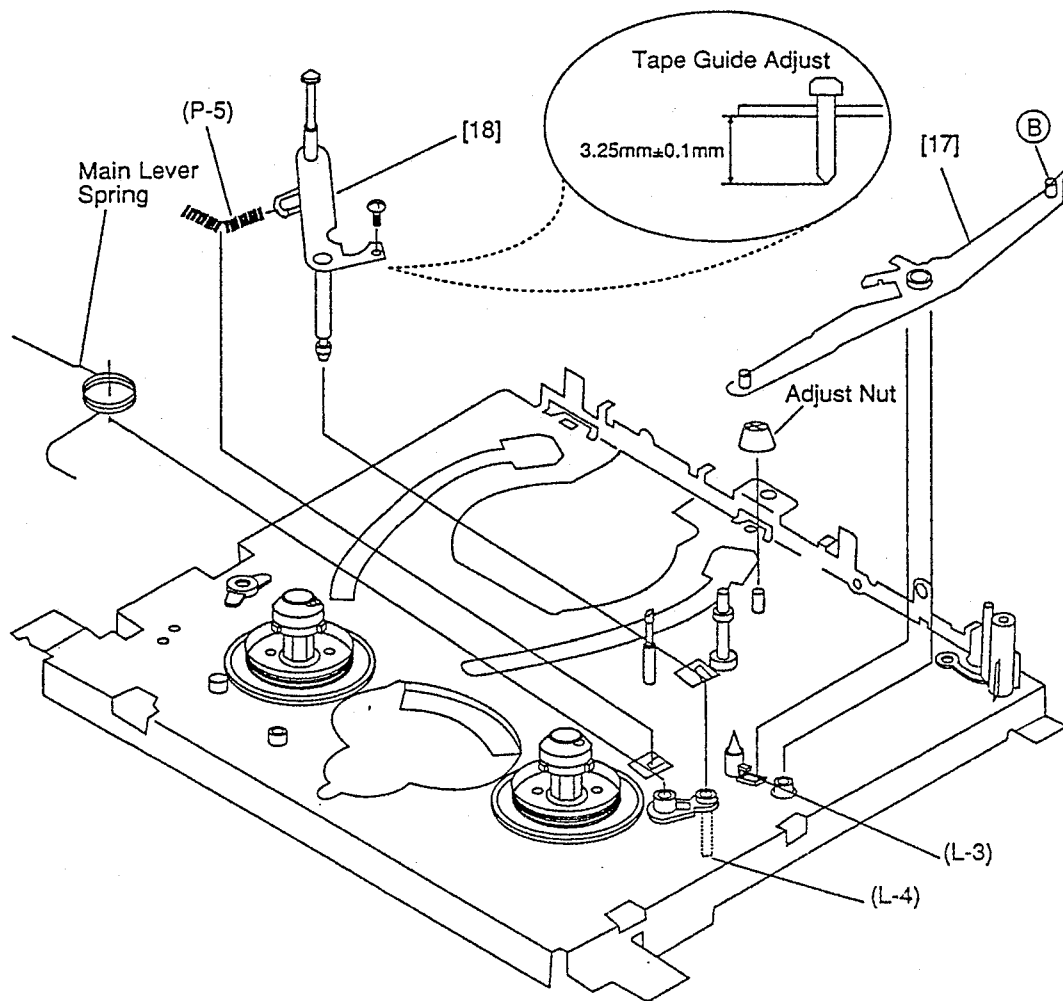


Fig. DM12

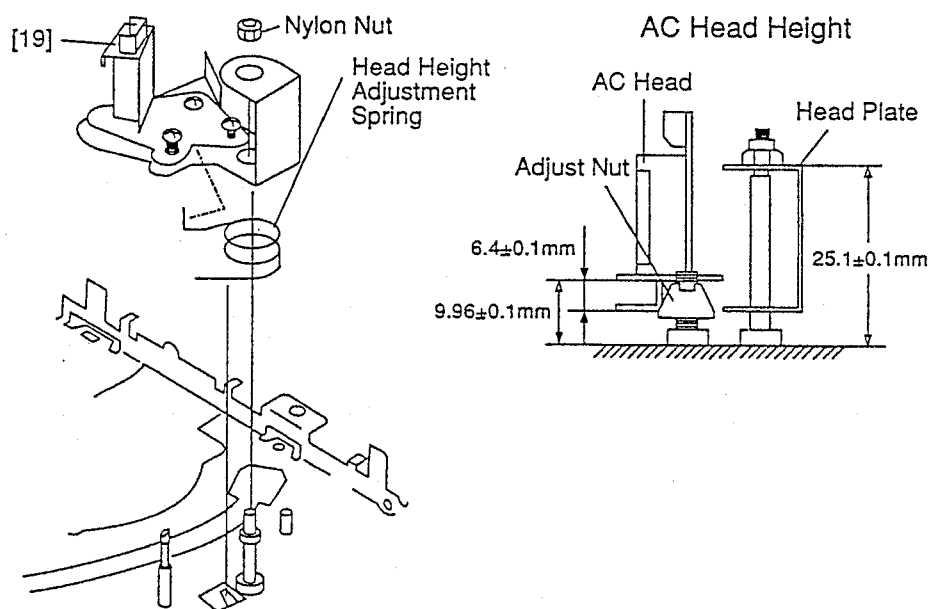
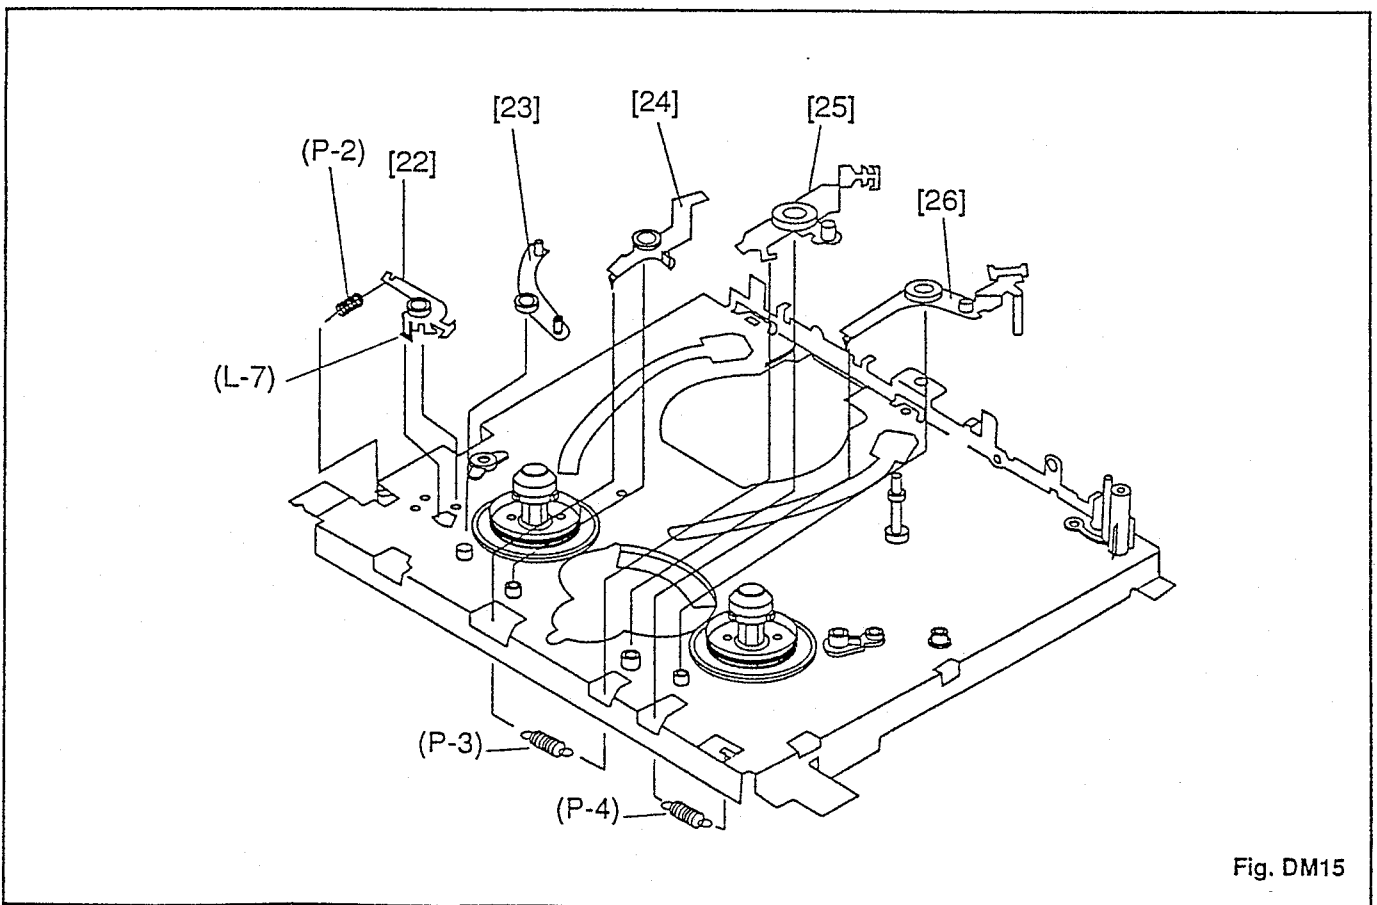
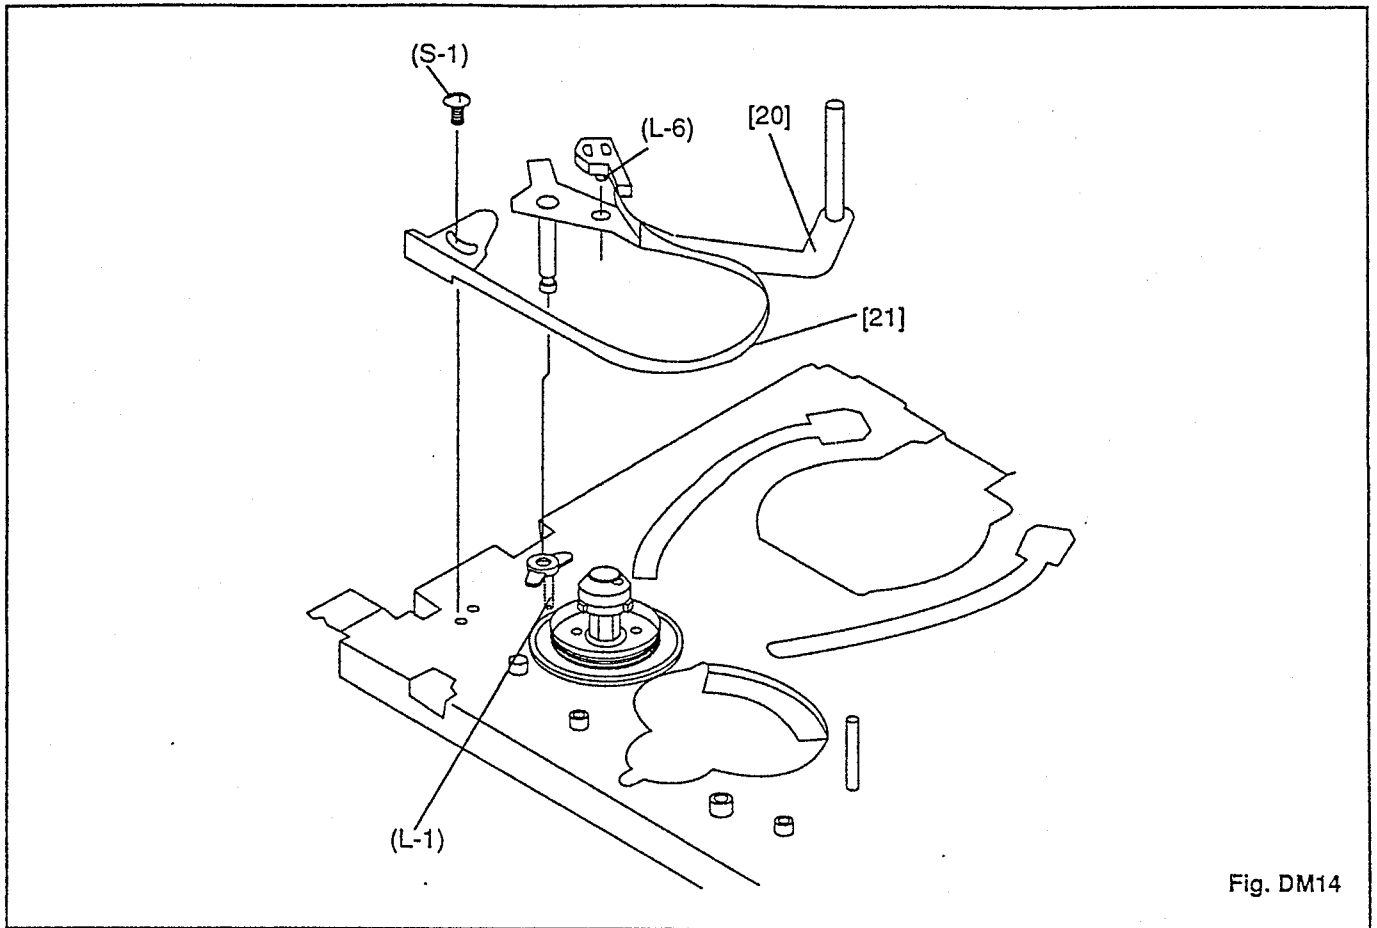


Fig. DM13



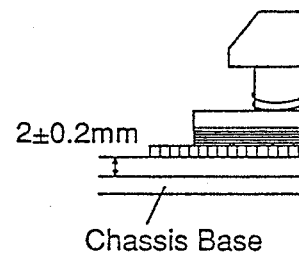
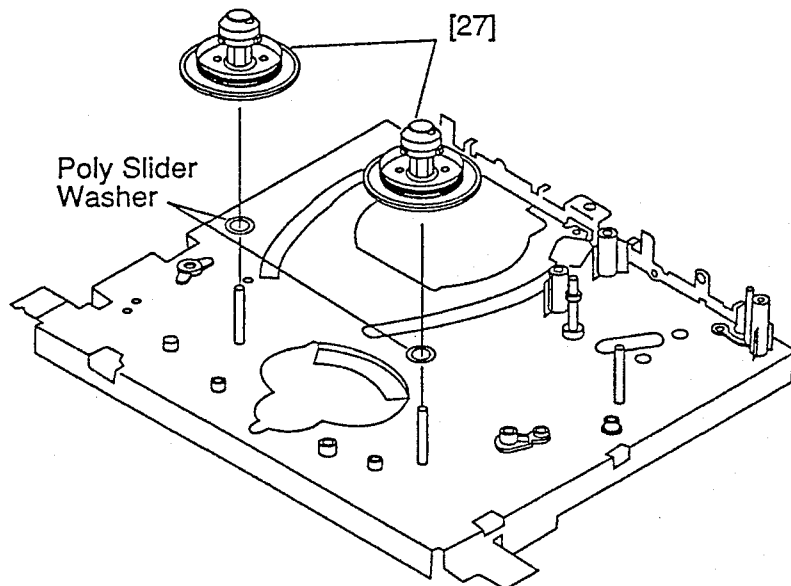


Fig. DM16

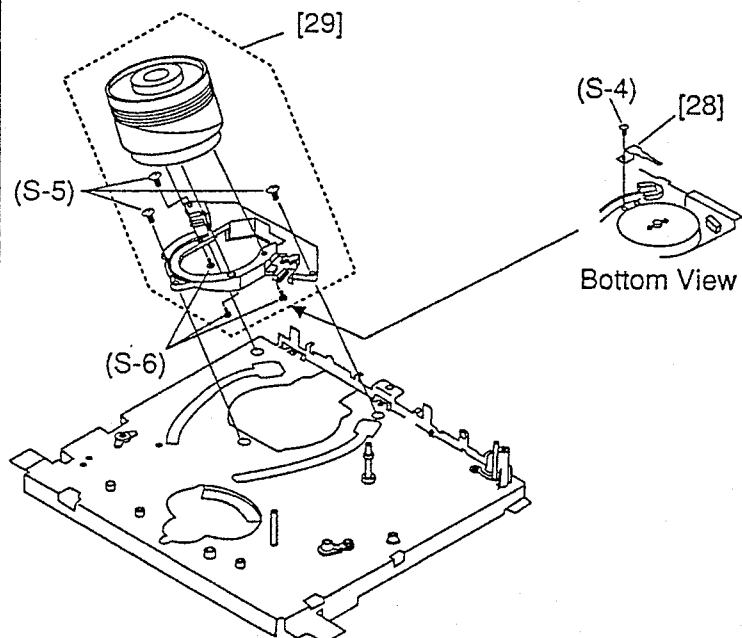


Fig. DM17

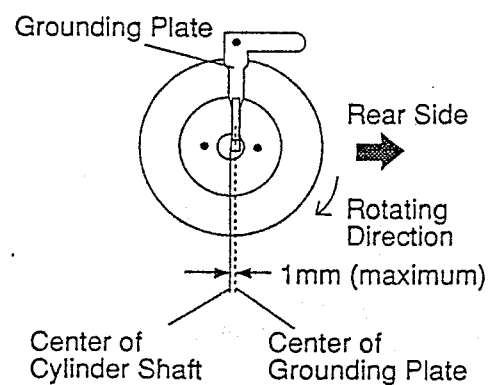


Fig. DM18

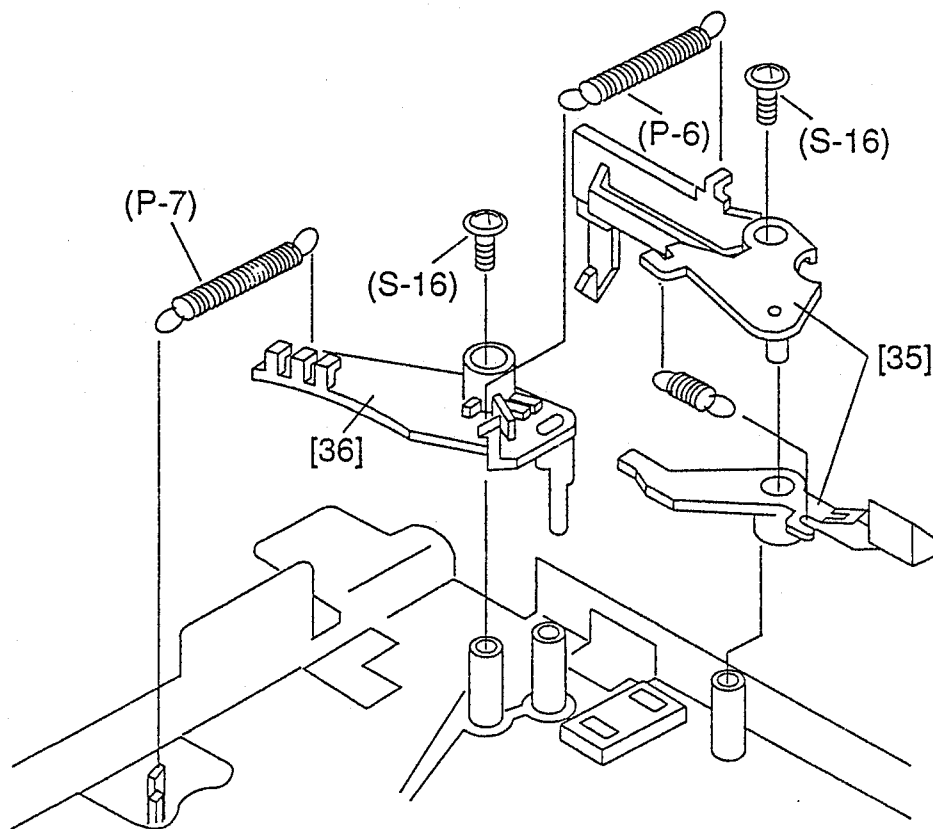


Fig. DM19

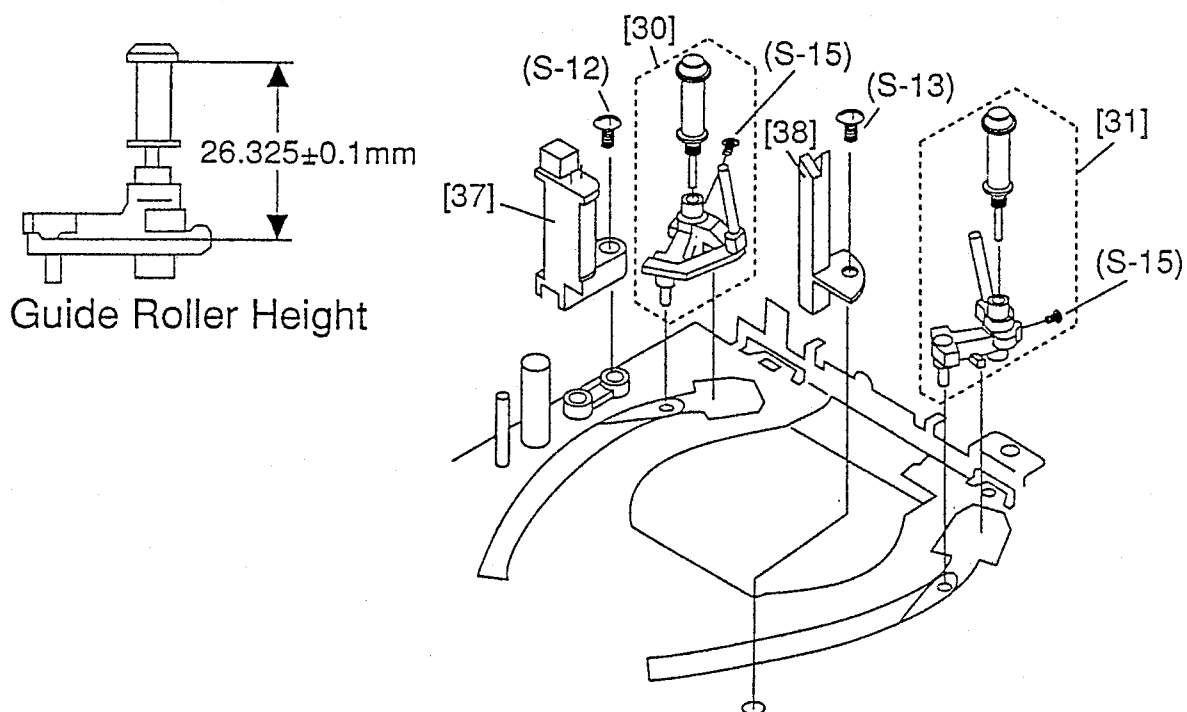


Fig. DM20

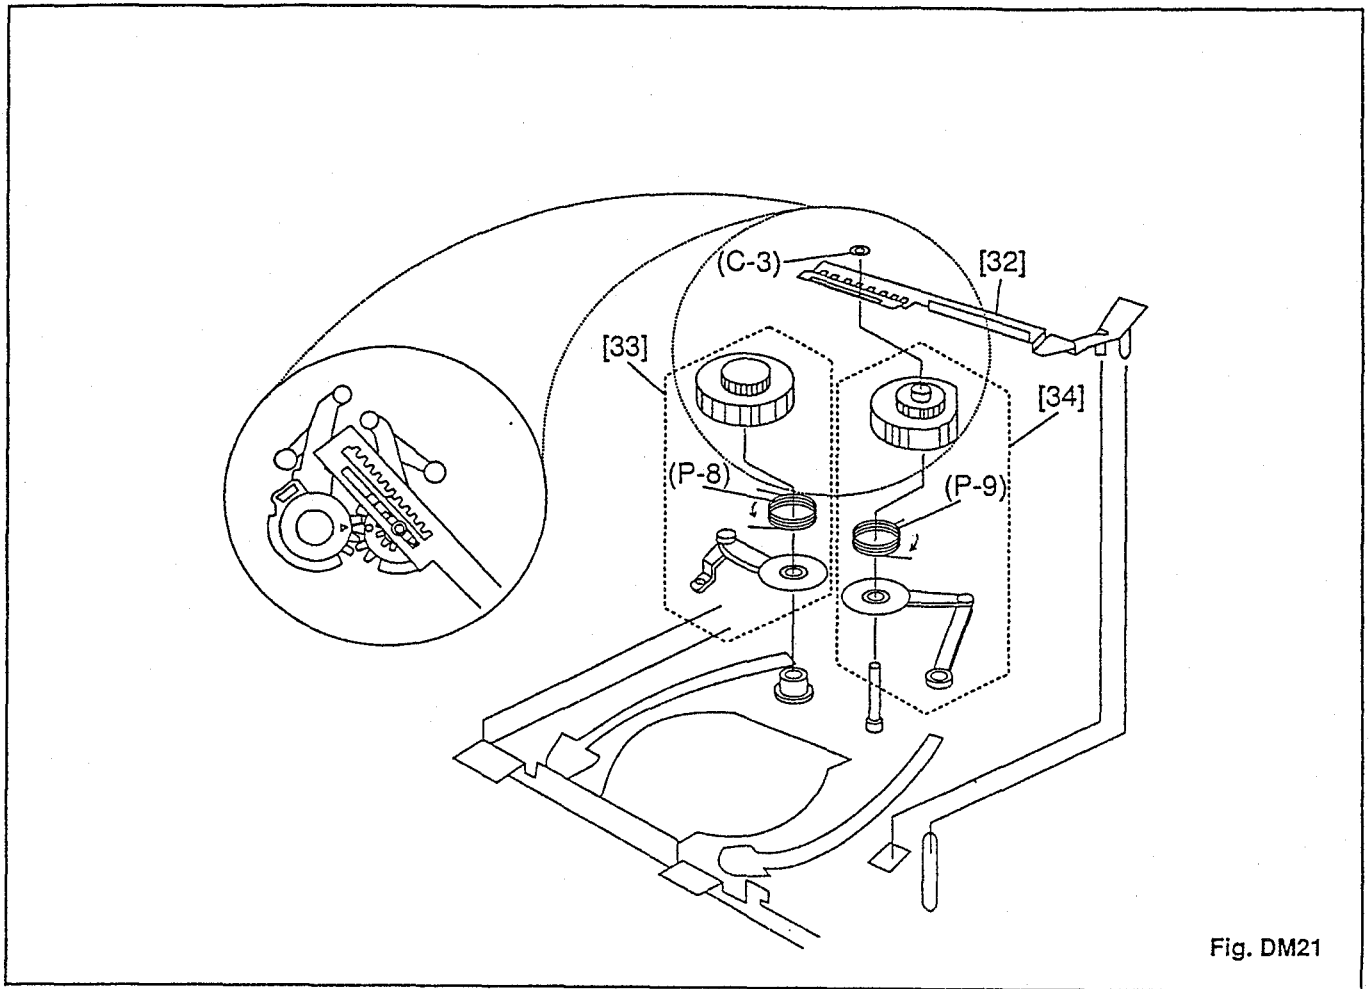


Fig. DM21

Cassette Up Unit

This procedure starts with the condition that the Cassette Up Unit has been removed from chassis. When reassembling, perform the step(s) in the reverse order. (For removal of Casset Up Unit, see Fig.DM5.)

STEP /LOC No.	START- ING No.	PART	REMOVAL		INSTALLATION
			Fig. No.	REMOVE*UNHOOK/ UNLOCK/RELEASE/ UNPLUG/DESOLDER	ADJUSTMENT CONDITION
[1]	[1]	Reinforcement	DM1	2(S-1)	
[2]	[1]	Frame L	DM1	2(S-2)	
[3]	[1]	Stand B	DM1	(S-3)	
[4]	[1]	Stand F	DM1	(S-4)	
[5]	[1]	Bracket Gear	DM2	2(S-5)	Through the hole
[6]	[1]	Pulley Reduction	DM2	(C-1)	
[7]	[1]	Cam (HL Control)	DM2	(C-2)	Through the hole
[8]	[8]	Lever Syncro B	DM3	(L-1)(P-1)(P-2)(C-3)	
[9]	[9]	Lever Opener	DM3	(L-2)	
[10]	[10]	Lever Syncro F	DM4	(L-3)(P-3)(P-4)(C-4)	
①	②	③	④	⑤	⑥

① : Order of steps in Procedure

When reassembling, perform the step(s) in the reverse order.

These number are also used as the identification(Location) No. of parts in Figures.

② : The STEP/LOC. No. to start with before coming to disassemble the desired part.



③ : Parts to be removed or installed



④ : Fig. No Showing Procedure or Part Location

⑤ : Identification of part to be removed, unhooked, unlocked, released, unplugged, unclamped or unsoldered
P=Spring W=Washer C=Cut Washer S=Screw *=Unhook, Unlock Release Unplug or Desolder
2(C-2) = 2 Cut Washer (C-2)

⑥ : Adjustment information for installation (+)



Refer to Deck Exploded Views for lubrication information.

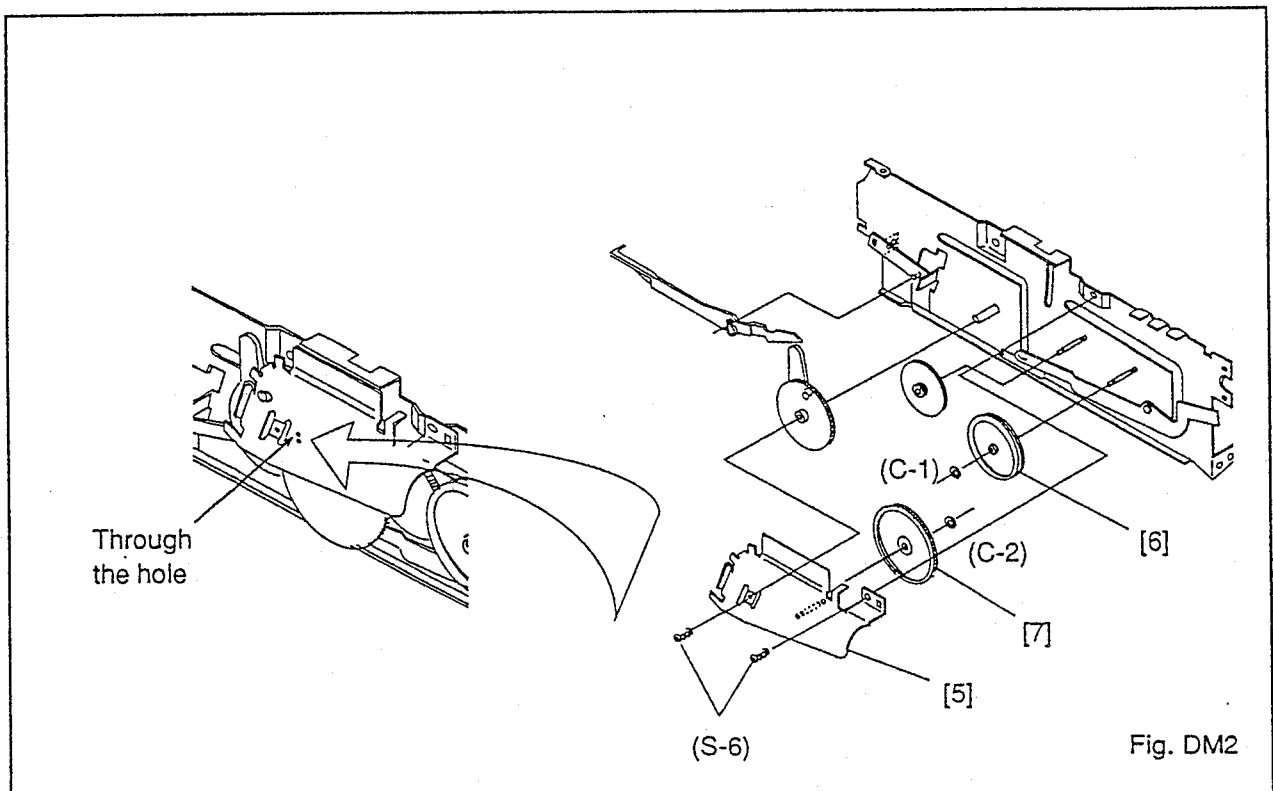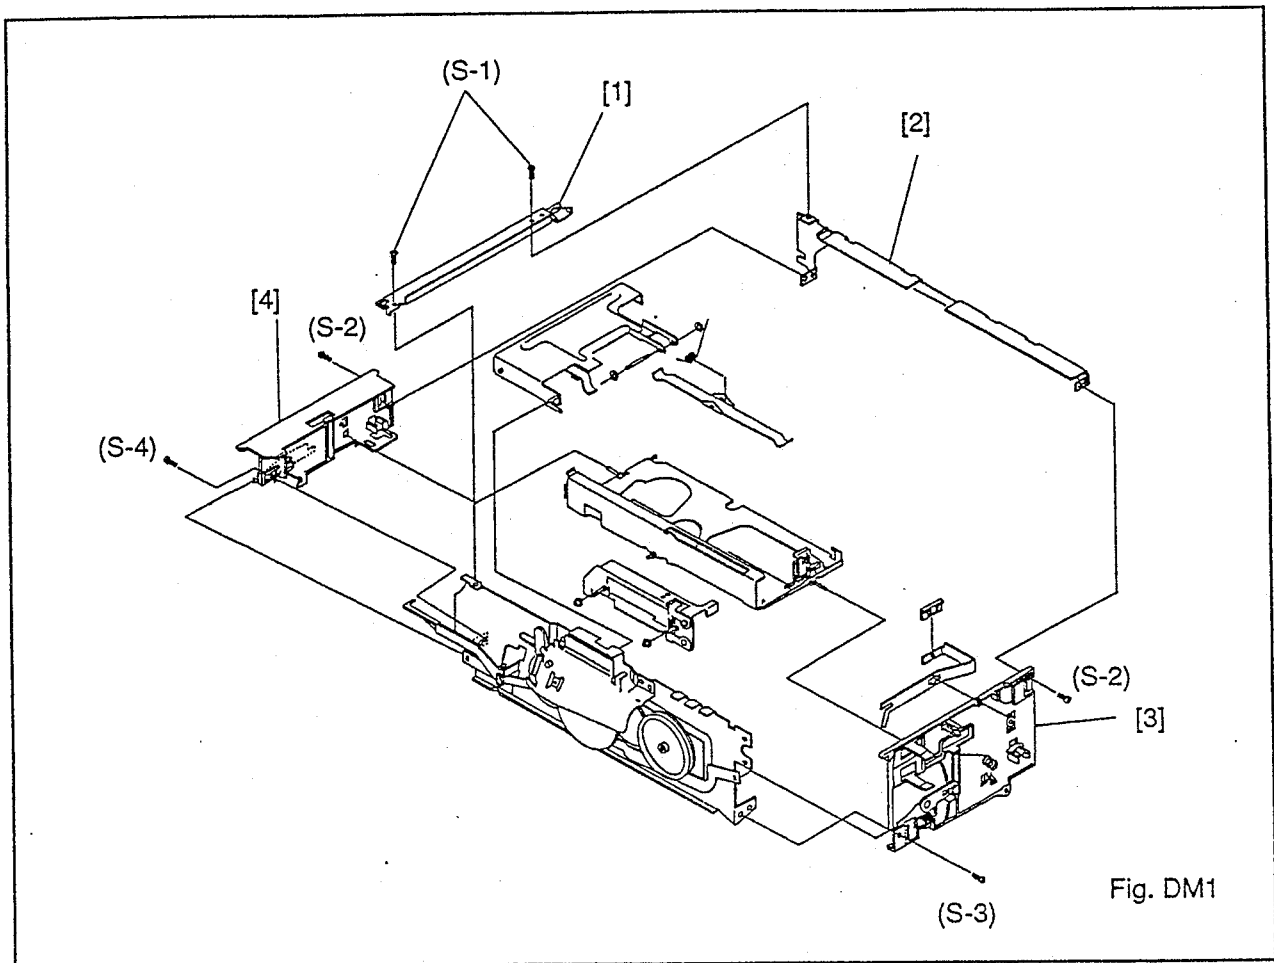

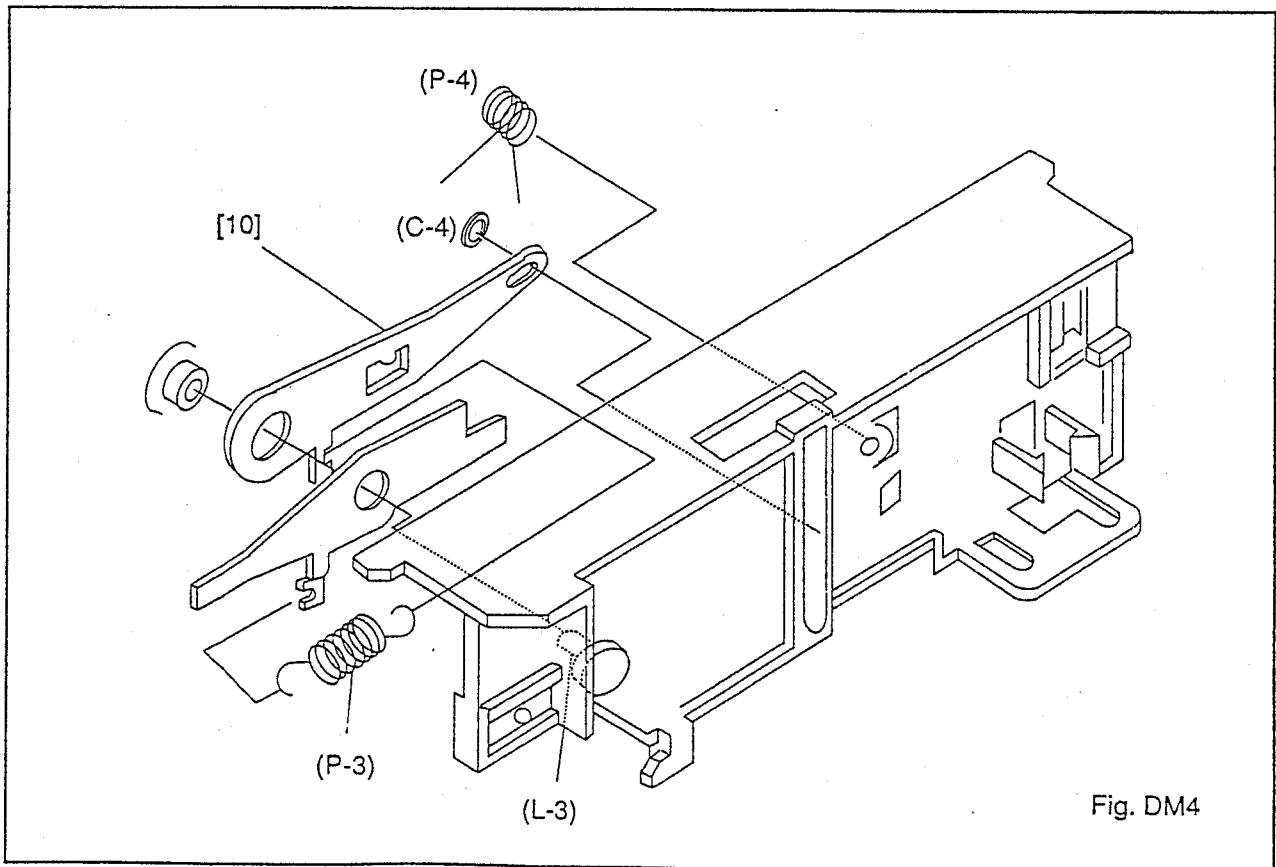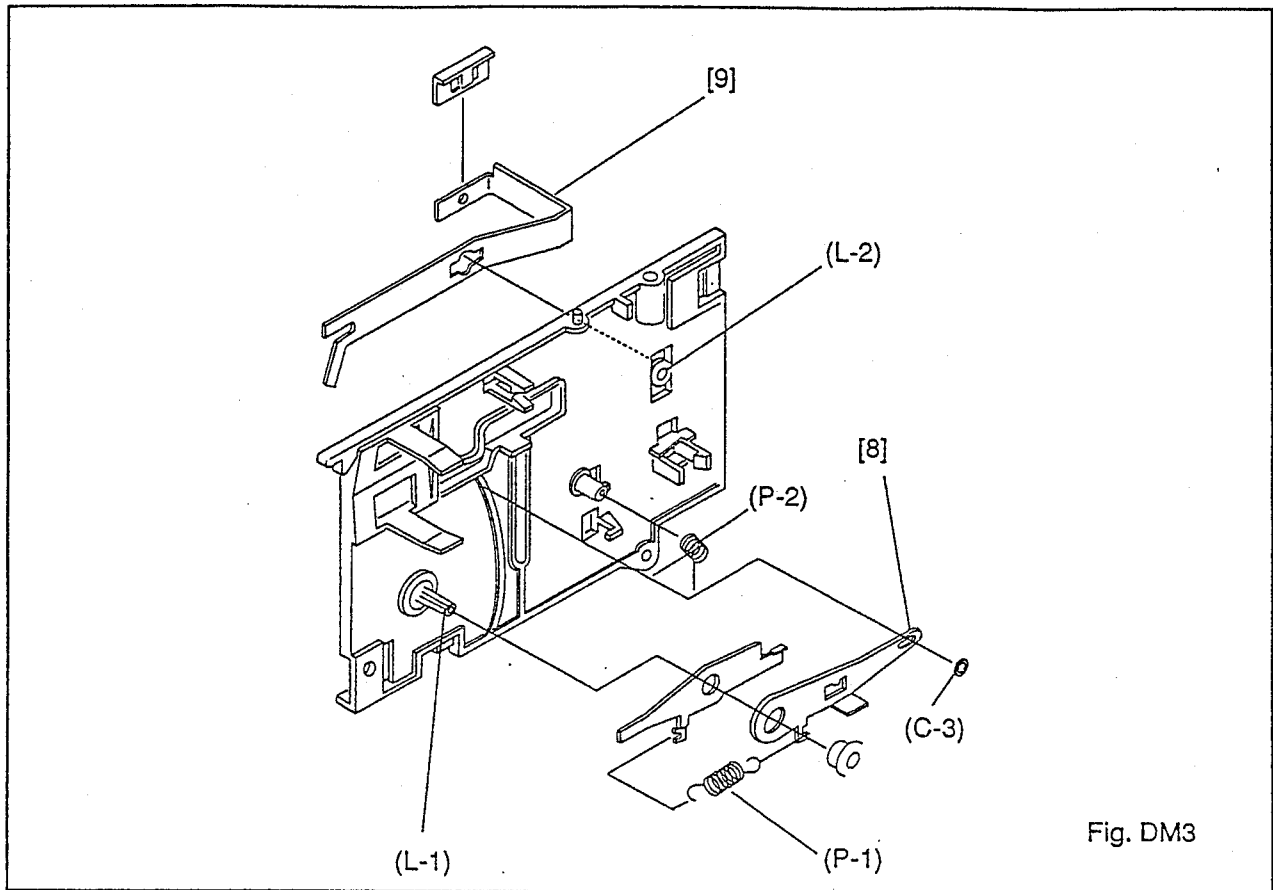

SCHEMATIC DIAGRAMS AND CIRCUIT BOARD


JOINT/MODE SW/ACE HEAD SCHEMATIC DIAGRAM

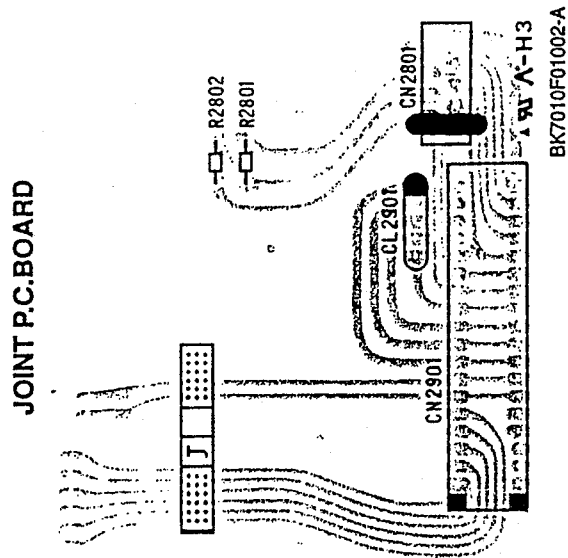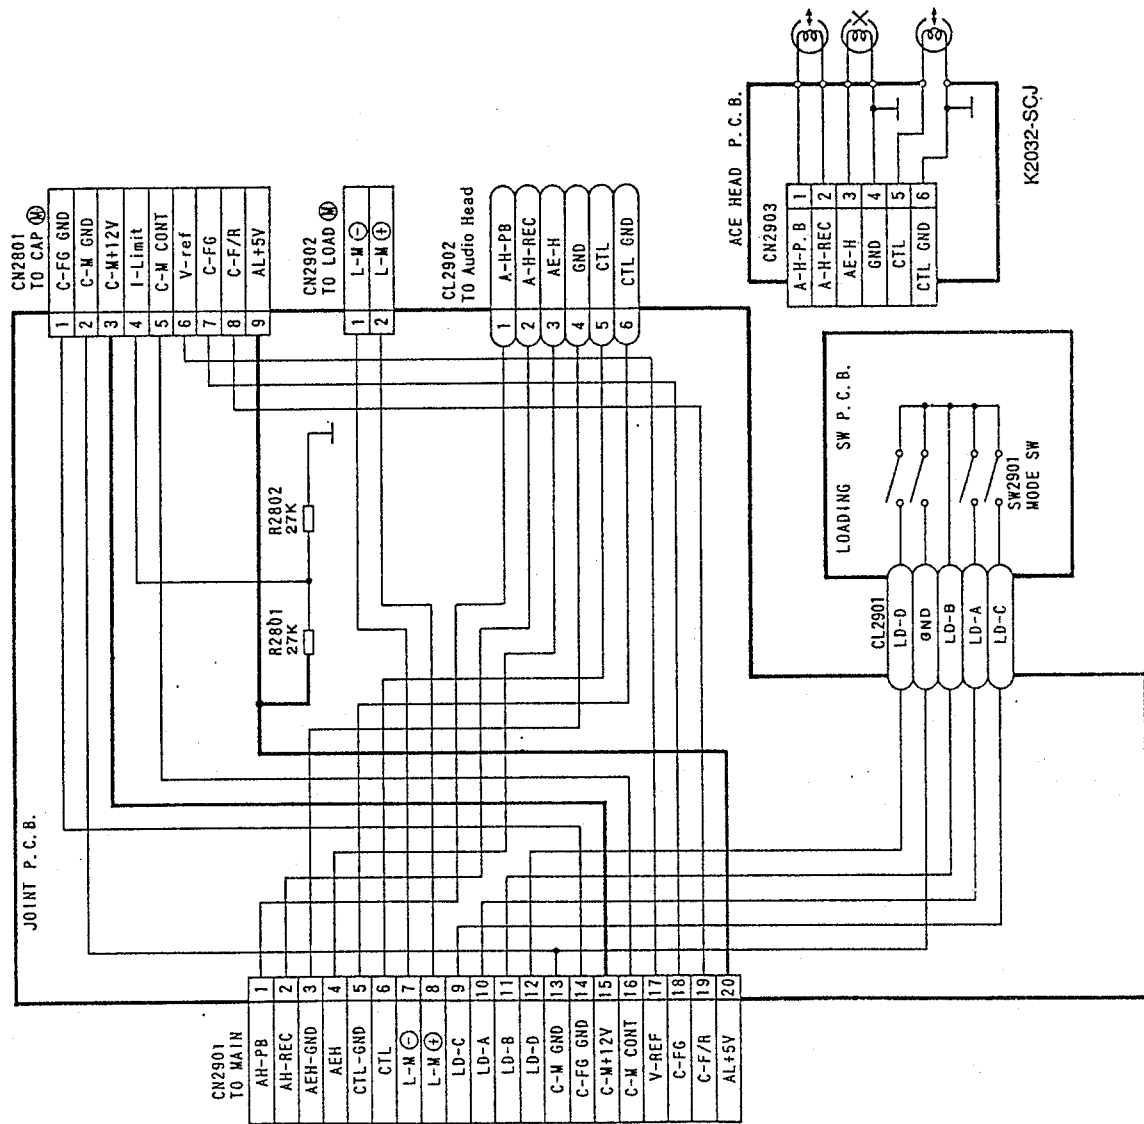

MODE SW P.C.B.



ACE HEAD P.C.B.

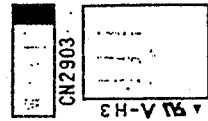

When disassembling the Cassette Up Unit,
perform the procedures above.


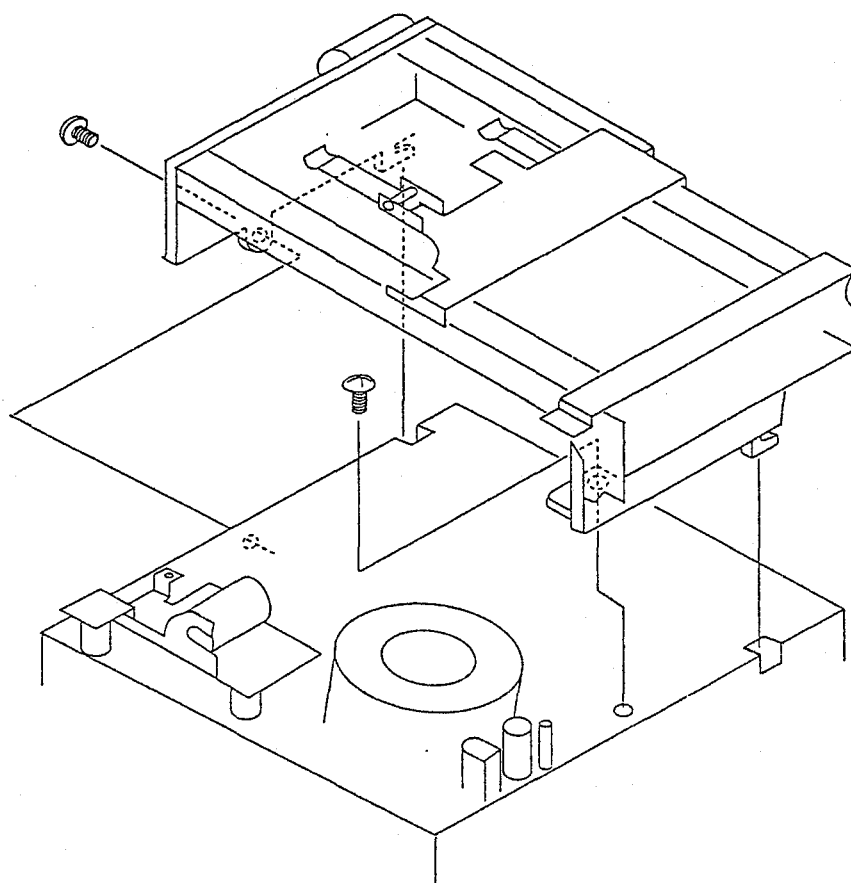


Fig. DM5

DECK EXPLODED VIEW


VIEW 1

Mark	Description	Part No.
*****	Sankoul	FG-84M
*****	Three Bond	TB-1901
*****	Molykote	EM-30LG
*****	Suraidasu Oil	#150
*****	Foil	GP-327

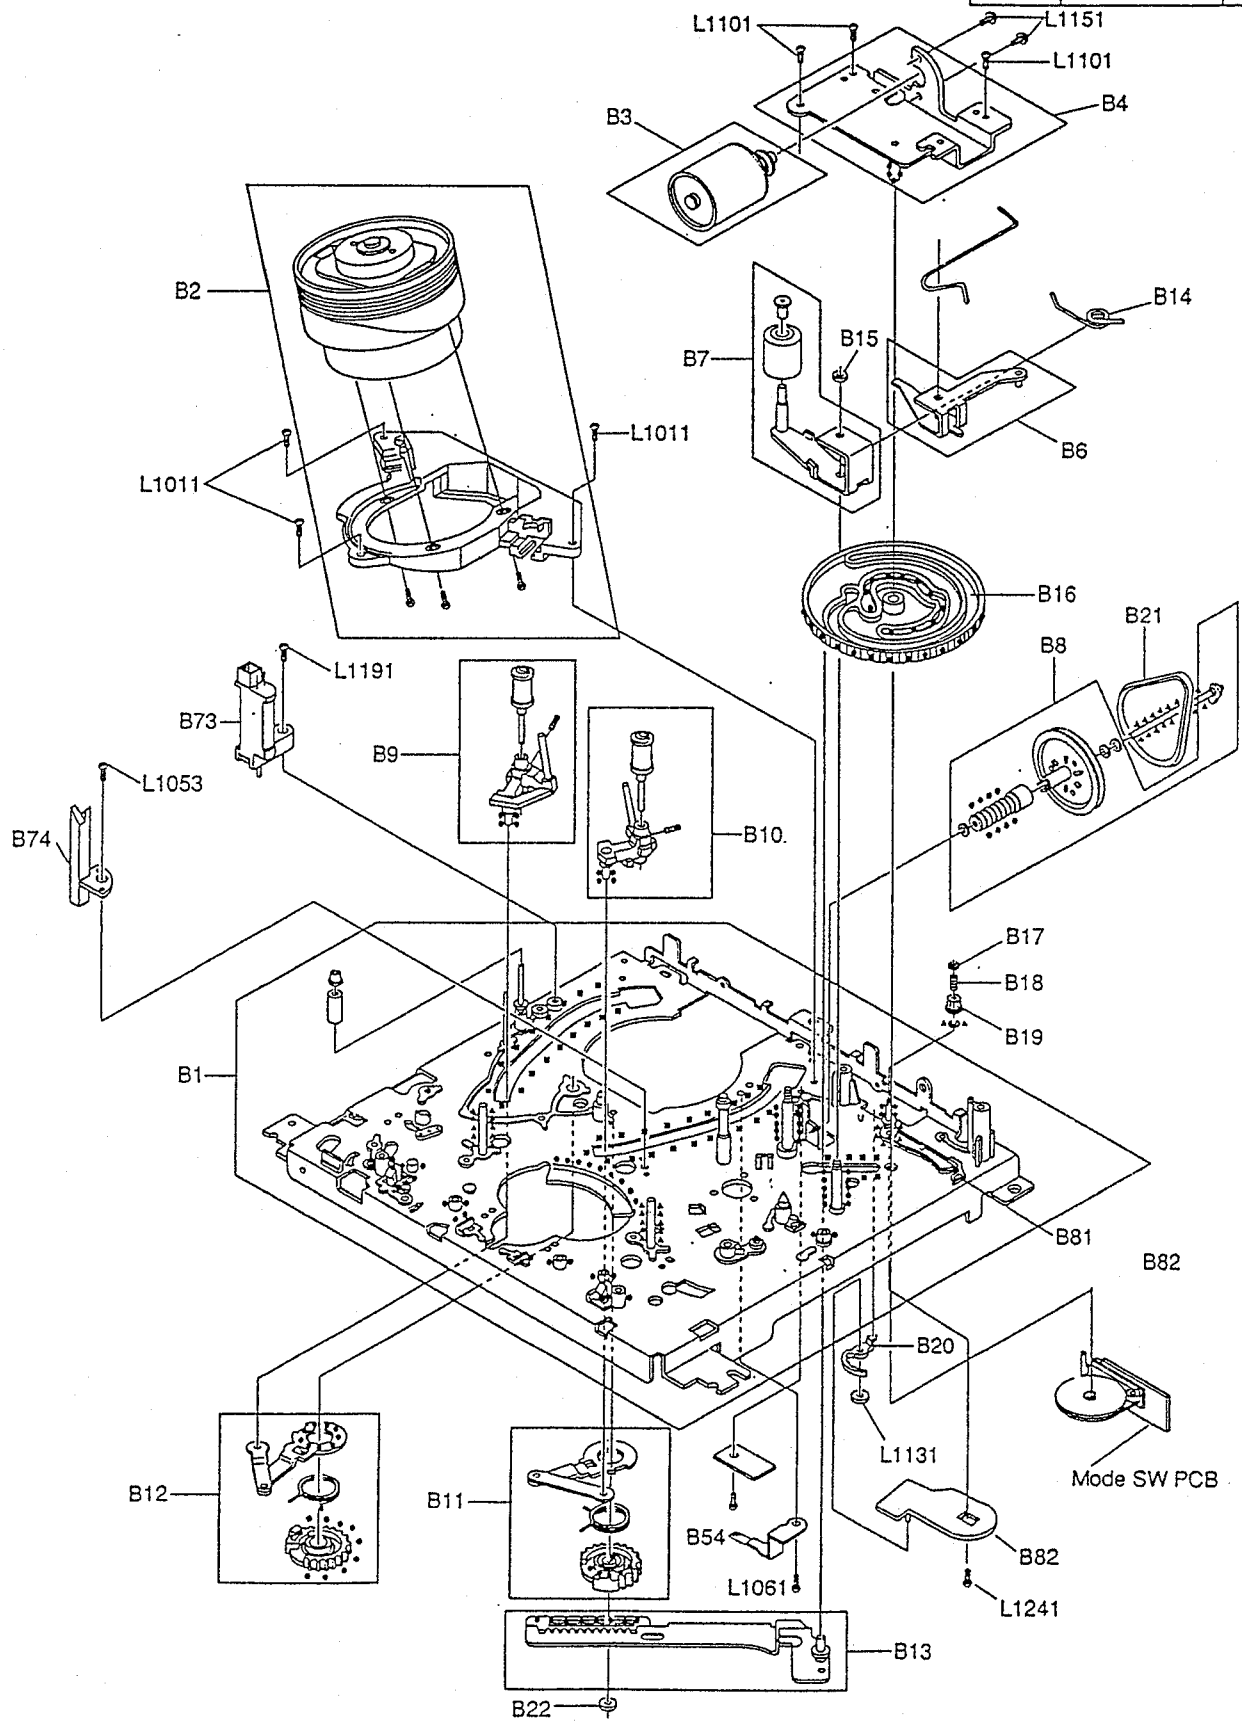

VIEW 2

Mark	Description	Part No.
*****	Sankoul	FG-84M
*****	Three Bond	TB-1901
*****	Molykote	EM-30LG
*****	Suraidasu Oil	#150
*****	Foil	GP-327

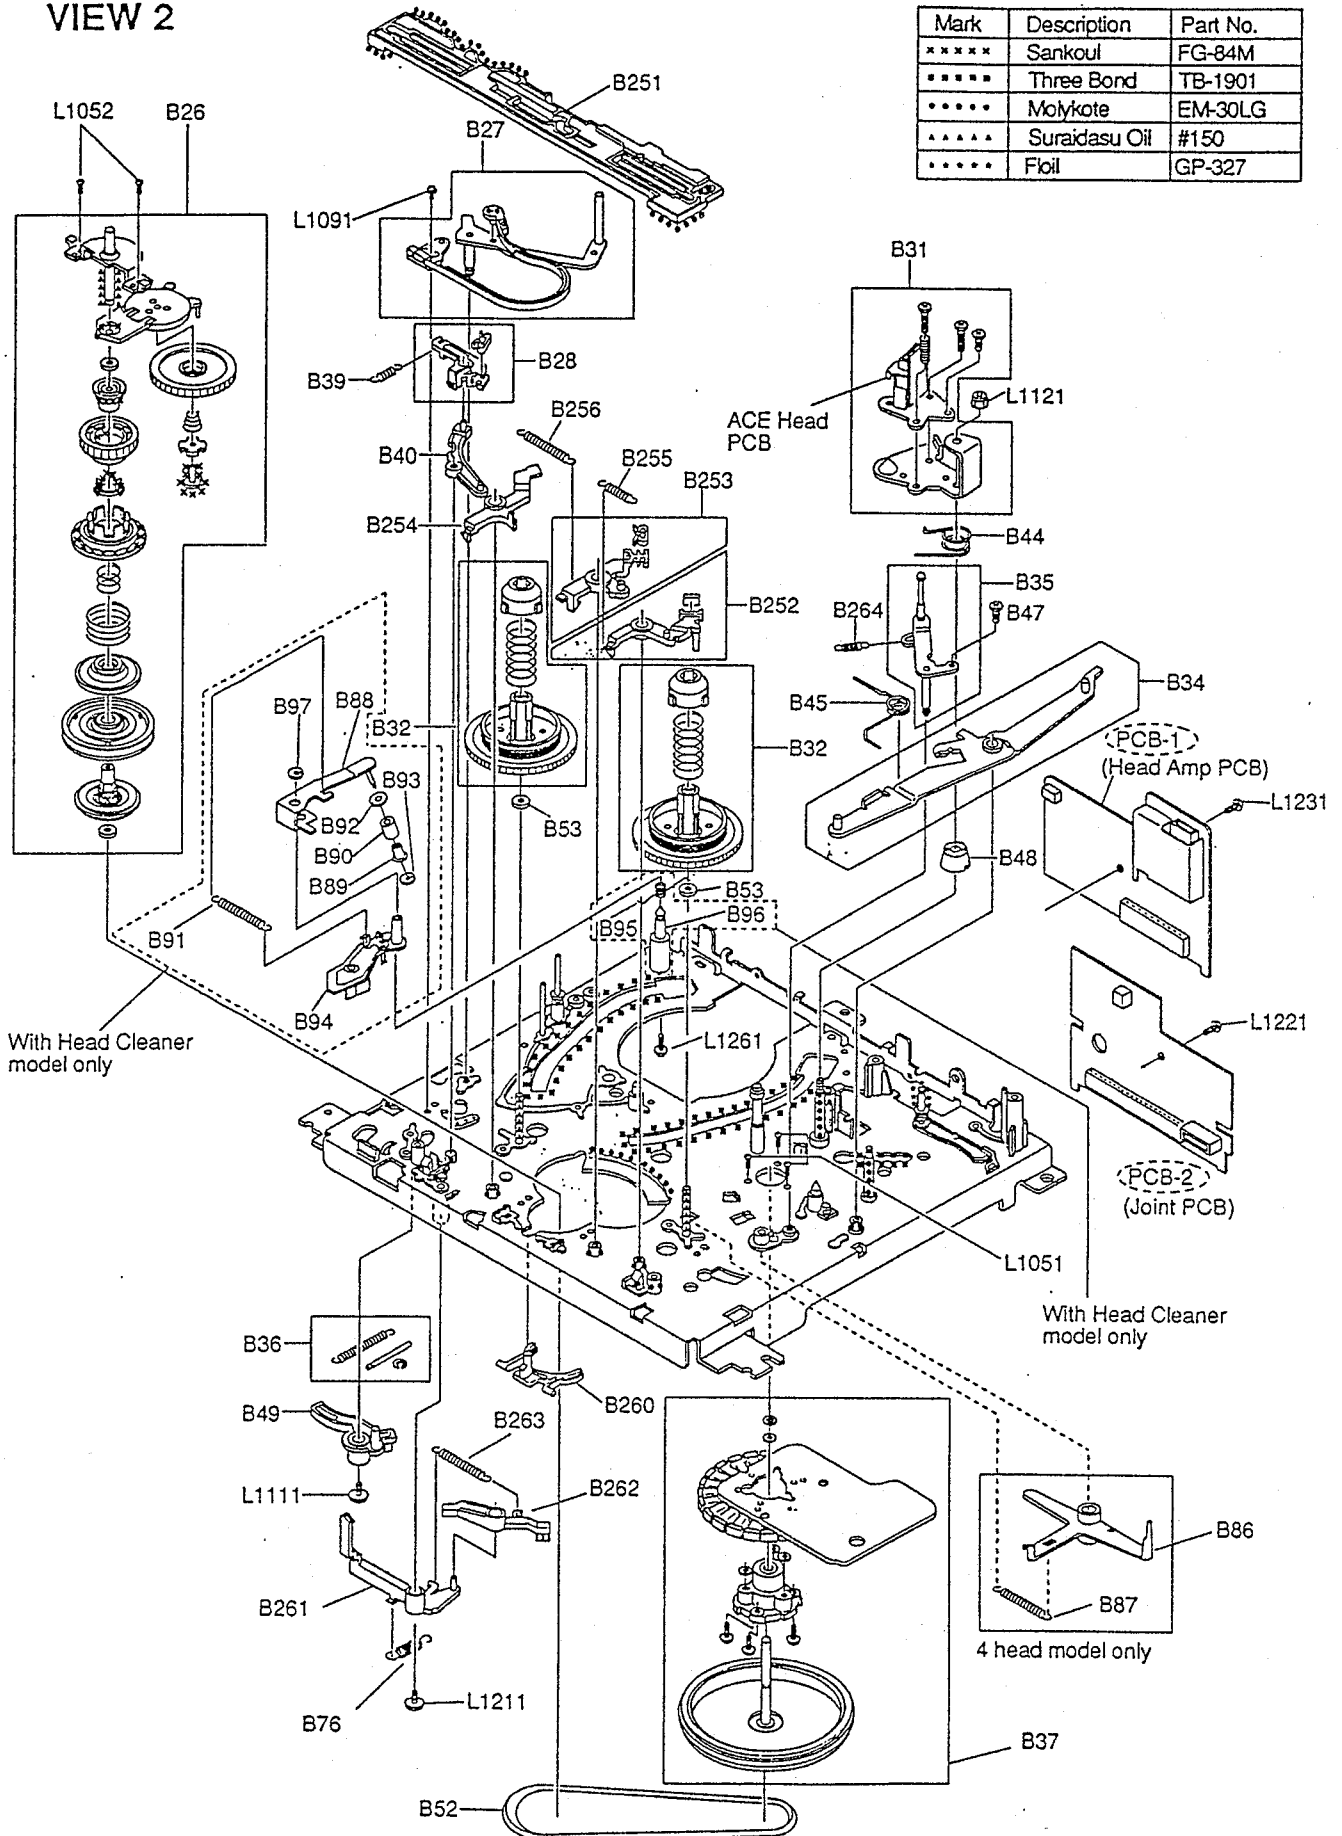

VIEW 3

Mark	Description	Part No.
*****	Sankoul	FG-84M
*****	Three Bond	TB-1901
*****	Molykote	EM-30LG
*****	Suradasu Oil	#150
*****	Foil	GP-327

